




THE DATASHEET OF VR30-2071




Connector Part Number	Stripping Tool Part Number	Crimp Tool Part Number	Hex Size Contact	Ferrule Size
VR30-2050	VX1301	DCC1113	1.72	5.41
VR30-2051	VX1301	DCC1113	1.72	5.41
VR30-2051-1603	VX1301	DCC1113	1.72	5.41
VR30-2051/1	VX1301	DCC1113	1.72	5.41
VR30-2071	VX1301	DCC0908	1.69	4.52


Dimensions shown. Take care not to nick the centre conductor or braid.

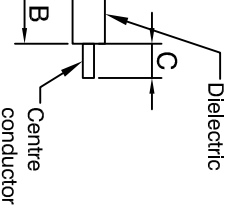

Sliding nut (thread first) onto the body.

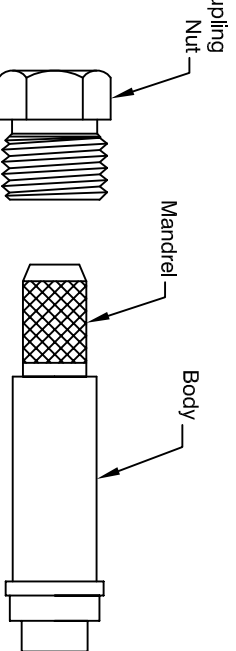

3) Flare out the braid slightly and push the body over the cable until it butts against the contact. Make sure the braid is on the outside of the mandrel. Slide the ferrule over the braid until the ferrule butts up against the body, being careful not to push the connector off. Crimp the ferrule using the correct tool for the connector.



CAD Issue	SN	2	01 Aug 01
First Issue	DJH	1	06 April 98
DESCRIPTION OF REVISION	APPVD	ISS	DATE

SCALE: Not To Scale	DRAWN BY: S Nash	DESCRIPTION: Stripping and Assembly Instructions for FME Crimp Jack	
DIMENSIONS: mm	CHECKED BY: P Couzens	DRAWING NUMBER: VAIR3101	
TOLERANCES:	APPROVED BY: R Dremanan	PAGE: 1 OF 1	
	DATE: 01 Aug 01		

THIS DRAWING MAY NOT BE REPRODUCED IN WHOLE OR IN PART WITHOUT OUR WRITTEN PERMISSION

Looking for pricing, stock, or lifecycle information?

Click below to explore more details on WIN SOURCE:

- [View VR30-2071 on WIN SOURCE](#)
- [Cinch Connectivity Solutions Information](#)

Optimize Your Supply Chain with WIN SOURCE Solutions

- ✓ Global Sourcing Solution
- ✓ Obsolete Management
- ✓ Cost Control Management
- ✓ Shortage Management
- ✓ Alternative Solution
- ✓ Excess Inventory Management