

Multicell battery monitoring and balancing IC



TQFP 10x10 64L
exposed pad down

Product status link

[L99BM114](#)

Product summary

Order code	Package	Packing
L99BM114-TR	TQFP64EP	Tape and reel

Product label



Features

- 4 to 14 series cells battery monitoring and balancing
- 64 V operating voltage
- Supports busbar connection without altering cell results
- Independent 16-bit voltage ADC for each channel with accuracy less than 2 mV
- 18-bit ADC current measurement with coulomb counter
- Fully synchronized current and voltage samples
- Intelligent diagnostic routine providing automatic failure validation. Redundant fault notification through both SPI Global Status Word (GSW) and the dedicated FAULT line
- 9 GPIOs, with up to 7 analog inputs for NTC sensing
- Internal passive balancing up to 200 mA. Possibility to drive external balancing transistors
- 2.66 Mbps isolated serial communication or up to 5 MHz SPI
- Two 5 V regulators supporting external load connection with 25 mA (VCOM) and 50 mA (VTREF) current capability
- Embedded NVM for customer parameters storage
- System safety ready
- 64-pin TQFP package

Application

- 48 V and high-voltage battery packs
- Backup energy storage systems and UPS
- E-bikes, e-scooters
- Portable and semi-portable equipment

Description

The **L99BM114** is a Li-ion battery monitoring and protecting chip for high-reliability industrial applications and energy storage systems. Up to 14 stacked battery cells can be monitored to meet the requirements of 48 V and higher voltage systems.

Each cell voltage is measured with high accuracy, as well as the current for the on-chip coulomb counting. The device can monitor up to 7 NTCs. The information is transmitted through SPI communication or isolated interface.

Up to 31 L99BM114 can be connected in a daisy chain and communicate with one host processor via the transformer or capacitive isolated interfaces, featuring high-speed, low EMI, long distance, and reliable data transmission. Passive balancing with programmable channel selection is offered in both normal and low power mode (silent balance).

The balancing can be terminated automatically based on internal timer interrupt. Nine GPIOs are integrated for external monitoring and control, up to 7 of them can be configured for pack temperature monitoring via NTC. The L99BM114 features a comprehensive set of fault detection and notification functions to meet system safety standard requirements.

1 Device introduction

The L99BM114 is intended for operation in an industrial environment and for battery storage system. The IC embeds all the features needed to perform battery management. A single device can monitor from 4 up to 14 cells. Several devices can be stacked in a vertical arrangement to monitor up to 31 battery packs.

The device can be supplied with the same battery it monitors and generates stable internal references by means of a voltage regulator and a bootstrap.

L99BM114 main activity consists in monitoring cells and battery pack status through stack voltage measurement, cell voltage measurement, temperature measurement and coulomb counting. Measurement and diagnostic tasks can be executed either on demand or periodically, with a programmable cycle interval. Measurement data is available for an external microcontroller to perform charge balancing and to compute the State Of Health (SOH) and State Of Charge (SOC).

Passive cell balancing can be performed either via internal discharge path (up to 200 mA) or via external MOSFETs. The controller can either manually control the balancing drivers or start a balancing task with a fixed duration.

Thanks to the GPIOs, the device also offers the possibility to operate a distributed cell temperature sensing via external NTCs resistances up to 7 channels. In general, the GPIOs can be used to perform both absolute and differential voltage conversions. They can also be configured as digital inputs/outputs.

The external microcontroller can communicate with L99BM114 via SPI protocol, depending on the status of one pin at the startup (SPIEN pin). The physical layer can be either a classical 4-wire based SPI or a 2-wire, transformer/capacitive based, isolated interface through a dedicated isolated transceiver device (L99BM1T). In the case of multiple L99BM114 vertically arrayed, each L99BM114 communicates with the others by means of a vertical isolated interface. The microcontroller can either address a single device of the chain or send broadcast commands. L99BM114 has been engineered to perform automatic validation of any failure involving the cells or the whole battery pack. The device can detect the loss of the connection to a cell or GPIO terminal. Moreover, it features an hardware Self Check (HWSC) that verifies the correct functionality of the internal analog comparators and the ADCs.

The current sensing interface used for coulomb counting is also capable of detecting failures such as open wires and overcurrent in sleep mode. Conversions for coulomb counting are validated by built in self-test of the precision and detecting any counter overflow. The cell balancing terminals can detect any short/open fault and the internal powerMOS are protected against overcurrent.

The stack voltage is monitored for OV/UV by three parallel and independent systems. They have been engineered to protect the IC against AMR violation, to detect any overvoltage event and to provide the possibility to trim the OV/UV levels according to the application and the total number of cells.


Moreover, all internal voltage regulators are equipped with UV/OV detection circuitry, that is also self-validated upon failure detection via HWSC. Ground loss detection has also been implemented.

In case of overtemperature, thermal shutdown protects the IC. GPIOs are capable of detecting 'stuck at' faults when used as digital outputs.

Communication integrity is guaranteed by CRC check, while trimming and calibration data is continuously checked against corruption. Protocol errors such as incorrect address, inconsistent frame and communication interruption will be detected.

Critical failure modes will trigger the assertion of a dedicated FAULT line, propagating through the L99BM114 chain via external optocouplers and reaching the microcontroller. L99BM114 can guarantee the FAULT line integrity via a heartbeat routine.

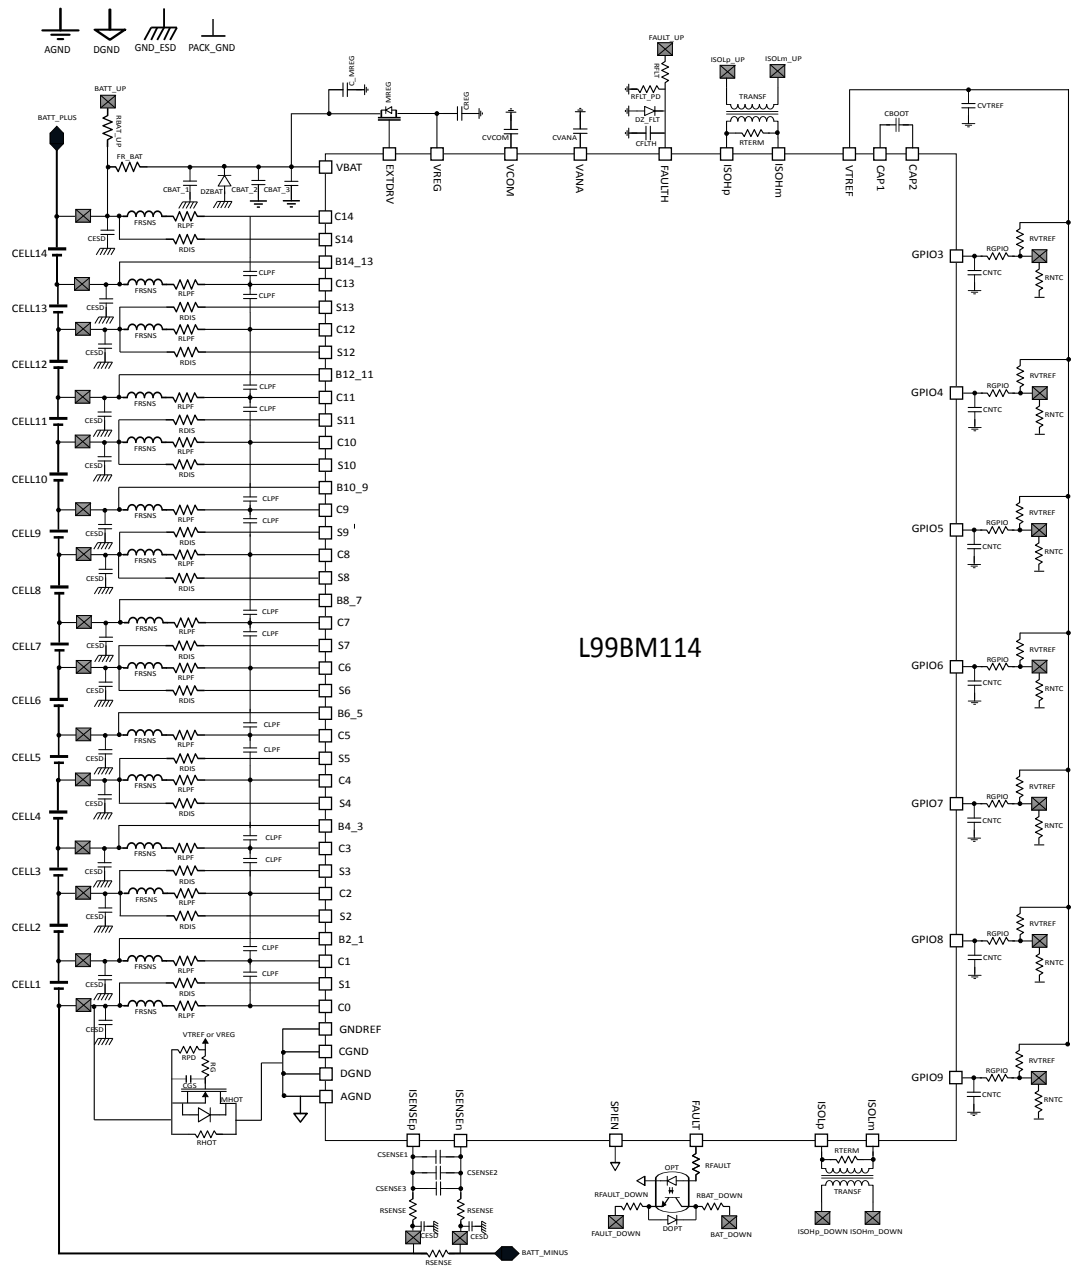Figure 1. Typical application




L99BM114

2 Block diagram and pin description

2.1 Block diagram

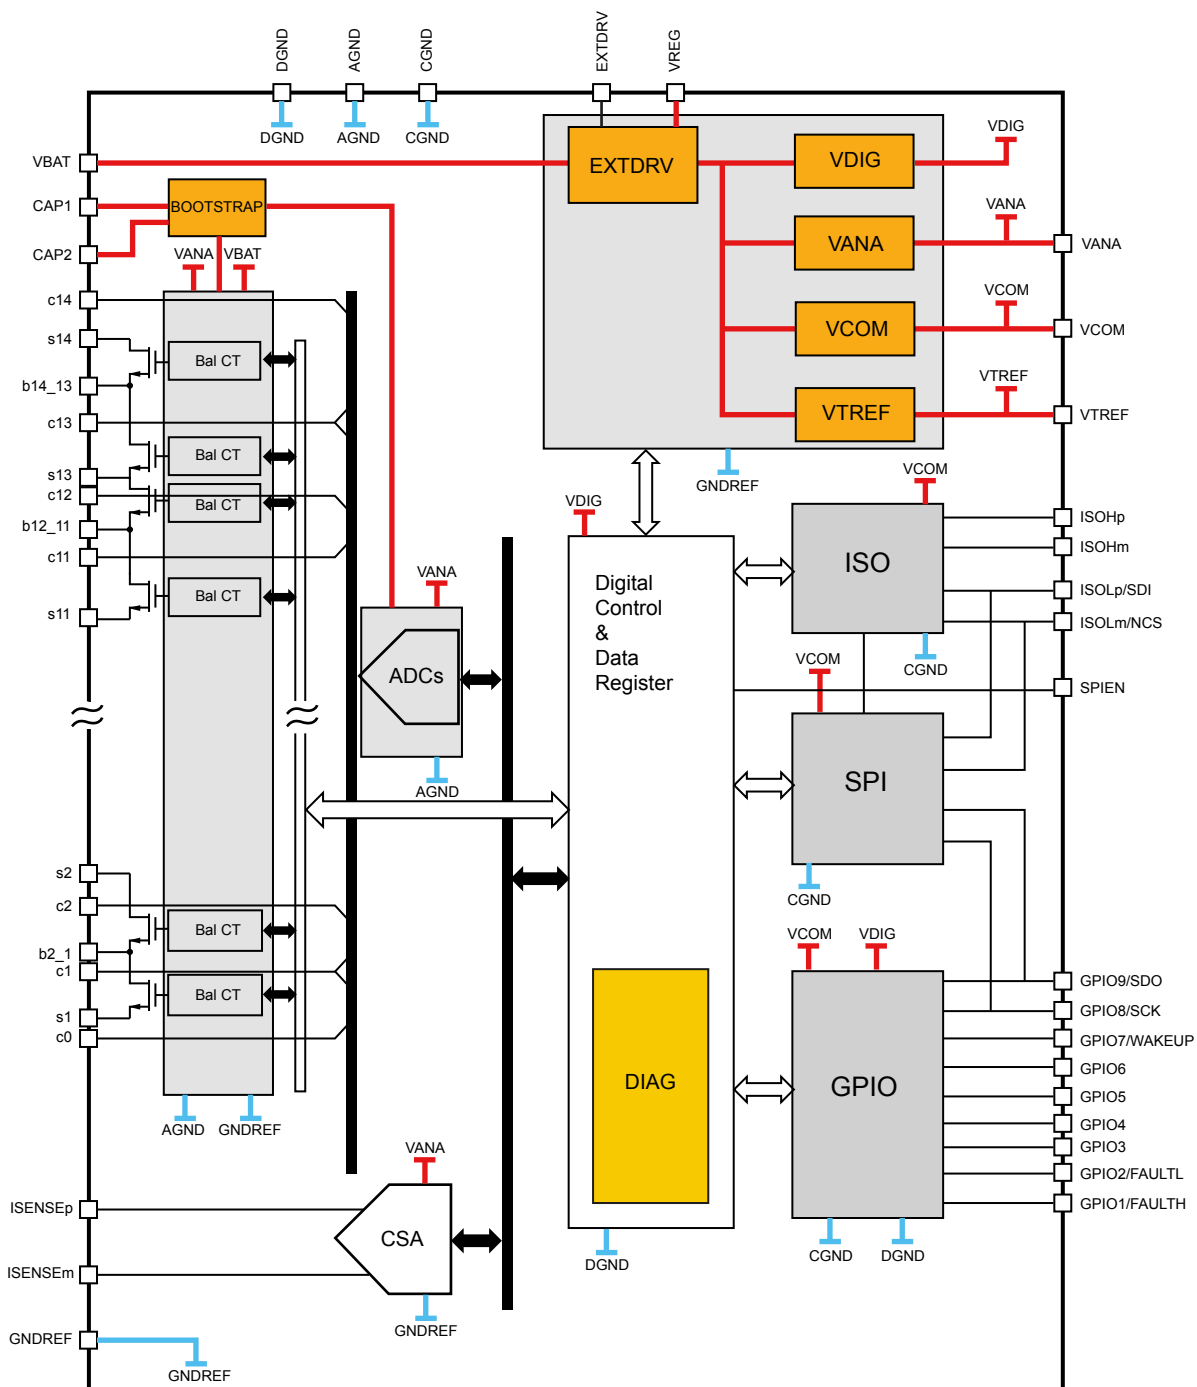Figure 2. Block diagram



GADG1010180719PS

2.2 Pin description

Figure 3. Pin connections (top view)

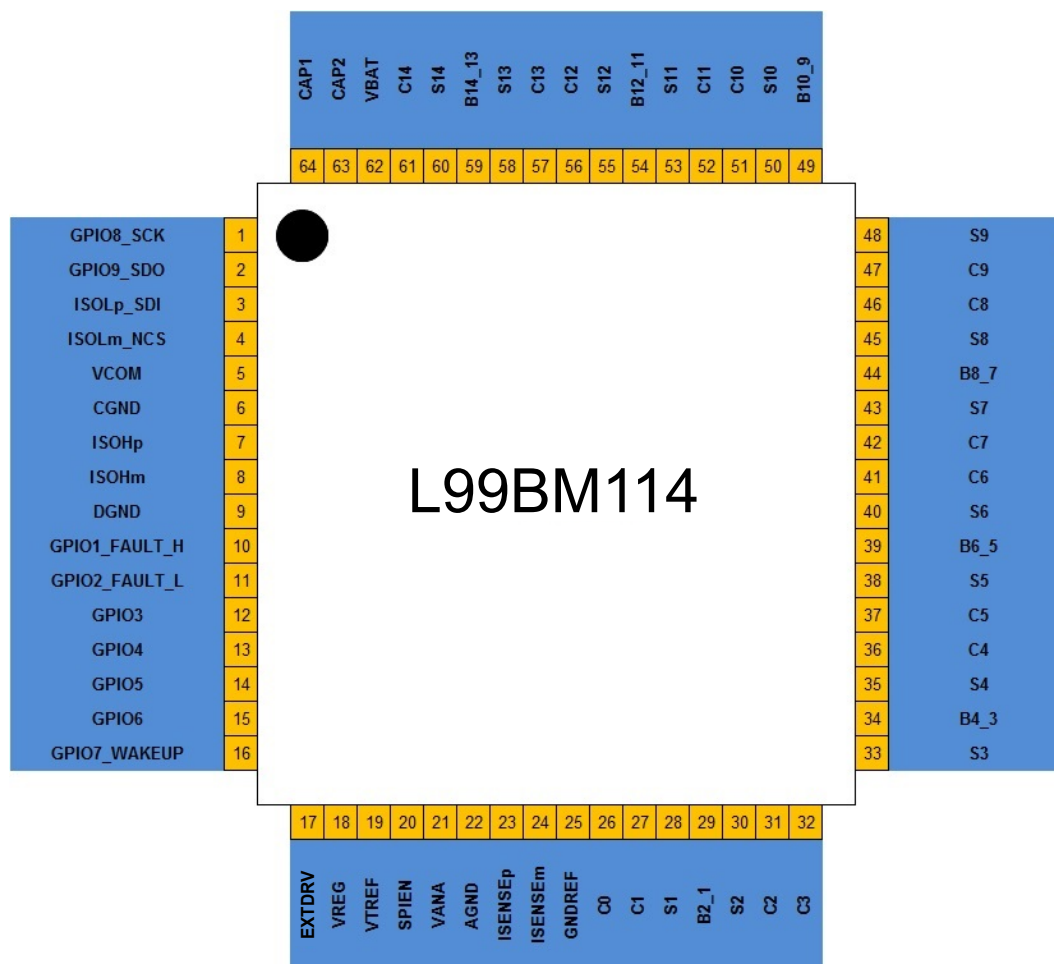


Table 1. Pin function

#	Pin name	Description	I/O type ⁽¹⁾
1	GPIO8_SCK	General-purpose I/O / Serial clock input (SPI). Its configuration is locked to Digital Input in case SPIEN = 1. Refer to the Section 4.9: General purpose I/O: GPIOs . Generally used to sense NTCs when not configured as SPI. Refer to the Section 6.7: NTC analog front end .	DO/DI/AI
2	GPIO9_SDO	General-purpose I/O / Serial data output (SPI). Its configuration is locked to Digital Output in case SPIEN = 1. Refer to the Section 4.9: General purpose I/O: GPIOs . Generally used to sense NTCs when not configured as SPI. Refer to the Section 6.7: NTC analog front end .	DO/DI/AI
3	ISOLp_SDI	Non-inverting, low-side isolated serial communication port (isolated SPI) / Serial data input (SPI). Its configuration is locked to Digital Input in case SPIEN = 1. Refer to the Section 4.2: Serial communication interface .	DI/AIO
4	ISOLm_NCS	Inverting, low-side isolated serial communication port (isolated SPI) / Active low, Chip-Select input (SPI). Its configuration is locked to Digital Input in case SPIEN = 1. Refer to the Section 4.2: Serial communication interface .	DI/AIO
5	VCOM	Regulated power supply used for communication interfaces. Connect a tank capacitor as indicated in the Table 73 . Can be used to supply external loads with a maximum I_{VCOM_ext} current budget.	P
6	CGND	Communication ground. Connect to DGND on top.	G

#	Pin name	Description	I/O type ⁽¹⁾
7	ISOHp	Non-inverting, high-side isolated serial communication port. Refer to the Section 4.2.3: Isolated Serial Peripheral Interface .	AIO
8	ISOHm	Inverting, high-side isolated serial communication port. Refer to the Section 4.2.3: Isolated Serial Peripheral Interface .	AIO
9	DGND	Digital ground. Connect to AGND on top.	G
10	GPIO1_FAULTH	Digital input used for FAULTH receiver. Refer to the Section 4.3: FAULT line .	DI
11	GPIO2_FAULTL	Digital output used for FAULTL transmitter. Refer to the Section 4.3: FAULT line .	DO
12	GPIO3	General-purpose I/O. Refer to the Section 4.9: General purpose I/O: GPIOs . Generally used to sense NTCs. Refer to the Section 6.7: NTC analog front end .	AI/DI/DO
13	GPIO4		AI/DI/DO
14	GPIO5		AI/DI/DO
15	GPIO6		AI/DI/DO
16	GPIO7_WAKEUP	General-purpose I/O. Refer to the Section 4.9: General purpose I/O: GPIOs . Generally used to sense NTCs. Refer to the Section 6.7: NTC analog front end . Can be configured to act as wake up input. Refer to the Section 4.9.4: GPIO7: wake up feature .	AI/DI/DO
17	EXTDRV	Internal voltage regulator controller output. Connect to the gate of an external NMOS.	AO
18	VREG	Regulated analog power supply for core circuitry. Connect a tank capacitor as indicated in the Table 73 . It is disabled in low power modes (Silent Balancing, Sleep and during the OFF phase of Cyclic Wakeup). VCOM, VANA and VTREF regulators are fed by pre-regulated VREG.	P
19	VTREF	Buffered, precise analog reference voltage for driving multiple NTCs. Connect a tank capacitor as indicated in the Table 73 . It has a maximum IVTREF_ext current budget.	P
20	SPIEN	At first power up, after VCOM is out of undervoltage, this pin is sampled to determine port L configuration. Connect to VCOM to configure SPI mode. Connect to AGND to select isolated SPI communication. If left floating, this pin has a 100 kΩ internal Pull down, forcing isolated SPI mode.	DI
21	VANA	Precise ADC analog supply. Connect a tank capacitor as indicated in the Table 73 .	P
22	AGND	Analog/ESD ground. Ground supply of chip.	G
23	ISENSEp	Non-inverting input of current measurement. Refer to the Table 73 .	AI
24	ISENSEm	Inverting input of current measurement. Refer to the Table 73 .	AI
25	GNDREF	Analog/reference GND. Connect to AGND on top.	G
26	C0	Connect to the negative terminal of 1st cell.	AI
27	C1	Cell voltage input. Connect to the positive terminal of 1st cell.	AI
28	S1	Cell balancing FET control output for 1st cell.	AO
29	B2_1	Common terminal for cell balancing S1 and S2.	AO
30	S2	Cell balancing FET control output for 2nd cell.	AO
31	C2	Cell voltage input. Connect to the positive terminal of 2nd cell.	AI
32	C3	Cell voltage input. Connect to the positive terminal of 3rd cell.	AI
33	S3	Cell balancing FET control output for 3rd cell.	AO
34	B4_3	Common terminal for cell balancing S3 and S4.	AO
35	S4	Cell balancing FET control output for 4th cell.	AO
36	C4	Cell voltage input. Connect to the positive terminal of 4th cell.	AI
37	C5	Cell voltage input. Connect to the positive terminal of 5th cell.	AI
38	S5	Cell balancing FET control output for 5th cell.	AO
39	B6_5	Common terminal for cell balancing S5 and S6.	AO

#	Pin name	Description	I/O type ⁽¹⁾
40	S6	Cell balancing FET control output for 6th cell.	AO
41	C6	Cell voltage input. Connect to the positive terminal of 6th cell.	AI
42	C7	Cell voltage input. Connect to the positive terminal of 7th cell.	AI
43	S7	Cell balancing FET control output for 7th cell.	AO
44	B8_7	Common terminal for cell balancing S7 and S8.	AO
45	S8	Cell balancing FET control output for 8th cell.	AO
46	C8	Cell voltage input. Connect to the positive terminal of 8th cell.	AI
47	C9	Cell voltage input. Connect to the positive terminal of 9th cell.	AI
48	S9	Cell balancing FET control output for 9th cell.	AO
49	B10_9	Common terminal for cell balancing S9 and S10.	AO
50	S10	Cell balancing FET control output for 10th cell.	AO
51	C10	Cell voltage input. Connect to the positive terminal of 10th cell.	AI
52	C11	Cell voltage input. Connect to the positive terminal of 11th cell.	AI
53	S11	Cell balancing FET control output for 11th cell.	AO
54	B12_11	Common terminal for cell balancing S11 and S12.	AO
55	S12	Cell balancing FET control output for 12th cell.	AO
56	C12	Cell voltage input. Connect to the positive terminal of 12th cell.	AI
57	C13	Cell voltage input. Connect to the positive terminal of 13th cell.	AI
58	S13	Cell balancing FET control output for 13th cell.	AO
59	B14_13	Common terminal for cell balancing S13 and S14.	AO
60	S14	Cell balancing FET control output for 14th cell.	AO
61	C14	Cell voltage input. Connect to the positive terminal of 14th cell.	AI
62	VBAT	Power supply of chip. This pin is also sensed by internal ADC through a voltage divider. Refer to the Table 73 .	P
63	CAP2	Pin2 external bootstrap capacitance. Refer to the Table 73 .	AI
64	CAP1	Pin1 external bootstrap capacitance. Refer to the Table 73 .	AI
-	GNDEP	Ground terminal, connect to AGND plane.	G

1. I/O type legend: AI = Analog Input; AO = Analog Output; AIO = Analog I/O; DI = Digital Input; DO = DigitalOutput; DIO = Digital I/O; P = Power; G = Ground; NC = Not Connect.

3 Product electrical ratings

3.1 Operating range

Within the operating range the part operates as specified and without parameter deviations. The device may not operate properly if maximum operating conditions are exceeded.

Once taken beyond the operative ratings and returned back within, the part will recover with no damage or degradation, unless the AMR are exceeded.

Additional supply voltage and temperature conditions are given separately at the beginning of each electrical specification table.

All voltages are related to the potential at substrate ground AGND, unless otherwise noted.

Table 2. Operating ranges

Symbol	Parameter	Test conditions	Min.	Typ.	Max.	Unit
VBAT	Global	Supply voltage	9.6	-	64	V
		Transient operation, 40 ms pulse, repetitive as per VDA320 E48-02 test.	64	-	70	V
VBAT, VREG, VCOM, VTREF		Supply voltage in case of transceiver use only (see the Transceiver mode)	4.6	5	5.4	V
C0	Global	Lower Cell Terminal Voltage	-0.3	-	0.3	V
B(n,n-1); Sn	Global	Cell Terminal Voltage	0	-	VBAT	V
C(n) for n=1 to 9	Global	Cell Terminal Voltage	0	-	VBAT – 4.5	V
C(n) for n=10 to 14	Global	Cell Terminal Voltage	3	-	VBAT + 0.3	V
C(n)-C(n-1) for n=1 to 14		Cell Terminal Differential Voltage	0	-	4.7	V
S(n+1)-B(n+1,n); B(n+1,n)-S(n) for n=1 to 13 odd		Cell Balance Terminal Differential Voltage	0	-	4.7	V
C(n)-S(n) for n=1 to 14		Cell Terminal Differential Voltage	0	-	4.7	V
VBAT – C(14)		Battery/high Terminal Differential Voltage	-0.3	-	61	V
ISOHP/M, ISOLP/M	Global		-0.3	-	VCOM	V
GPION	Local		-0.3	-	VCOM	V
SPIEN	Local		-0.3	-	VCOM	V
VTREF	Local		-	5	-	V
ISENSEP - ISENSEM	Local	CSA Input Differential Mode Range	-0.15	-	0.15	V
ISENSEP + ISENSEM / 2	Local	CSA Input Common Mode Range (referenced to GNDREF)	-0.225	-	0.225	V
VCOM	Local		-	5	-	V
VANA	Local	Info only	-	3.3	-	V
VREG	Local		-	6.5	-	V
EXTDRV	Local		VREG-0.3	-	10	V
CAP1	Local		0	-	VBAT	V
CAP2	Local		VREG	-	VBAT + VREG	V


3.1.1 Supply voltage ranges

The device operates up to 14 cells battery. The device can cover the voltage range of the main Lithium batteries, up to a maximum of 4.6 V per cell in operating conditions. The IC has been engineered to sustain transient OV events.

All operative ranges are listed in the picture below.

If the stand by V3V3 regulator goes in POR, the device is put in reset.

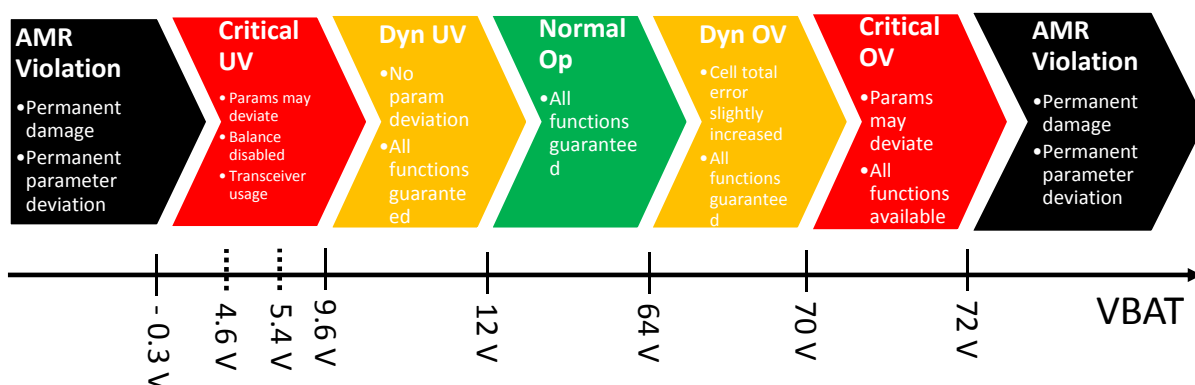Figure 4. Device operation in the VBAT supply voltage ranges



3.2 Absolute maximum ratings

Exceeding any Absolute Maximum Rating (AMR) may cause permanent damage to the integrated circuit.

All voltages are related to the potential at substrate ground AGND.

Table 3. Absolute Maximum Rating

Symbol	Parameter	Test conditions	Min.	Typ.	Max.	Unit
VBAT, C14			-0.3	-	72	V
C0			-0.3	-	0.3	V
C(n); B(n,n-1); Sn			-0.3	-	72	V
C(n)-C(n-1) for n=1 to 14		In this range, the device is not damaged, but leakage from pins may exceed I_{CELL_LEAK} (see the Table 39) if ADCs are enabled; it doesn't exceed if ADCs are disabled	-72	-	72	V
C(n)-C(n-1) for n=1 to 14		In this range, the leakage from pins I_{CELL_LEAK} is guaranteed (see the Section 6.8.5: Busbar connection) if ADCs are enabled or disabled	-6	-	6	V
S(n+1)-B(n+1,n) B(n+1,n)-S(n) for n=1 to 13 odd			-0.3	-	V_{BAL_CLAMP}	V
C(n)-S(n) for n=1 to 14		$V_{reg} < 2$ V	-72	-	72	V
VBAT-C14			-72	-	72	V
ISOHP/M, ISOLP/M			-0.3	-	6	V
GPIO _n			-0.3	-	5.5	V
SPIEN			-0.3	-	12	V
VTREF			-0.3	-	6	V

Symbol	Parameter	Test conditions	Min.	Typ.	Max.	Unit
ISENSEP/M			-0.3	-	4.5	V
VCOM			-0.3	-	6	V
VANA			-0.3	-	4.5	V
VREG			-0.3	-	12	V
EXTDRV			-0.3	-	12	V
CAP1			-0.3	-	VBAT + 0.3V	V
CAP2			VREG – 0.3V	-	VBAT + 7V	V
DGND, CGND			-0.3	-	+ 0.3	V
GNDREF shorted to AGND			-	-	-	-

Table 4. ESD protection

Item	Parameter	Test conditions	Min.	Typ.	Max.	Unit
All pins Except Isolated Communication Terminals and Global pins ⁽¹⁾		HBM ⁽²⁾	-2	-	2	kV
Isolated Communication Terminals ⁽¹⁾⁽²⁾ and Global pins versus all GND+EP connected			-4	-	4	kV
All pins except Corner Pins		CDM ⁽³⁾	-500	-	500	V
Corner Pins			-750	-	750	V
All pins		Latch up ⁽⁴⁾	-100	-	100	mA

1. Tested per AEC-Q100-002.
2. Isolated Communication Terminals: ISOHP, ISOHM, ISOLP_SDI, ISOLM_NCS.
3. Tested per AEC-Q100-011.
4. Tested per AEC-Q100-004, Class-2, Level-A.


Pins are all GND connected together.

3.3 Temperature ranges and thermal data

Table 5. Temperature ranges and thermal data

Symbol	Parameter	Test conditions	Min	Max	Unit
T _{amb}	Operating and testing temperature (ECU environment)		-40	105	°C
T _J	Junction temperature for all parameters		-40	125	°C
T _{stg}	Storage temperature		-65	150	°C
T _{ot}	Thermal shut-down temperature (junction)		175	200	°C
T _{ot}	Temperature ADC accuracy		-10	+10	°C
O _{Thys}	Thermal shut-down temperature hysteresis		5	15	°C
R _{Thj-amb}	Thermal resistance junction-to-ambient ⁽¹⁾		-	22	°C/W

1. In “2s2p”, the “s” suffix stands for “Signal” and the number before indicates how many PCB layers are dedicated to signal wires. The “p” suffix stands for “Power” and the number before indicates how many PCB layers are dedicated to power planes.

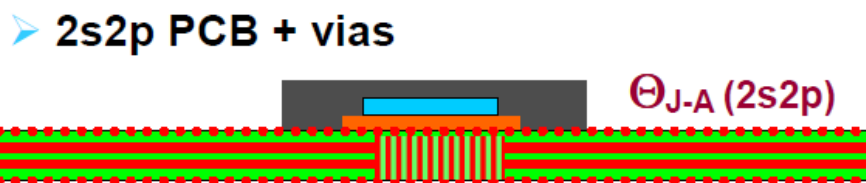Figure 5. Sketch of a 2s2p PCB with thermal vias


3.4 Power management

All parameters are tested and guaranteed in the following conditions, unless otherwise noted:

9.6 V < VBAT < 64 V; -40 °C < Tambient < 105 °C

Table 6. Power Management

Symbol	Parameter	Test conditions	Min.	Typ.	Max.	Unit
I _{BAT_NORM} , Total Supply Current in Normal Mode from VBAT pin		Normal state (refer to the Section 4.1: Device functional state); no load on VTREF; the chip performs continuously data transmission via isolated communication interfaces to higher and lower sides in a stack daisy chain. Application info: IBAT is not affected by communication. Current needed for COM interfaces is drawn out of VREG regulator.	1	-	2.5	mA
I _{BAT_NORM_ADC} , Total Supply Current in Normal Mode from VBAT pin		Normal state; No load on VTREF; no communication; The chip performs continuously sampling and converting.	5.5	-	9	mA
I _{REG_NORM_CSEN1} , Total Supply Current in Normal Mode from VREG MOS		Normal state; No load on VTREF; no communication; no ADC conversion; Curr sense. Enabled by coulombcounter_en = 1	-	-	21	mA
I _{REG_NORM_CSEN0} , Total Supply Current in Normal Mode from VREG MOS		Normal state; No load on VTREF; no communication; no ADC conversion; Curr sense Disabled by coulombcounter_en = 0	-	-	20	mA
I _{REG_NORM_ADC_CSEN1} , Total Supply Current in Normal Mode from VREG MOS		Normal state; No load on VTREF; no communication; The chip performs continuously sampling and converting. Curr sense Enabled by coulombcounter_en = 1	-	-	38	mA
I _{REG_NORM_ADC_CSEN0} , Total Supply Current in Normal Mode from VREG MOS		Normal state; No load on VTREF; no communication; The chip performs continuously sampling and converting. Curr sense Disabled by coulombcounter_en = 0	-	-	37	mA
I _{REG_NORM_COMM} , Additional supply current drawn from VREG for communication		Normal state; No load on VTREF; The chip performs continuously data transmission via isolated communication interfaces to higher and lower sides in a stack daisy chain. (measured with out_res_tx_isoh/I = 11, highest differential amplitude, highest consumption).	8	10.8	13	mA
I _{BAT_SLP} , Supply Current in Sleep Mode		Lowest power state; Both internal oscillator and external wakeup detection on.	10	-	50	μA
I _{BAT_SLP_BAL_CONF}		Supply Current in Silent Balance Mode (enabled only regulators necessary to bias balance preregulators, refer to the Section 4.1: Device functional state).	1.2	2	2.8	mA
I _{BAT_BALANCE}		Delta current when the balancing of all 14 cells are activated.	0.4	0.55	0.7	mA

Symbol	Parameter	Test conditions	Min.	Typ.	Max.	Unit
$I_{REG_GPIO_DIGOUT}$		Delta current from VREG pin needed to use 1 GPIO as digital output.	0.4	0.8	1.2	mA

Average DC current consumption in application can be estimated according to the following equations:

Estimation of the average DC current consumption in application


$$\begin{aligned}
 I_{AVG} &= \left(I_{BAT_NORM_ADC} + I_{REG_NORM_ADC} + \frac{N_{BAL}}{14} I_{BAT_BALANCE} + I_{REG_GPIO_DIGOUT} N_{DIGOUT} \right) \times W_{CONV} \\
 &+ \left(I_{BAT_NORM} + I_{REG_NORM} + \frac{N_{BAL}}{14} I_{BAT_BALANCE} + I_{REG_GPIO_DIGOUT} N_{DIGOUT} \right) \times W_{BAL_OL} + I_{LP} \times W_{LP} \\
 W_{CONV} &= \frac{2T_{CYCLE_ADC_SLEEP}}{T_{PERIOD}} + \frac{T_{CYCLE_ADC_000}}{N_{CYCLE_GPIO} T_{PERIOD}} + \frac{T_{GPIO_OPEN_SET} + T_{CYCLE_ADC_000}}{N_{CYCLE_GPIO_TERM} T_{PERIOD}} \\
 &+ \frac{2T_{CxOPEN_SET} + 2T_{CYCLE_ADC_000}}{N_{CYCLE_CELL_TERM} T_{PERIOD}} + \frac{3T_{CYCLE_ADC_000}}{N_{CYCLE_HWS} T_{PERIOD}} \\
 W_{BAL_OL} &= \frac{2T_{BAL_OL}}{N_{CYCLE_BAL_TERM} T_{CYCLE_SLEEP}} \\
 W_{LP} &= 1 - W_{CONV} - W_{BAL_OL} \\
 T_{PERIOD} &= \begin{cases} T_{CYCLE_SLEEP} & \text{if Cyclic Wakeup mode is activated} \\ T_{CYCLE} & \text{if operating in Normal mode} \end{cases} \\
 I_{REG_NORM_ADC} &= \begin{cases} I_{REG_NORM_ADCCSEN0} & \text{if CSA is disabled} \\ I_{REG_NORM_ADCCSEN1} & \text{if CSA is enabled} \end{cases} \\
 I_{REG_NORM} &= \begin{cases} I_{REG_NORM_MCSEN0} & \text{if CSA is disabled} \\ I_{REG_NORM_MCSEN1} & \text{if CSA is enabled} \end{cases} \\
 I_{SLEEP} &= \begin{cases} I_{BAT_SLP} & \text{if } N_{BAL} = 0 \\ I_{BAT_SLP_BAL_CONF} & \text{if } N_{BAL} > 0 \end{cases} \\
 I_{LP} &= \begin{cases} I_{SLEEP} + \frac{N_{BAL}}{14} \times I_{BAT_BALANCE} & \text{if Cyclic Wakeup mode is activated} \\ I_{BAT_NORM} + I_{REG_NORM} + \frac{N_{BAL}}{14} \times I_{BAT_BALANCE} + I_{REG_GPIO_DIGOUT} N_{DIGOUT} & \text{if operating in Normal mode} \end{cases}
 \end{aligned} \tag{1}$$

4 Functional description

In the following paragraphs, the functionalities of the device are listed and described in detail.

4.1 Device functional state

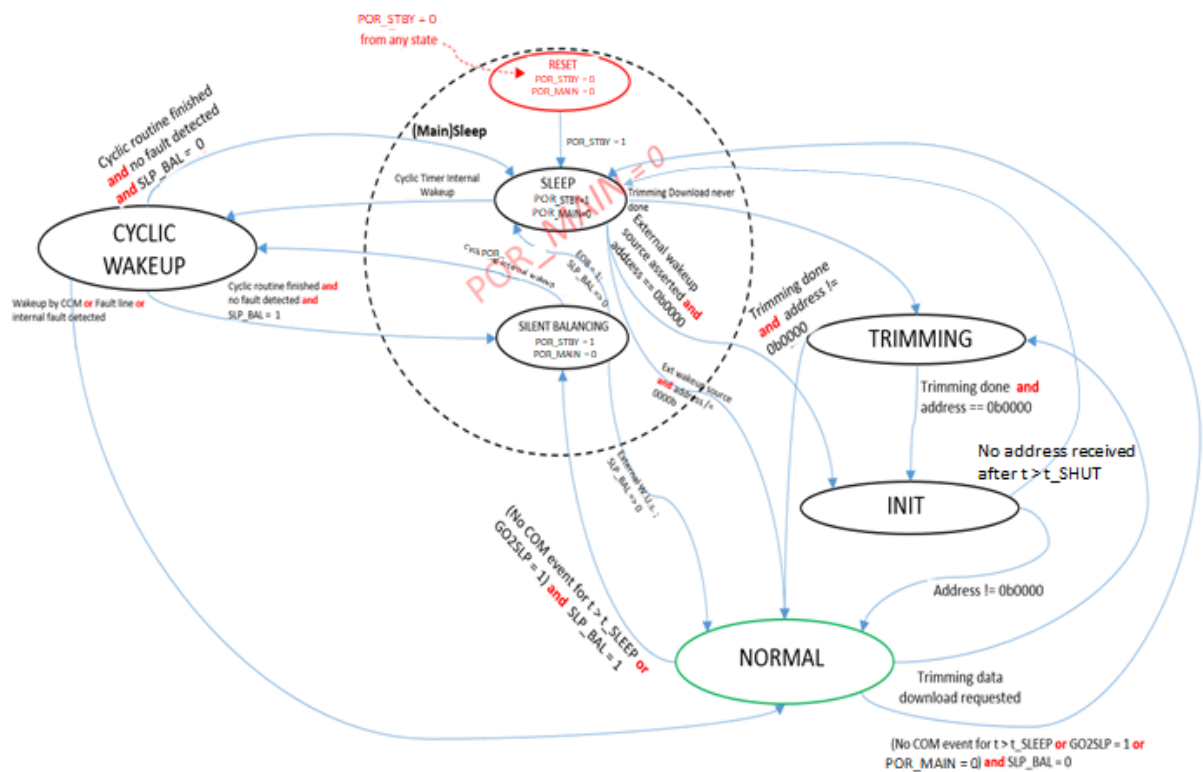Figure 6. Device functional states



4.1.1 Reset and Sleep states

Reset state: when stand-by logic is reset, all registers on device are reset. The battery voltage is still under threshold.

From here, as soon as the POR_STBY goes high the Stby Logic gets its supply power and the **Sleep** state is reached.

4.1.1.1 Operations in Reset state

No operation is possible in Reset state

Sleep state:

This state is reached:

- coming from **Reset** state on POR_STBY rising
- from other states in case a Go2SLP cmd is sent by uP or no communication is received for $t > t_{\text{SLEEP}}$
- from **Init** State in case the device address is still 0b0000 after $t > t_{\text{SHUT}}$
- from **Cyclic_Wup** state once the Cyclic Wup job is done and a silent balancing is not to be resumed.

In this state the device is sensitive to External Sources in order to wake up the Main Logic. External sources are: ISO lines, Fault line, SPI_CS (SPI_CLK) pins, also a GPIO pin for "Master" units.

In this state a slow oscillator is working allowing the device to wake itself up every $t = t_{\text{CYCLIC_SLEEP}} + t_{\text{CYCLIC_WUP}}$ and move to **Cyclic Wup** state.

During **Sleep** state, the current consumption is significantly reduced to I_{SLEEP} current value: only the Communication wake up sources monitoring, low-speed oscillator for cyclic wake up timer, and the corresponding reference and power supply are activated.

Different events can cause a wake up, depending on the configuration decided by the microcontroller:

- **ISO COMM/SPI SIGNAL:** this wake-up during a regular SLEEP mode state moves the L99BM114 FSM to Init or Normal State. A proper signal will be detected as pre-wake up (simple edge readout), and later it must be followed by a wake-up signal that will be decoded by the L99BM114 which, in the meanwhile, has entered in a higher consumption mode (regulators turned ON, isolated RX/TX enabled). Any protocol frame recognized as electrically consistent will wake up the device. However, the command will not be interpreted and thus no execution takes place;
- **INTERNAL COUNTER:** it is possible that the microcontroller defines an automatic wake up of L99BM114 (when put in SLEEP mode) every $T_{\text{CYCLE_SLEEP}}$, in order to perform the diagnostics in the CYCLIC WAKEUP state;
- **GPIO SIGNAL:** in case GPIO7 is configured as wake up source (**GPIO7_WUP_EN = 1**), a high logic level on it will wake up L99BM114;
- **FAULT:** in case a fault is detected in an upper L99BM114, a proper signal is communicated through the FAULT line. The receiver connected to GPIO1/FAULTH pin will detect the event and the device will be forced to evolve into the normal state, in order to transmit the fault downward.

The wake-up event coming from external wake up sources is verified by the Stby logic (pattern confirmation step) before waking up the main logic (the main logic is kept under reset and its clock is gated off until the Sleep state is left).

The wakeup sequence lasts T_{WAKEUP} .

4.1.1.2 Operations in Sleep state

Only the Stand-by logic is working in Sleep state.

Table 7. Operations in Sleep state

Operation	Timing mode	Functions involved
Wake up Management	Always ON	Timers, Pin Input Buffer and ISO lines receiver ON. External sources activity detection, receivers and input buffers powered
Awakening Pattern Detection	Once	Comparison logic

4.1.2 Init state

In **Init** state, after having been woken up, the device waits for the uP to send the Address assignment command. Refer to the [Section 4.1.2.2: Addressing procedure](#).

If the address command is received before the Init timer expires (t_{SHUT}), the device address is stored into a stand-by logic register (**chip_ID**) and the device goes to **Normal** state.

The **chip_ID** field is then locked and no longer editable. Two actions can correctly re-initialize the device (including the **chip_ID**):

- Hard reset: (POR_STBY)
- Soft reset: it is recommended to set **SW_RST** and **GO2SLP** in the same frame
 - Note that Soft reset will leave communication timeout (**CommTimeout**) unmodified
 - Note that Soft reset will also clear the **chip_ID**
 - If only SW_RST is sent, the device will wait for CommTimeout and then move to Sleep state

If the Init timer (t_{SHUT}) expires before the command is received, the device goes back to **Sleep** state.

All references are powered, interfaces are ready data transmission. The commands sent by the micro-controller can be read from both ISO lines and SPI pins. However, while in Init state, only the **chip_ID**, **isotx_en_h** and **iso_freq_sel** fields are writable. It is not possible to write/read other registers.

Any failure is masked until the device receives an address.

4.1.2.1 Operations in Init state

Here below a list of operations the device can perform during Init State.


Table 8. Operations in Init state

Operation	Timing mode	Functions involved
Communication	Always ON	SPI/isolated SPI Logic and storage
Init Timeout	Always ON	t_SHUT timer

4.1.2.2 Addressing procedure

The following algorithm describes the correct daisy-chain addressing procedure for a stack of N_{DEVICES} :

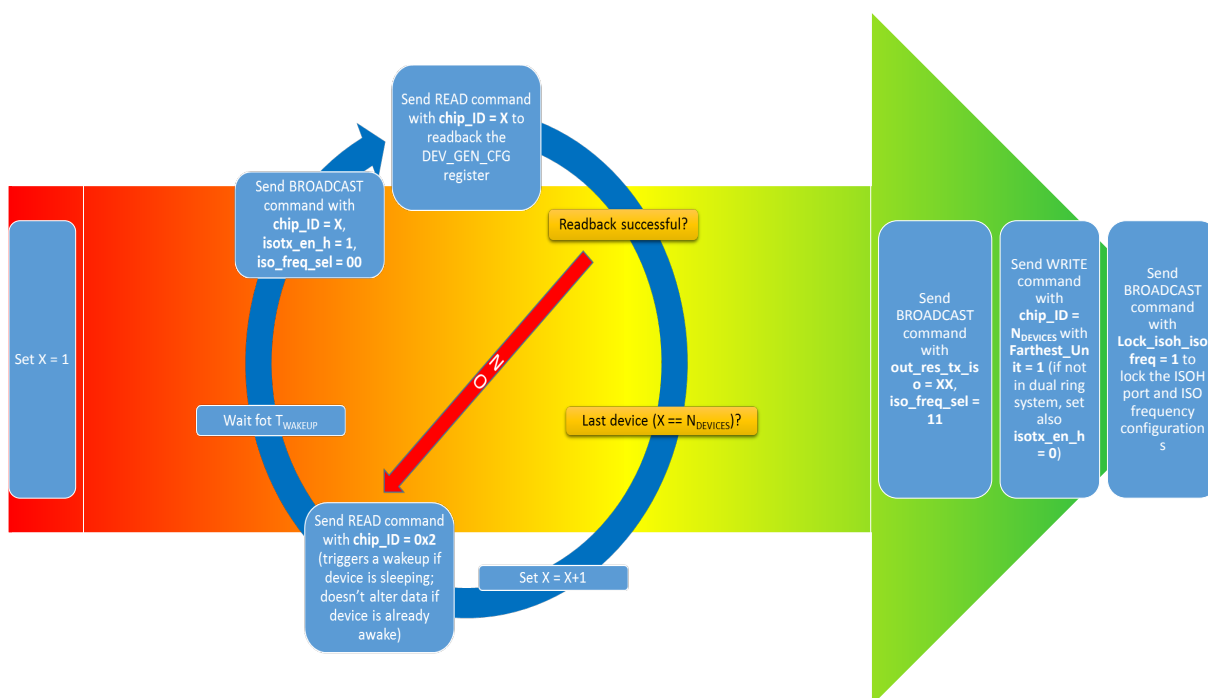Figure 7. Daisy chain addressing algorithm



Switching to high frequency (**iso_freq_sel = 11**) before initialization procedure has been completed is not recommended, since it might prevent other units from being initialized.

Once initialization procedure is done, it is possible to lock ISOH port status and ISO frequency configuration by setting **Lock_isoh_isofreq = 1**: the lock adds more safety against unwanted write access to **iso_freq_sel** and **isotx_en_h** bit in DEV_GEN_CFG register.

4.1.3 Normal state

All references are powered, and the **ADCs** and interfaces are ready for measurement and data transmission respectively. The commands sent by the micro-controller can be read from both ISO lines and SPI pins.

On receiving a valid command, the L99BM114 executes the corresponding operations, such as voltage, current and over-temperature measurement.

Some core safety operations (e.g. OV, UV, OT, UV, and VBAT monitoring) are checked in the background automatically.

In case the communication with MCU is missing for $t > t_{\text{SLEEP}}$ (programmable via **CommTimeout**, maskable via **comm_timeout_dis**) or a GO2SLP command is received, the device moves either to **Sleep** state or to **Silent Balancing** state, depending on **slp_bal_conf** bit and balancing state.

A Soft RESET command received when in Normal state clears all registers except **CommTimeout**. The device is kept in Normal and doesn't move to Reset state.

4.1.4 Power up sequence

Final **Normal** state is reached through a power up sequence, which involves the turn ON of all regulators. The following power up sequence is performed correctly if VBAT pin voltage lays in the operating range (refer to the Table 2):

- VREG is the first regulator to turn ON
- As soon as VREG reaches enough voltage dynamic ($> 3\text{ V}$), also VANA regulator starts to turn ON
- When VANA regulator voltage reaches $V_{\text{VANA_UV}}$ threshold and related digital filter time $T_{\text{POR_FILT}} + T_{\text{VTREF_DELAY}}$ expires, VTREF regulator is turned ON if VTREF_EN = 1. By default, VTREF is disabled and will not be turned on during first power up sequence.
- After $T_{\text{BOOT_DELAY}}$ in respect to VTREF enable, Bootstrap circuit is enabled in charge phase (CAP2 connected to VREG, CAP1 to GND)
- After $T_{\text{VCOM_DELAY}}$ in respect to VTREF enable, VCOM regulator is turned ON


Normally, the power up sequence lasts T_{WAKEUP} . In case it lasts longer than a specific timeout, the device moves back to a low power state (Sleep or Silent Balancing, depending on the previous state). The following timeouts are implemented:

- timeout_VCOM_UP_first, valid only for the first power up
- timeout_VCOM_UP, valid for each wake up
- timeout_OSCI_MAIN, valid for each wake up

During power down:

- VCOM, VTREF and Bootstrap are turned off at the same time
- VREG is turned off after $T_{\text{VREG_OFF}}$
- When VREG falls below 4 V (typical value), VANA starts falling along with VREG.

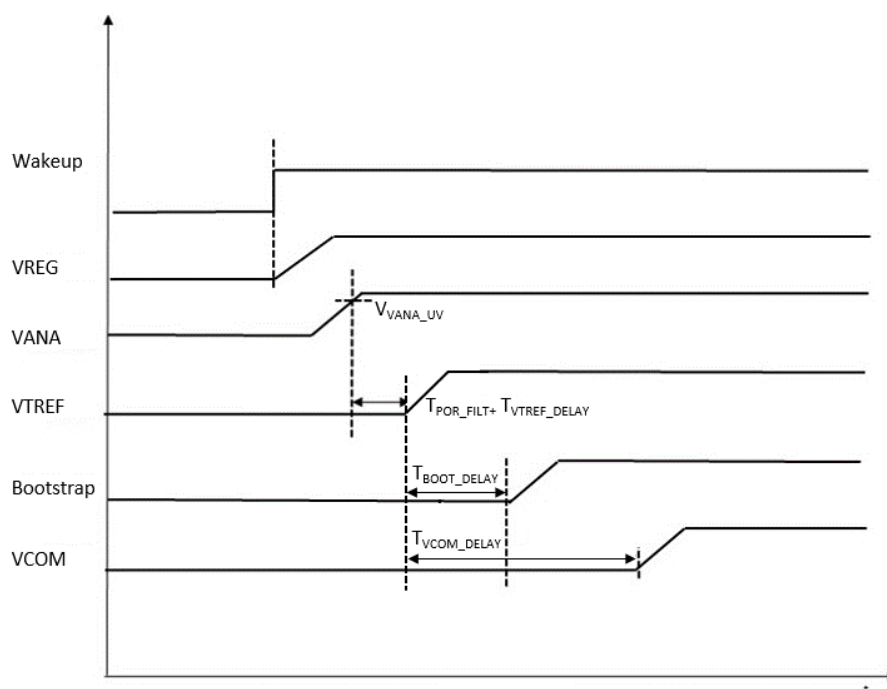Figure 8. Power up Sequence



The device is still able to communicate if VTREF and Bootstrap power up fails: VCOM regulator is started anyway. It is not recommended to send any SPI frame to the device before T_{WAKEUP} expires. Any incoming frame while L99BM114 is still performing the power up routine might be discarded.

4.1.5 Silent Balancing state

There is the possibility to perform the balancing of one (or more) cells with a reduced current consumption with respect to doing that in **Normal** mode: this state is called **Silent Balancing**.

In **Silent_Bal** the same resources as in **Sleep** state are active, in addition to the balance predrivers and the necessary bias circuitry.

To enter in **Silent Balancing** state from **Normal** state, the following conditions shall be verified:

1. Cell balancing must be ON
2. The **slp_bal_conf** flag shall be set to '1'
3. A "go to sleep" condition shall be verified (either an explicit GO2SLP command or communication timeout expiration)

If a cell balancing is previously demanded in **Normal** mode and the **slp_bal_conf** flag is set to 1, when a condition to go to sleep (low consumption) occurs the device enters **Silent Balancing**, not **Sleep** state and the required cell-balancing starts (or continues).

3 possible leaving ways from **Silent Balancing** mode:

- any wake up signal on communication or **FAULT Line** can force the chip to stop the balancing and then go back to the **Normal** state. Any protocol frame recognized as electrically consistent will wake up the device. However, the command will not be interpreted and thus no execution takes place.
- an external Fault must bring the device to Normal state and stop the balancing.
- as soon as the required balancing target is finished, the EOB (End of Balancing) bit is set to one and the chip enters the **Sleep** state.

If the Cyclic signal is raised the device goes to **Cyclic_Wup** state, runs the diagnosis then it goes back to **Silent Balancing** (if **slp_bal_conf** flag = 1) where the balancing resumes.

4.1.5.1 Operations in Silent Balancing state

Here below a list of operations the device can perform during Silent Balancing state.

Table 9. Operations in Silent Balancing state

Operation	Timing mode	Functions involved
Balancing low power	Always ON	Balancing timer, Drivers ON, Balance short comparators
Wakeup management	Always ON	Wakeup logic and wakeup sources interfaces ON

4.1.6 Cyclic wake up state

From both **Sleep** and **Silent Balancing** states, the device moves periodically (once every $t_{\text{CYCLIC_SLEEP}}$) to **Cyclic_Wup** state in order to perform a fault monitoring.

Diagnostic checks are done in this state as well as always-on monitorings. ADC must be ON to check possible critical battery conditions. Any detected fault moves the device to the Normal state.

An "On-demand" operation is only possible once the device has moved to Normal in case of any detected fault

Possible ways to leave this state:

- Any fault detected during this mode moves the device to the Normal state.
- A wake up from Fault line or Comm lines moves the device to the Normal state. Any protocol frame recognized as electrically consistent will wakeup the device. However, the command will not be interpreted and thus no execution takes place
- If the defined monitoring tasks are finished, the device can move to the **SLEEP** or **SILENT BALANCING** states automatically based on the state before **Cyclic Conversions** (**slp_bal_conf** flag).

4.1.6.1 Operations in Cyclic wake up state

Here below a list of operations the device can perform during Cyclic wake up state.

Table 10. Operations in Cyclic Wakeup state

Operation	Timing mode	Functions involved
Battery fast OV/UV	Always ON	Threshold Comparator

Operation	Timing mode	Functions involved
Battery OV/UV	Once	ADCV measurements vs. threshold
Cells OV/UV	Once	ADCV measurements vs. threshold
GPIO OT/UT	Once	ADCV measurements vs. threshold
OC Monitor	Always ON	ADCC measurements vs. threshold
OT Monitor	Always ON	ADCT measurements vs. threshold
GPO Short Detection	Always ON	Logical Comparison
Clock Monitor	Always ON	Frequency comparison to secondary monitor
Downward Fault Signalling	Always	Receivers and Transmitters
Cell Open	Once	ADCV measurements vs. threshold
Balancing Open	Once	Voltage Comparator, Timer
Wake up Management	Always ON	Wake up logic and wakeup sources interfaces ON

Cyclic operations have their own periods written by MCU in specific SPI registers.

In case the “On-demand” and “cyclic” timing modes are both possible, an “on-demand” command starts a single operation immediately, breaking the cyclic period, and resets the cyclic counter.

In GPIO short detection the detection is guaranteed only in the duty phase, if the pin is configured as an output.

4.1.7 Sleep parameters

All parameters are tested and guaranteed in the following conditions, unless otherwise noted:

9.6 V < VBAT < 64 V; -40 °C < Tambient < 105 °C

Table 11. Sleep parameters

Symbol	Parameter	Test conditions	Min.	Typ.	Max.	Unit
T _{GPIO7_WAKEUP}	GPIO7 deglitch filter when used as Wakeup Source	Tested by SCAN	-	150	-	µs
T _{UV_SHORT_DELAY}	Delay after POR. Used to latch VCOM_UV and VTREF_UV	Tested by SCAN	-	40	-	µs
T _{WAKEUP}	Time necessary to complete Wake up from SLEEP mode (between Wake up source and VCOM out of UV condition)		-	-	2	ms
t _{SHUT}		Tested by SCAN	-	60	-	s
t _{SLEEP_00}	Communication Timeout CommTimeout = 00	Tested by SCAN	-	32	-	ms
t _{SLEEP_01}	Communication Timeout CommTimeout = 01	Tested by SCAN	-	256	-	ms
t _{SLEEP_10}	Communication Timeout CommTimeout = 10	Tested by SCAN	-	1024	-	ms
t _{SLEEP_11}	Communication Timeout CommTimeout = 11	Tested by SCAN	-	2048	-	ms
t _{CYCLIC_SLEEP_000}		Tested by SCAN	-	100	-	ms
t _{CYCLIC_SLEEP_001}		Tested by SCAN	-	200	-	ms
t _{CYCLIC_SLEEP_010}		Tested by SCAN	-	400	-	ms
t _{CYCLIC_SLEEP_011}		Tested by SCAN	-	800	-	ms
t _{CYCLIC_SLEEP_100}		Tested by SCAN	-	1600	-	ms

Symbol	Parameter	Test conditions	Min.	Typ.	Max.	Unit
$t_{CYCLIC_SLEEP_101}$		Tested by SCAN	-	3200	-	ms
$t_{CYCLIC_SLEEP_110}$		Tested by SCAN	-	6400	-	Ms
$t_{CYCLIC_SLEEP_111}$		Tested by SCAN	-	12800	-	Ms
T_{VREG_OFF}		Tested by SCAN	-	500	-	μ s
FMAIN_OSC_stby	Internal standby Oscillator frequency		20	32	45	KHz
FAUX_OSC_stby	Internal standby redundant Oscillator frequency		20	32	45	KHz
timeout_VCOM_UP_first	Timeout at first power up. From wakeup event to VCOM_UV release	Tested by SCAN	-	8	-	ms
timeout_VCOM_UP	Default power up timeout. From wakeup event to VCOM_UV release	Tested by SCAN	-	4	-	ms
timeout_OSCI_MAIN	From wakeup event to main oscillator stable	Tested by SCAN	-	10	-	ms
timeout_POR_MAIN	VANA settling time timeout	Tested by SCAN	-	1.5	-	ms
T_{BOOT_DELAY}	Delay between VTREF enable and Bootstrap enable	Tested by SCAN	-	200	-	μ s
T_{VTREF_DELAY}	Delay between VANA_UV release (POR_STBY asserted after T_{POR_FILT}) and VTREF enable	Tested by SCAN	-	630	-	μ s
T_{VCOM_DELAY}	Delay between VTREF enable and VCOM enable	Tested by SCAN	-	400	-	μ s
$T_{WAKEUP_TIMEOUT_ISO}$	Timeout of the pulse counter for wakeup detection (isolated SPI)	Tested by SCAN	282	-	-	μ s
$T_{WAKEUP_TIMEOUT_SPI}$	Timeout of the pulse counter for wakeup detection (SPI)	Tested by SCAN	84	-	138	μ s
$T_{WAKEUP_NCS_HIGH}$	Minimum NCS high time before sending SPI wake up frame	Tested by SCAN	400	-	-	μ s

4.2 Serial communication interface

Two types of serial communication ports are included in L99BM114: SPI and isolated interface:

- SPI can be used for the local communication between MCU and the closest L99BM114
- Isolated SPI can be used for the global communication between several L99BM114 stacked in a daisy chain

Refer to the Communication architectures for all the different application scenarios.

The frequencies on the 2 communication interfaces are different and not related.

From micro-controller point of view a daisy chain of many L99BM114 devices is controlled as a single device addressable by using both the device ID and the device's internal register addresses.

4.2.1 Communication interface selection

Two communication ports are available:

- **Port H:** implemented via the ISOHp and ISOHm pins. It always works as Isolated SPI interface. It can be enabled by setting **isotx_en_h = 1**
- **Port L:** implemented via the ISOLp_SD, ISOLm_NCS, GPIO8_SCK, GPIO9_SDO pins. It is always enabled and its configuration is latched upon first power up and depends on the **SPIEN** pin

Table 12. Port L configuration determination

Electrical condition	Latched when	Configuration	Wake up source
SPIEN = 1	Upon VCOM_UV release	Port L configured as SPI. Master Unit. SPIEN must be connected to VCOM	SPI wake up logic

Electrical condition	Latched when	Configuration	Wake up source
SPIEN = 0 (default condition if pin is left floating)	Upon VCOM_UV release	Port L configured as isolated SPI. Slave Unit. SPIEN must be connected to AGND	ISOL wake up comparator

In case the first power up fails and L99BM114 comes back to Sleep state without having latched the PORT L operating mode, both wake up sources will be kept active in order to allow subsequent power up trigger in both operating configurations.

When the first power up completes successfully, only the wake up source related to the units with **SPIEN = 1** is **Master** units of the daisy chain. A **Master** Unit differs from the **Slave** one (**SPIEN = 0**) because:

- It manages the asynchronicity between SPI CLK and the programmable bit-rate on the isolated line;
- It exploits an internal buffer to store answers received from the slaves on ISOH port;
- It implements timeout mechanisms and frame error checks described in the [Section 4.2.4.4: Special frames](#);
- It forwards commands only if they are addressing Slave units. Any command addressed to the Master unit is not propagated on the ISOH port;
- In case Master Unit has port H disabled (**isotx_en_h = 0**), trying to communicate with a Slave unit will return the corresponding Master's register content;

Interaction between **Port H** and **Port L** is managed by L99BM114. The IC is capable of converting analog signals incoming on the isolated twisted pair to digital signals suitable for SPI, and viceversa. Passing a signal through a single unit takes a single pulse period ($2 \cdot T_{\text{BIT_HIGH_LOW_FAST}}$ or $2 \cdot T_{\text{BIT_HIGH_LOW_SLOW}}$, depending on the programmed operating frequency), which can be used to account for the insertion delay of an L99BM114 in the daisy chain.

4.2.1.1 Wake up via communications interface

To wake up the device from low power modes, any communication frame in low frequency ($F_{\text{ISO_SLOW}}$) can be sent:

- If port L is configured in SPI mode, a sequence of at least 37 clock pulses on SCK line with active low chip select NCS will wake up the device. Pulses must be received within $T_{\text{WAKEUP_TIMEOUT_SPI}}$ timeout starting from the NCS assertion. Before sending the wake up frame, NCS must have been set high for at least $T_{\text{WAKEUP_NCS_HIGH}}$.
- If port L is configured in isolated SPI mode, a sequence of at least 37 differential pulses on ISOLP/ISOLM pins, whose minimum duration is $T_{\text{DET_MIN_WU}}$ and whose amplitude is greater than **Wakeup_thr** will wake up the device. Pulses must be received within $T_{\text{WAKEUP_TIMEOUT_ISO}}$ timeout starting from the first valid pulse.
- If port H is enabled, a sequence of at least 37 differential pulses, whose minimum duration is $T_{\text{DET_MIN_WU}}$ and whose amplitude is greater than **Wakeup_thr** will wake up the device. Pulses must be received within $T_{\text{WAKEUP_TIMEOUT_ISO}}$ timeout starting from the first valid pulse.

Note: Depending on pulses re-synchronization uncertainty with the internal standby oscillator, the wake up event may occur even if COM pulses are less than 37 (min. number of pulses in the best case is 8). However, 37 pulses will always guarantee a correct wake up.

In case the first power up fails and SPIEN value is not correctly latched, port L will listen to both wake up sources, until a correct power up sequence is achieved and port L configuration is determined.

4.2.2 Serial Peripheral Interface (SPI)

The SPI pinout is listed in the following table:

Table 13. L99BM114 pin used as SPI

L99BM114 pin	SPI function	Configuration
ISOLp_SDI	Serial Data Input (SDI)	Digital input
ISOLm_NCS	Chip Select (CS)	Digital input. Active low.
GPIO8_SCK	Serial Clock (SCK)	Digital input.

L99BM114 pin	SPI function	Configuration
GPIO9_SDO	Serial Data Out (SDO)	Digital output

A 40-bit frame is used including a 6-bit CRC.

Refer to the [Section 4.2.4: SPI protocol details](#) for further details about the protocol.

Table 14. SPI interface quick look

Parameter	Description
Protocol	Out of frame
Single Frame Length	40 bit
Addressable Devices	15
Frame protection	6 bit CRC
Max. Frequency	5 MHz
CPOL	0
CPHA	0
Master/Slave configuration	MCU Master / L99BM114 Slave

4.2.3

Isolated Serial Peripheral Interface

The Isolated SPI interface allows units with different ground levels and on different boards to communicate with each other. Physically the interface is based on a twisted-pair wire with transformer isolators.

The isolated SPI pinout is listed in the following table:

Table 15. Isolated SPI pinout

Pin	SPI Function	Configuration
ISOLp_SDI	Port L positive differential input/output	Analog input/output
ISOLm_NCS	Port L negative differential input/output	Analog input/output
ISOHp	Port H positive differential input/output	Analog input/output
ISOHm	Port H negative differential input/output	Analog input/output

Figure 9. Isolated SPI interface

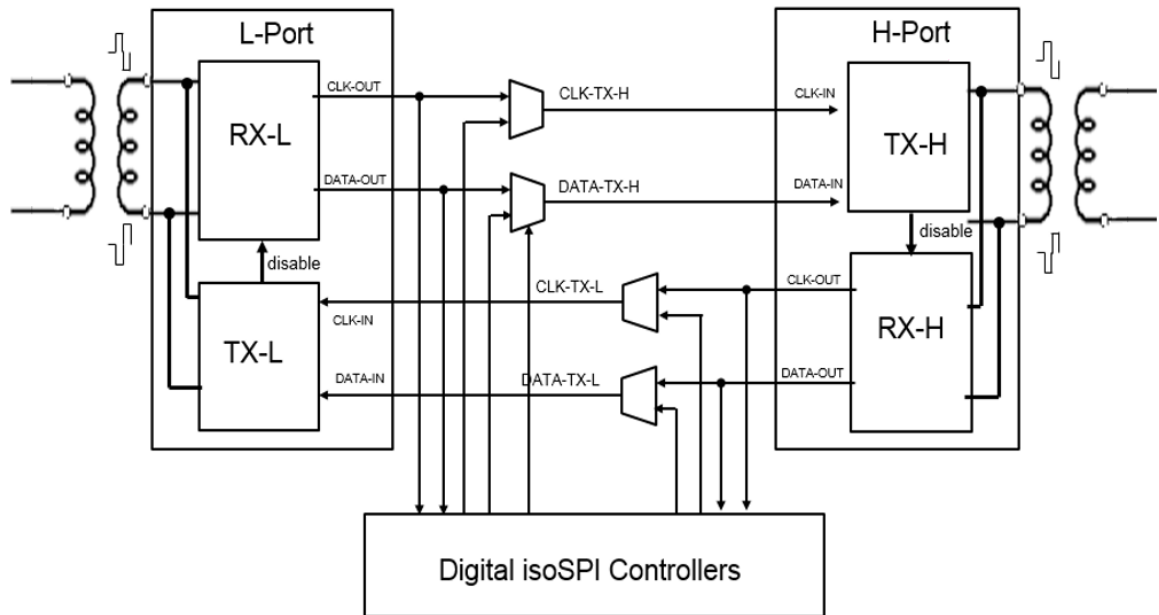


Table 16. Isolated SPI quick look

Parameter	Description
Protocol	Half-Duplex / Out of frame
Single Frame Length	40 bit
Addressable Devices	31
Frame protection	6 bit CRC
Max. Bit-rate	2.66 Mbps (high speed configuration) 333 kbps (low speed configuration, default)
Master/Slave configuration	L99BM114 Slave

The transmission line on the isolated SPI exploits a single twisted pair. Communication data is transmitted/received over a pulse-shaped signal, in a half-duplex protocol.

Line bit-rate can be selected by programming the **iso_freq_sel** bit via SPI. A single bit is made of a pulse time (T_{PULSE}) followed by two pause slices ($2T_{PULSE}$):

- $T_{PULSE} = 2T_{BIT_HIGH_LOW_FAST}$ for the high speed configuration
- $T_{PULSE} = 2T_{BIT_HIGH_LOW_SLOW}$ for the low speed configuration


Once the operating frequency has been programmed and the ISOH port has been enabled/disabled, it is possible to lock these settings by writing the **Lock_isoh_isofreq** bit to '1', to avoid unwanted changes due to wrong MCU write frame.

Lock_isoh_isofreq is added to the reg map into a separate register in respect to **isotx_en_h** and **iso_freq_sel**, in order to avoid that a single frame can both unlock and write fields

Lock_isoh_isofreq bit (default 0) is reset every time the device goes to a low power mode. When **Lock_isoh_isofreq** is set to '1', **isotx_en_h** and **iso_freq_sel** bits are write protected

Architecture and MCU command's time constraints are specified taking into account signal propagation delay over the communication bus. Refer to the Inter-frame delay for further details.

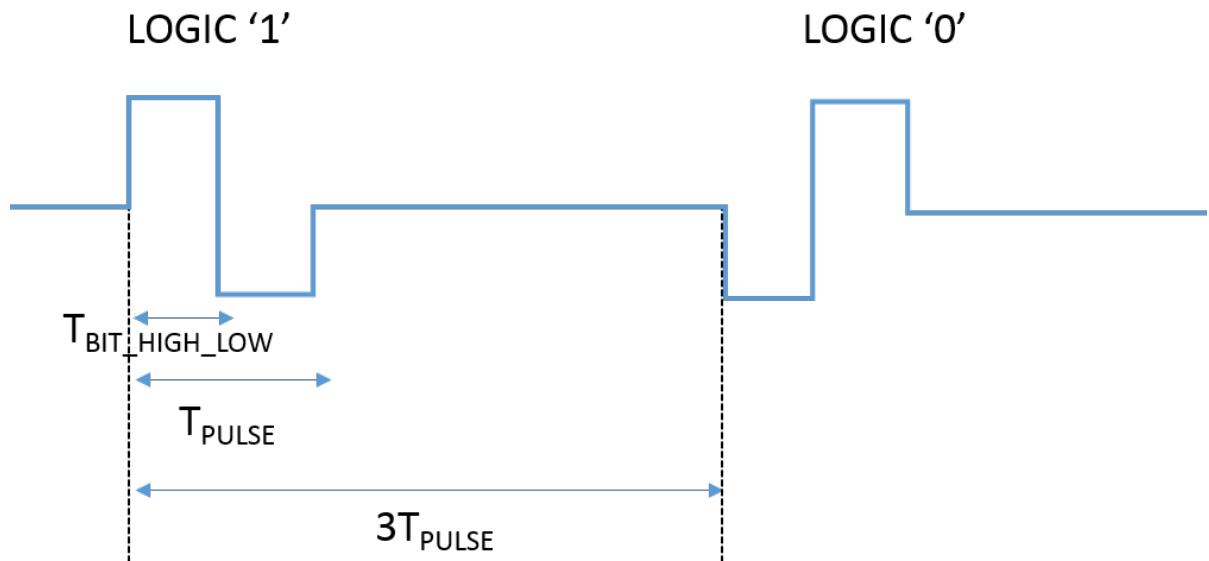Figure 10. Isolated SPI pulse shape and logical meaning



4.2.3.1 ISO communicator receiver and transmitter

An isolated receiver and transmitter are connected to the couple of pins ISOLP/M and ISOHP/M. Depending on the communication phase, they can be enabled or disabled.

4.2.3.1.1 ISO communicator receiver

The receiver is able to convert a differential input signal into a single ended signal that is provided to the logic.

In order to guarantee a correct communication and guarantee **Wake up via Communication Interface** the input common mode must be included into range $V_{CM_ISO_IN}$.

At power up by default the device is configured for a low frequency communication (F_{ISO_SLOW}); higher frequency F_{ISO_FAST} can be configured by acting on the **iso_freq_sel** bit.

4.2.3.1.2 ISO communicator transmitter

The transmitter is able to force as differential output the single ended signal that is provided by the logic.

Transmitter output impedance can be programmed via **out_res_tx_iso** ($R_{DIFF_ISO_OUT1...3}$), as described in the [Table 18](#). It affects differential pulse amplitude. In order to guarantee a correct communication in case of high frequency configuration the bit length must be at least $T_{BIT_LENGTH_FAST}$ and the duration of high and low level of a single bit into a period $T_{BIT_LENGTH_FAST}$ must be $T_{BIT_HIGH_LOW_FAST}$.

In case of low frequency configuration $T_{BIT_LENGTH_SLOW}$ and $T_{BIT_HIGH_LOW_SLOW}$ are valid.

4.2.3.2 Dual access ring

L99BM114 supports dual access ring topology (refer to the Dual access ring for the application scenario). The device accepts commands from both ports (ISOL/SPI and ISOH ports) and generates answers in both directions. This kind of functionality is present by default and cannot be disabled.

In the typical application scenario featuring a number of $N_{DEVICES}$ L99BM114, two of them are configured as SPI devices (referred to as bottom and top Masters), while the remaining is configured as isolated SPI slaves (refer to the [Section 4.2.1: Communication interface selection](#) for Master and Slave behavior).

Referring to the [Section 4.1.2.2: Addressing procedure](#) follows the standard approach, except for the top Master, that must be initialized through its own SPI interface.

Once the initialization is complete, MCU is able to communicate with any Slave through any of the 2 Masters SPI interface. It is also possible to verify the loop integrity, accessing one Master through the opposite one.

In case the access to a Slave is performed exploiting the bottom Master, the corresponding answer must be retrieved through the bottom Master itself (the same applies for the dual case of the top Master).

4.2.3.3 Electrical parameters

4.2.3.3.1 Receiver

All parameters are tested and guaranteed in the following conditions, unless otherwise noted:
9.6 V < VBAT < 64 V; -40 °C < Tambient < 105 °C

Table 17. Isolated receiver electrical parameters

Symbol	Parameter	Test conditions	Min.	Typ.	Max.	Unit
V _{DIFF_ISO_IN3}	Differential input voltage threshold	V(ISO _P) – V(ISO _M)	100	250	400	mV
V _{CM_ISO_IN}	Input voltage common mode range	V(ISO _P) + V(ISO _M) /2 Design info	0	-	1.9	V
R _{ISO_DIFF}	Differential input resistance	VIF enabled, no communication Resistance measured between ISO _P and ISO _M pins	5	-	15	kΩ
R _{ISO_EXT}	External termination resistance connected between ISO _{xP} and ISO _{xM} pins	Info only, not tested	-	120	-	Ω
I _{ISO_LEAK}	ISO input leakage current	0 V < ISO _{HP} /M, ISO _{LP} /M < VCOM	-	-	5	μA
T _{DET_MIN_WU}	Minimum pulse duration to be detected	Application info	400	-	-	ns
Wakeup_thr	Wake up comparator threshold		80	200	320	mV

4.2.3.3.2 Transmitter

All parameters are tested and guaranteed in the following conditions, unless otherwise noted:
9.6 V < VBAT < 64 V; -40 °C < Tambient < 105 °C

Table 18. Isolated transmitter electrical parameters


Symbol	Parameter	Test conditions	Min.	Typ.	Max.	Unit
R _{DIFF_ISO_OUT1}	Total output resistance: sum of pullup and pulldown resistance contribution	R _{pullup} measured with V(ISO _{HL} /MP) = 1.5 V R _{pulldown} measured with V(ISO _{HL} /MP) = 0.9 V (out_res_tx_iso = 00, default)	310	440	570	Ω
R _{DIFF_ISO_OUT2}		(out_res_tx_iso = 01)	220	314	410	Ω
R _{DIFF_ISO_OUT3}		(out_res_tx_iso = 11)	170	244	310	Ω
V _{CM_ISO_OUT}	Output voltage common mode	V(ISO _P) + V(ISO _M) /2	1	-	1.4	V
T _{BIT_HIGH_LOW_FAST}	High/low level bit duration into a whole period in case of high frequency configuration	Application info iso_freq_sel = 11	-	62.5	-	ns
T _{BIT_HIGH_LOW_SLOW}	High/low level bit duration into a whole period in case of low frequency configuration	Application info iso_freq_sel = 00	-	500	-	ns
T _{BIT_LENGTH_FAST}	Bit duration with high frequency configured	Guarantee by SCAN iso_freq_sel = 11	-	375	-	ns
T _{BIT_LENGTH_SLOW}	Bit duration with low frequency configured	Guarantee by SCAN iso_freq_sel = 00	-	3	-	μs
F _{ISO_FAST}	Isolated Communication Rate	High frequency communication Application info	-	2.66	-	Mbps

Symbol	Parameter	Test conditions	Min.	Typ.	Max.	Unit
		For terminals ISOHP/M, and ISOLP/M iso_freq_sel = 11				
F _{ISO_SLOW}	Isolated Communication Rate	Low frequency communication Application info For terminals ISOHP/M, and ISOLP/M iso_freq_sel = 00	-	333.3	-	Kbps
T _{ANSWER_DELAY_FAST}	Delay between receival of a command and generation of the answer	High speed mode Guarantee by SCAN iso_freq_sel = 11	-	4.5	-	μs
T _{ANSWER_DELAY_SLOW}	Delay between receival of a command and generation of the answer	Low speed mode Guarantee by SCAN iso_freq_sel = 00	-	9	-	μs

4.2.4 SPI protocol details

The protocol is **out-of-frame** in order to manage the propagation delay of the commands sent by MCU and the answers generated by the L99BM114 stacked in the vertical interface. A command sent at the N-th frame will receive its feedback at the (N+1)th frame.

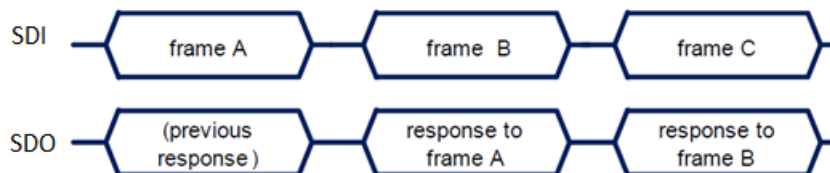Figure 11. Out of frame protocol description



MCU can access the devices in different ways.

4.2.4.1 Single access

The single access behavior is based on a Write and Read approach.

The execution of each WRITE command sent by MCU can be immediately verified by interpreting the answer incoming from the addressed device. Any reply is buffered into L99BM114 Master unit, which passes it to the MCU on its next command.

Figure 12. Write and read access


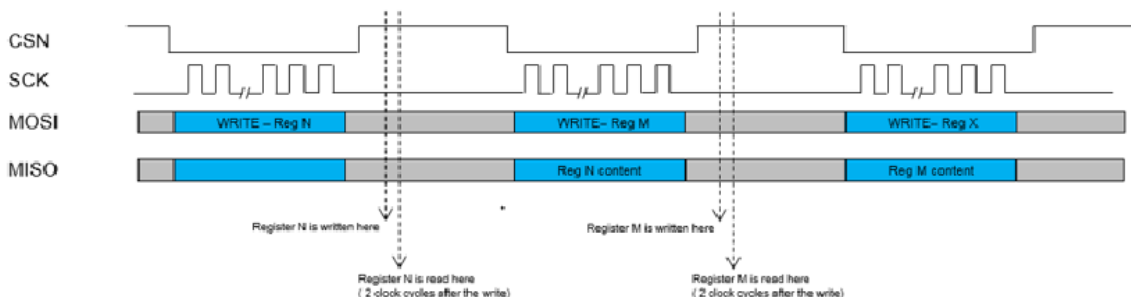


Table 19. SPI protocol: single access addressed frame (write and read)

	39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
MOSI	P.A.=1	R/W	Dev ID				Address				GSW				DATA WRITE																CRC									
MISO	P.A.=0	Burst = 0	Dev ID				Address feedback				GSW				DATA READ																CRC									

READ commands require the same inter-frame time as the WRITE ones. Any reply is buffered into L99BM114 Master unit, which passes it to the MCU on its next command.

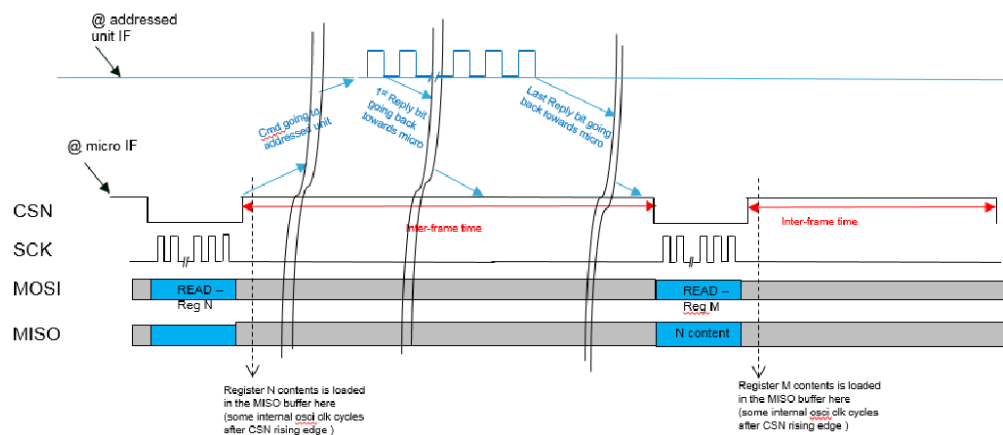Figure 13. Single read access



Frame fields are described in the table below:

Table 20. Single access frames field description

Field	Length	Value	Description
P.A.	1 bit	0	Answer sent by any Slave unit (MISO)
		1	Command sent by Master unit (MOSI)
R/W	1 bit	0	Read
		1	Write
Dev ID	5 bit	From 0x1 to 0x1F	Identifies the x-th L99BM114 unit in a daisy chain
Address	7 bit	From 0x00 to 0x5F	Identifies the y-th register of the device
Address feedback			
GSW	2 bit	From 0x0 to 0x3	Refer to the Section 4.2.4.5: Global Status Word (GSW)
DATA WRITE	18 bit	Depends on the register	Data to be written in the y-th register of the x-th device. It is discarded in case of READ command.
CRC	6 bit	From 0x00 to 0x3F	CRC calculated on the [39-7] field of the frame. Refer to the Section 4.2.4.6: CRC calculation
Burst	1 bit	0	Answer to a single access command
DATA READ	18 bit	Depends on the register	Answer containing the data read from the y-th register of the y-th device

4.2.4.2 Burst access

The Burst Access supports only READ commands. It can be used to reduce the time needed to readout long data series from a single unit. The addressed unit receives the Burst command and starts replying the requested data frame by frame towards the MCU. Any reply is buffered into L99BM114 Master unit, which passes it to the MCU on its next command.

Figure 14. Burst access

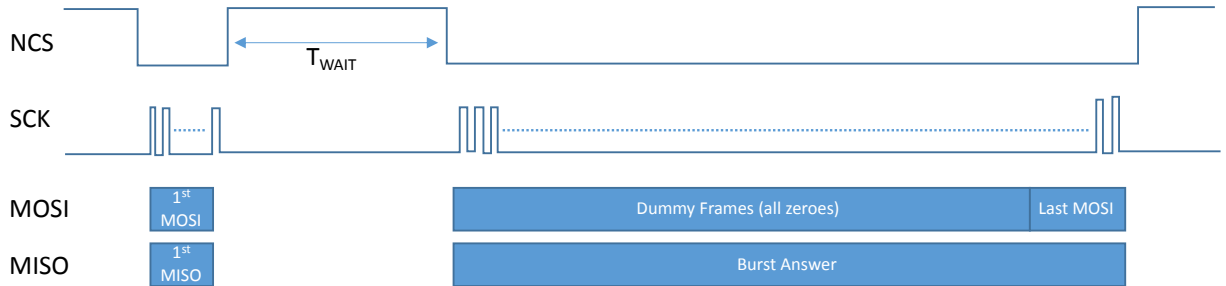


Table 21 describes the burst frame sequence.

- In case L99BM114 is configured in SPI mode, its internal buffer will store answers incoming from upper units. Apply the following strategy to download the burst data:
 - First frame (sent with a single NCS window as a normal command)
 - First MOSI contains the corresponding Burst command (see the Table 23 for available commands)
 - First MISO stores the answer to the previous MCU command, as per out-of-frame behavior
 - Wait for burst answer to come back to the Master unit
 - 400 μ s (in case iso_freq_sel = 11)
 - 3 ms (in case iso_freq_sel = 00)
 - Intermediate frames (all downloaded keeping NCS low)
 - Intermediate MOSI can be dummy commands (e.g. all zeroes). They are not interpreted by the L99BM114 SPI logic
 - Intermediate MISO contain burst data formatted as in the Table 21
 - Last frame (attached to intermediate frames, keeping NCS low)
 - Last MOSI must be a valid command, because it will be interpreted by L99BM114 SPI logic
 - Last MISO contains last burst data register (MISO_n) as shown in the Table 21
- In case L99BM114 transceiver is interposed between MCU and L99BM114, refer to the L99BM11T datasheet. The Application Information section hosts a paragraph explaining how to handle burst commands.

Table 21. SPI protocol: answer to a burst read request

|--|

	39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
MISO2	P.A.=0	Burst = 1		Dev ID				1	1	Frame Num (00010)				GSW		DATA READ																CRC								
MISO3	P.A.=0	Burst = 1		Dev ID				1	1	Frame Num (00011)				GSW		DATA READ																CRC								
MISO4	P.A.=0	Burst = 1		Dev ID				1	1	Frame Num				GSW		DATA READ																CRC								
MISOn	P.A.=0	Burst = 1		Dev ID				1	1	Frame Num				GSW		DATA READ																CRC								
MISO20	P.A.=0	Burst = 1		Dev ID				1	1	Frame Num (10011)				GSW		DATA READ																CRC								

Frame fields related to the burst access are described in the table below:

Table 22. Burst access special frame fields

Field	Length	Value	Description
P.A.	1 bit	0	Answer sent by any Slave unit (MISO)
		1	Command sent by Master unit (MOSI)
R/W	1 bit	0	Read
		1	Write
Dev ID	5 bit	From 0x1 to 0x1F	Identifies the x-th L99BM114 unit in a daisy chain
Command	7 bit	From 0x78 to 0x7D	Identifies a set of registers to be read out of the device
Command feedback			
GSW	2 bit	From 0x0 to 0x3	Refer to the Section 4.2.4.5: Global Status Word (GSW)
CRC	6 bit	From 0x00 to 0x3F	CRC calculated on the [39-7] field of the frame. Refer to the Section 4.2.4.6: CRC calculation
Burst	1 bit	1	Identifies the frame being part of a burst
DATA READ	18 bit	Depends on the register	Answer containing the data read from the y-th register of the y-th device
Frame Num	5 bit	From 0x02 to 0x14	Identifies the n-th frame of a burst answer. In the first frame it is replaced by the Command feedback.

Several burst commands are available:

Table 23. Available burst commands

Command code	Description	Reference
0x78	All cells voltage, Sum of cells, Stack Voltage divider, Instantaneous Current, Balancing status. This command clears the measurement data_ready bit (refer to the Section 4.4: Cell voltage measurement)	Table 24
0x7A	Diagnostic info. This command is intended to provide a rapid overview of the fault status, allowing the MCU to perform proper masking procedure. The command does not reset diagnostic latches.	Table 25
0x7B	Coulomb Counter, Instantaneous Current, Configuration Integrity, Oscillator, Balancing Timer Monitor, GPIO measurements. This command clears the Coulomb Counter registers and the measurement data_ready bit (refer to the Section 4.13.1: Coulomb counting and Section 4.4: Cell voltage measurement)	Table 26

Fields with green shading are reset upon burst read.

Table 24. 0x78 burst command

frame num.	bit 17	bit 16	bit 15	bit 14	bit 13	bit 12	bit 11	bit 10	bit 9	bit 8	bit 7	bit 6	bit 5	bit 4	bit 3	bit 2	bit 1	bit 0
1	VCELL1_EN	d_rdy_Vcell1	VCell1															
2	VCELL2_EN	d_rdy_Vcell2	VCell2															
3	VCELL3_EN	d_rdy_Vcell3	VCell3															
4	VCELL4_EN	d_rdy_Vcell4	VCell4															
5	VCELL5_EN	d_rdy_Vcell5	VCell5															
6	VCELL6_EN	d_rdy_Vcell6	VCell6															
7	VCELL7_EN	d_rdy_Vcell7	VCell7															
8	VCELL8_EN	d_rdy_Vcell8	VCell8															
9	VCELL9_EN	d_rdy_Vcell9	VCell9															
10	VCELL10_EN	d_rdy_Vcell1 0	VCell10															
11	VCELL11_EN	d_rdy_Vcell11	VCell11															
12	VCELL12_EN	d_rdy_Vcell1 2	VCell12															
13	VCELL13_EN	d_rdy_Vcell1 3	VCell13															
14	VCELL14_EN	d_rdy_Vcell1 4	VCell14															
15	vsum_batt19_2																	
16	vsum_batt1_0		VBATT_DIV															
17	data_ready_v sum	data_ready_v battdiv	SOC	OVR_LATCH	CONF_CYCLIC_EN	DUTY_ON	VSUM_OV	VSUM_UV	TimedBalacc	TimedBalTimer							bal_on	eof_bal
18	CUR_INST_calib																	

Table 25. 0x7A burst command

frame num.	1	2	3	4	5
bit 17	OVR_LATCH	loss_agnd	GPIO5_OPEN	VBAT_COMP_BIST_FAIL	EEPROM_CRC_ERR_CAL_FF
bit 16	TCYCLE_OVF	loss_dgnd	GPIO4_OPEN	VREG_COMP_BIST_FAIL	HWSC_DONE
bit 15	sense_plus_open	loss_cgnd	GPIO3_OPEN	VCOM_COMP_BIST_FAIL	VBAT_OPEN
bit 14	sense_minus_open	loss_gndref	EEPROM_DWNLD_DONE	VTREF_COMP_BIST_FAIL	CELL14_OPEN
bit 13	Otchip	TrimCalOk	BAL14_OPEN	BAL14_SHORT	CELL13_OPEN
bit 12	VANA_OV	CoCouOVF	BAL13_OPEN	BAL13_SHORT	CELL12_OPEN
bit 11	VDIG_OV	EoBtimeerror	BAL12_OPEN	BAL12_SHORT	CELL11_OPEN
bit 10	VTREF_UV	GPIO9_fastchg_OT	BAL11_OPEN	BAL11_SHORT	CELL10_OPEN
bit 9	VTREF_OV	GPIO8_fastchg_OT	BAL10_OPEN	BAL10_SHORT	CELL9_OPEN
bit 8	VREG_UV	GPIO7_fastchg_OT	BAL9_OPEN	BAL9_SHORT	CELL8_OPEN
bit 7	VREG_OV	GPIO6_fastchg_OT	BAL8_OPEN	BAL8_SHORT	CELL7_OPEN
bit 6	VCOM_OV	GPIO5_fastchg_OT	BAL7_OPEN	BAL7_SHORT	CELL6_OPEN
bit 5	VCOM_UV	GPIO4_fastchg_OT	BAL6_OPEN	BAL6_SHORT	CELL5_OPEN
bit 4	wu_gpio7	GPIO3_fastchg_OT	BAL5_OPEN	BAL5_SHORT	CELL4_OPEN
bit 3	wu_spi	GPIO9_OPEN	BAL4_OPEN	BAL4_SHORT	CELL3_OPEN
bit 2	wu_isoline	GPIO8_OPEN	BAL3_OPEN	BAL3_SHORT	CELL2_OPEN
bit 1	wu_fault	GPIO7_OPEN	BAL2_OPEN	BAL2_SHORT	CELL1_OPEN
bit 0	wu_cyc_wup	GPIO6_OPEN	BAL1_OPEN	BAL1_SHORT	CELL0_OPEN

frame num.	6	7	8	9	10	11
bit 17	EEPROM_CRC_ERR_SECT_0	VBATT_WRN_OV	bal_on	GPO6on	Fault_L_line_status	HeartBeat_fault
bit 16	Comm_timeout_fit	VBATT_WRN_UV	eof_bal	GPO5on	GPO9on	FaultHline_fault
bit 15	EEPROM_CRC_ERR_CAL_RAM	VBATTCRIT_UV	VBATTCRIT_OV	GPO4on	GPO8on	FaultH_EN
bit 14	RAM_CRC_ERR	VSUM_UV	VSUM_OV	GPO3on	GPO7on	HeartBeat_En
bit 13	VCELL14_UV	VCELL14_OV	GPIO9_OT	VCELL14_BAL_UV	GPO9short	MUX_BIST_FAIL
bit 12	VCELL13_UV	VCELL13_OV	GPIO8_OT	VCELL13_BAL_UV	GPO8short	
bit 11	VCELL12_UV	VCELL12_OV	GPIO7_OT	VCELL12_BAL_UV	GPO7short	
bit 10	VCELL11_UV	VCELL11_OV	GPIO6_OT	VCELL11_BAL_UV	GPO6short	
bit 9	VCELL10_UV	VCELL10_OV	GPIO5_OT	VCELL10_BAL_UV	GPO5short	
bit 8	VCELL9_UV	VCELL9_OV	GPIO4_OT	VCELL9_BAL_UV	GPO4short	
bit 7	VCELL8_UV	VCELL8_OV	GPIO3_OT	VCELL8_BAL_UV	GPO3short	
bit 6	VCELL7_UV	VCELL7_OV	GPIO9_UT	VCELL7_BAL_UV	GPIO_BIST_FAIL	
bit 5	VCELL6_UV	VCELL6_OV	GPIO8_UT	VCELL6_BAL_UV		
bit 4	VCELL5_UV	VCELL5_OV	GPIO7_UT	VCELL5_BAL_UV		
bit 3	VCELL4_UV	VCELL4_OV	GPIO6_UT	VCELL4_BAL_UV		
bit 2	VCELL3_UV	VCELL3_OV	GPIO5_UT	VCELL3_BAL_UV		
bit 1	VCELL2_UV	VCELL2_OV	GPIO4_UT	VCELL2_BAL_UV		
bit 0	VCELL1_UV	VCELL1_OV	GPIO3_UT	VCELL1_BAL_UV		

frame num.	bit 17	bit 16	bit 15	bit 14	bit 13	bit 12	bit 11	bit 10	bit 9	bit 8	bit 7	bit 6	bit 5	bit 4	bit 3	bit 2	bit 1	bit 0
12	curr_sense_ovc_sleep	HeartBeatCycle			BIST_BAL_COMP_HS_FAIL							BIST_BAL_COMP_LS_FAIL						
13	curr_sense_ovc_norm	OSCFail	clk_mon_en	clk_mon_init_done	OPEN_BIST_FAIL													

Table 26. 0x7B burst command

frame num.	bit 17	bit 16	bit 15	bit 14	bit 13	bit 12	bit 11	bit 10	bit 9	bit 8	bit 7	bit 6	bit 5	bit 4	bit 3	bit 2	bit 1	bit 0
1	CoulombCounter_en	CoCouOvF	CoulombCntTime															
2	sense_plus_open	sense_minus_open	CoulombCounter_msb															
3	curr_sense_ovc_sleep	curr_sense_ovc_norm	CoulombCounter_lsb															
4	CUR_INST_synch																	
5	CUR_INST_calib																	
6	GPIO3_OT	d_rdy_gpio3	GPIO3_MEAS															
7	GPIO4_OT	d_rdy_gpio4	GPIO4_MEAS															
8	GPIO5_OT	d_rdy_gpio5	GPIO5_MEAS															
9	GPIO6_OT	d_rdy_gpio6	GPIO6_MEAS															
10	GPIO7_OT	d_rdy_gpio7	GPIO7_MEAS															
11	GPIO8_OT	d_rdy_gpio8	GPIO8_MEAS															
12	GPIO9_OT	d_rdy_gpio9	GPIO9_MEAS															
13	TrimmCalOk	d_rdy_vtref	VTREF_MEAS															
14	GPIO3_UT	GPIO4_UT	GPIO5_UT	GPIO6_UT	GPIO7_UT	GPIO8_UT	GPIO9_UT	bal_on	eof_bal	OTchip	TempChip							

4.2.4.3

Broadcast access

The Broadcast access allows sending a WRITE command over the communication bus to all the L99BM114 units. Broadcast READ is not supported.

The broadcast write is followed by an echo frame generated by the L99BM114 Master unit. This is necessary in order to avoid multiple devices accessing the communication bus simultaneously, in order to generate a conflict error.

Table 27. SPI protocol: broadcast access frame

		39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
MOSI	P.A.=1	R/W = 1	Dev ID = 0000					Address							GSW	DATA WRITE											CRC														
MISO	1	1	Special Answer (0000)					Address ECHO							GSW ECHO	DATA WRITE ECHO											CRC														

L99BM114 Master unit will answer to a broadcast READ command with the following frame:

Table 28. SPI protocol: broadcast read answer frame

	39	38	37	36	35	34	33	32	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
MOSI	P.A.=1	RW = 0	Dev ID = 0000					Address							GSW	DATA WRITE											CRC													
MISO	0	0	Special Answer (0000)					Address ECHO							GSW = 00	0x0											CRC													

Table 29. Broadcast access frame field description:

Field	Length	Value	Description
P.A.	1 bit	1	Command sent by Master unit (MOSI)
R/W	1 bit	1	Write
Dev ID	5 bit	0x0	The 0x0 address identifies broadcast commands
Address	7 bit	From 0x00 to 0x5F	Identifies the y-th register of the device
Address ECHO			
GSW	2 bit	0b00	Refer to the Section 4.2.4.5: Global Status Word (GSW)
CRC	6 bit	From 0x00 to 0x3F	CRC calculated on the [39-7] field of the frame. Refer to the Section 4.2.4.6: CRC calculation
DATA WRITE	18 bit	Depends on the register	Data to be written in the y-th register of the x-th device
DATA WRITE ECHO			
Special Answer	5 bit	0x0	Identifies the ECHO frame issued in a broadcast write protocol

4.2.4.4 Special frames

Table 30. SPI protocol special frames

Frame Type	Frame Code	Frame Issued
Default	0x0000000016	After a wake up event
Not Expected Frame	0xC1FCFFFC6C	In a Burst access, in case the MCU clocks a number of answer frames higher than the expected
Timeout Frame	0xC1FCFFFC87	In case no answer is received after the timeout TSPI_ERR.
Busy Frame	0xC1FCFFFCDE	In case the MCU sends a frame while the Master device is still transmitting or waiting for an answer (TSPI_ERR not expired)
CRC Error Frame	0xC1FCFFFD08	In case a unit configured in SPI mode (SPIEN = 1) receives a corrupted frame. When a unit is configured in isolated SPI mode (SPIEN = 0), no answer will be issued upon CRC error detection.

4.2.4.5 Global Status Word (GSW)

The global status word is made of 2 bits. The MSB (bit 25) is dedicated to the internal fault detection (all failures except the FAULTH detection), while the LSB (bit 24) implements the **Rolling counter**:

Table 31. GSW code description

GSW	Description
0X ⁽¹⁾	L99BM114 hasn't detected any internal failure (but could be propagating a failure from an upper device in the stack)
1X ⁽¹⁾	L99BM114 has detected an internal failure (and could be also propagating a failure from an upper device in the stack)

1. 'X' = don't care.

The GSW can be exploited by the MCU fault handling routine to understand which device of the daisy chain has self-detected a failure.

4.2.4.6 CRC calculation

Each frame is equipped with a 6-bit CRC code in order to guarantee information integrity. In case a unit receives a corrupted frame, it will be discarded.

Table 32. CRC calculation information

CRC	
Length	6 bit
Polynomial	$X^6 + X^4 + X^3 + 1$
Seed	0b111000

4.3 FAULT line

The FAULTL/FAULTH pin pair provides an isolated communication interface exploiting optical-isolators to implement uni-directional transmission of the failure signal from the highest L99BM114 in the stack down to the μ C.

The FAULT line main purpose is to interrupt the MCU activity in case one of the daisy-chained L99BM114 detects a failure. Recommended interrupt handling routine should implement a strategy to detect which of the several L99BM114 has self-detected a failure. This can be easily done by sending a communication frame to each L99BM114, reading back the corresponding fault bit of the **Global Status Word (GSW)**.

Any failure is propagated/generated by an upper device via its FAULTL pin. It is then sensed by a lower device on its FAULTH pin.

For the circuit and the BOM, refer to the FAULT line circuit.

4.3.1 State transitions in case of failure detection

FAULT line is functional in the following states: **Normal**, **Cyclic Wakeup**, **Silent Balancing** and **Sleep**.

Table 33. FAULT line functionality and L99BM114 states

State	Functions available	State transition in case of failure
Normal	Fault self-detection and propagation. Heartbeat generation.	None
Cyclic Wakeup	Fault self-detection (during ON phase) and propagation (always)	Go to Normal
Silent Balancing	Fault propagation	Go to Normal (in case of external failure)
Sleep	Fault propagation	Go to Normal (in case of external failure)

4.3.2 FAULT line configuration

In case a failure is detected, the FAULTL pin is driven to its active state, while if no failure occurs, the FAULTL pin holds its inactive value. Pin states depend on FAULT line configuration (selectable via the **HeartBeat_En** bit) and on L99BM114 state.

Table 34. FAULTL line configuration and FAULTL pin states

L99BM114 State	HeartBeat_En	FAULTL Inactive state	FAULTL Active state
Normal	0	Low	High
	1	Programmable PWM	High
Sleep, Silent Balancing, Cyclic Wakeup	X	Low	High (once moved to Normal)

The FAULT line stays asserted and L99BM114 is kept in **Normal** unless communication timeout occurs. The MCU is responsible for clearing any fault latch. Once all failures are cleared, the FAULTL pin returns to its inactive state.

When the heartbeat is activated, the PWM period THB_CYCLE can be programmed via the **HeartBeatCycle** register. The pulse duration in the inactive state is fixed to THB_PULSE. The heartbeat presence allows to guarantee the integrity of the FAULT line. Moreover, each L99BM114 is capable of sensing its upper companion activity by monitoring the heartbeat continuity.

In case the heartbeat is disabled, the MCU can still verify the continuity of the FAULT line by forcing the unit on the top of the chain to raise its FAULTL pin. This can be done by setting **FaultL_force = 1** via SPI.

Before moving L99BM114 moves to a low power state (**Sleep**, **Cyclic Wakeup** or **Silent Balancing**), MCU must disable the heartbeat functionality by programming **HeartBeat_En = 0**. Such an operation must be performed at least TFIL_H_LONG before sending the broadcast **GO2SLP** command, in order to avoid false fault detections (refer to the [Figure 15](#) for an example).

4.3.3 Failure sources

There are two failure sources:

- **Internal:** L99BM114 detects a failure (self-detection)
- **External:** a failure incoming from an upper unit is being input to the FAULTL pin (propagation)

4.3.3.1 Internal failure detection

If L99BM114 self-detects a failure, it drives the FAULTL pin to its active state, regardless of any activity on the FAULTL pin.

For further information about all the failures and the subsequent actions, refer to the [Section 4.11.28: Diagnostics summary](#).

4.3.3.2 External failure detection

Failure detection from external sources is sensed on FAULTL pin only if **FaultH_EN = '1'** and **Farthest_Unit = '0'**. The unit at the top of the stack does not receive any signal input to the FAULTL pin. Hence, external failure detection must be disabled by setting **FaultH_EN = '0'** and **Farthest_Unit = 1** via SPI.

For all other units, the detection criteria are adapted to the FAULT line configuration programmed by **HeartBeat_En** bit, as shown in the table below.

Table 35. FAULTH filtering strategies

L99BM114 State	Configuration	Fault detection condition	Description
Normal	HeartBeat_En = 1	FAULTH = 1 for $t > T_{FIL_H_LONG}$	Static '1' detected on FAULTH pin, FaultHline_fault = 1
		FAULTH = 0 for $t > 1.2 \cdot T_{HB_CYCLE}$	Absence of heartbeat from upper device, HeartBeat_fault = 1
	HeartBeat_En = 0	FAULTH = 1 for $t > T_{FIL_H_SHORT}$	High logic level detected on FAULTH pin, FaultHline_fault = 1
Sleep, Silent Balancing, Cyclic Wakeup	HeartBeat_En = X	FAULTH = 1 for $t > T_{FIL_H_SHORT}$	High logic level detected on FAULTH pin, FaultHline_fault = 1

The MCU at the bottom of the chain is supposed to adopt the filtering strategy described in the [Table 35](#) for failure detection.

Summary of L99BM114 fault line configurations is available in the following table:

Table 36. Summary of L99BM114 FAULT line configurations


FaultH_EN	HeartBeat_En	Farthest_Unit	L99BM114 behavior	Optimized for
0	0	0	FAULTH receiver disabled. The FAULTH line pin is considered Low whatever its value is. FAULTL operates in static logic mode and can be set static high by internal fault only	Topmost unit of the chain in static logic value configuration
0	0	1		
0	1	0		
0	1	1	FAULTH receiver disabled. The FAULTH line pin is considered Low whatever its value is. FAULTL operates in heartbeat mode and can be set static high by internal fault only	Topmost unit of the chain in heartbeat configuration
1	0	0	FAULTH receiver enabled with short filter ($T_{FIL_H_SHORT}$) because HeartBeat signal is not possible. FAULTL operates in static logic mode and can be set static high by both external and internal fault	Unit in the middle of the chain or transceiver, in static logic value configuration
1	0	1	FAULTH receiver disabled. The FAULTH line pin is considered Low whatever its value is, because the Farthest Unit considers FaultH_EN = 0 whatever FaultH_EN value is. FAULTL operates in static logic mode and can be set static high by internal fault only	Topmost unit of the chain in static logic value configuration
1	1	0	FAULTH receiver enabled with long filter ($T_{FIL_H_LONG}$) because HeartBeat signal is possible FAULTL operates in heartbeat mode and can be set static high by both external and internal fault	Unit in the middle of the chain or transceiver, in heartbeat configuration
1	1	1	FAULTH receiver disabled. The FAULTH line pin is considered Low whatever its value is because the Farthest Unit always considers FaultH_EN = 0 whatever FaultH_EN value is. FAULTL operates in heartbeat mode and can be set static high by internal fault only	Topmost unit of the chain in heartbeat configuration

When disabling heartbeat mode (**HeartBeat_En 1 à 0**) or when moving to a low power state (**GO2SLP**), L99BM114 switches immediately from $T_{FIL_H_LONG}$ to $T_{FIL_H_SHORT}$. It is MCU responsibility to handle this transition correctly, avoiding false FAULTH detection (see the Figure 15 as an example).

Follow this procedure:

1. Send a broadcast frame with **FaultH_EN = 0** and **HeartBeat_En = 0** in order to disable both heartbeat and fault receiver;
2. Wait for $T_{HB_CYCLE_000}$ (4 ms);
3. Send a broadcast frame with **FaultH_EN = 1** to re-enable the fault receiver;
4. (Optional) Send the GO2SLP command.

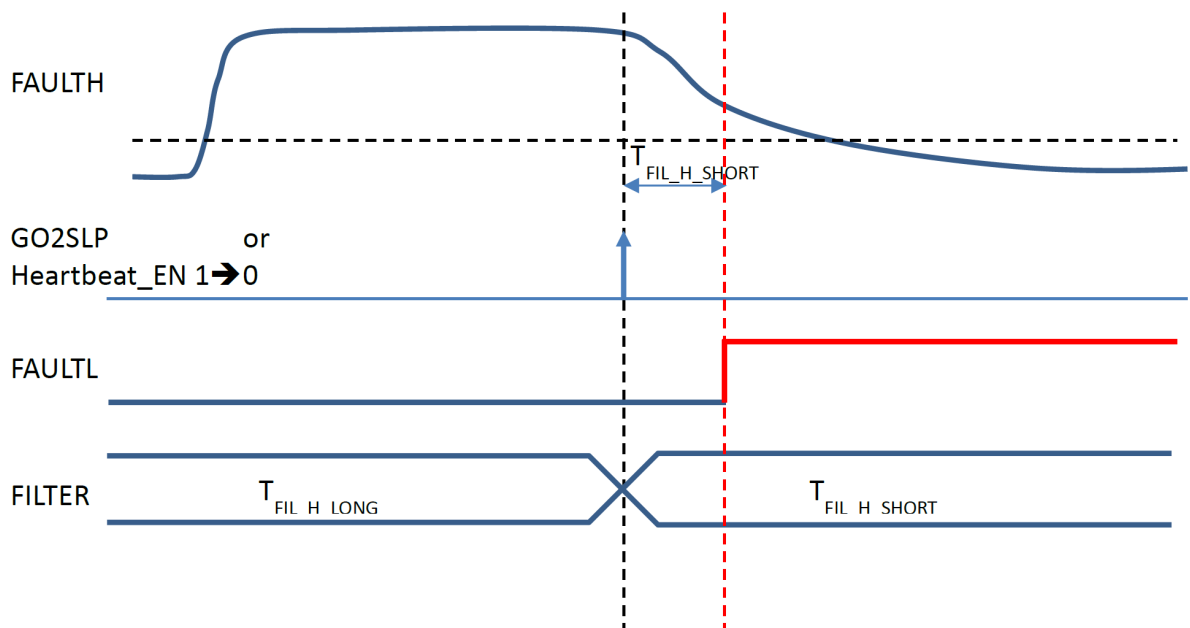Figure 15. False failure detection due to sudden heartbeat disable during the duty phase



4.3.4 Electrical parameters

All parameters are tested and guaranteed in the following conditions, unless otherwise noted:

9.6 V < VBAT < 64 V ; -40 °C < Tambient < 105 °C

Table 37. Heart beat electrical parameters

Symbol	Parameter	Test conditions	Min.	Typ.	Max.	Unit
T_{HB_PULSE}	High level HeartBeat Pulse duration when HeartBeat function is enabled	Tested by SCAN	-	500	-	µs
T_{HB_CYCLE}	Programmable HeartBeat cycle duration	Tested by SCAN HeartBeatCycle = 000	-	4	-	ms
		Tested by SCAN HeartBeatCycle = 001	-	8	-	ms
		Tested by SCAN HeartBeatCycle = 010	-	32	-	ms
		Tested by SCAN HeartBeatCycle = 011	-	128	-	ms
$T_{FIL_H_SHORT}$		Tested by SCAN	-	300	-	µs
$T_{FIL_H_LONG}$		Tested by SCAN	-	3.5	-	ms

4.4 Cell voltage measurement

A level shifter is able to report the cell voltage at the input of the low voltage cell ADC.

All cells are acquired in parallel, with no desynchronization between samples. Immunity to differential noise can be increased by tuning the acquisition window $T_{CYCLEADC}$.

The user may program the voltage acquisition window $T_{CYCLEADC}$ among 8 different values:

- The whole option set is available for both **ADC_FILTER_SOC** and **ADC_FILTER_CYCLE**. These parameters apply respectively to **On-Demand Conversions** and **Cyclic Conversions**
- The first 4 rows are available for **ADC_FILTER_SLEEP** configuration. This parameter applies to **Cyclic Conversions** performed in **Cyclic Wakeup**

For further information, refer to the [Section 4.12: Voltage conversion routine](#).

Table 38. Selection of the ADC filter values

Parameter	Code	Window amplitude (typ)	Recommended wait time T_{DATA_READY}	Minimum sample time achievable T_{SAMPLE_MIN}
$T_{CYCLEADC_000}$	000	290 μ s	380 μ s	760 μ s
$T_{CYCLEADC_001}$	001	1.16 ms	1.34 ms	2.68 ms
$T_{CYCLEADC_010}$	010	2.32 ms	2.61 ms	5.22 ms
$T_{CYCLEADC_011}$	011	9.28 ms	10.27 ms	20.54 ms
$T_{CYCLEADC_100}$	100	18.56 ms	20.48 ms	40.96 ms
$T_{CYCLEADC_101}$	101	37.12 ms	40.89 ms	81.78 ms
$T_{CYCLEADC_110}$	110	74.24 ms	81.72 ms	163.44 ms
$T_{CYCLEADC_111}$	111	148.48 ms	163.4 ms	326.8 ms

Cell measurement results are stored in **Vcellx** registers and are 16-bit wide. To obtain the result, apply the following formula:

Cell voltage measurement

$$V_{CELL} = BINARY_CODE \times V_{CELLRES} \quad (2)$$

After launching a cell conversion, the MCU should wait at least for the recommended wait time T_{DATA_READY} before retrieving the cell data. This allows L99BM114 to perform sample interpolation and calibration.

The data readiness is confirmed by the assertion of:

- **d_rdy_Vcellx** bit for **VCELLx** registers
- **d_rdy_gpiox** bit for **GPIOx_MEAS** registers
- **d_rdy_vtref** bit for **VTREF** register
- **data_ready_vbattdiv** for **VBATT_DIV** register
- **data_ready_vsum** for **vsum_batt19_0** register

Polling the data ready bit is possible but not recommended, since it causes a higher consumption from the battery stack due to communication.

Note: *If **Coulomb Counting Routine** is activated, MCU should add $T_{CYCLEADC_CUR}$ to the T_{DATA_READY} wait time in order to account for the maximum synchronization delay between voltage and current samples. For further information refer to the [Section 4.13.1: Coulomb counting](#).*

Before launching another conversion, MCU should wait at least for the recommended minimum T_{SAMPLE} in order to avoid conflict with previous conversions. In case this happens, the new request will be discarded.

Hence, given a differential signal with bandwidth **BW**:

- The MCU should sample it using at least $T_{SAMPLE} = 1 / 2BW$, in order to fulfill Nyquist criterion
 - All the $T_{CYCLEADC_xxx}$ values in the [Table 38](#), whose T_{SAMPLE_MIN} is lower than T_{SAMPLE} can be exploited in application;

- The best performances in terms of differential noise attenuation can be achieved by choosing the longest **T_{CYCLEADC_XXX}** among the valid ones.

4.4.1

Electrical parameters

All parameters are tested and guaranteed in the following conditions, unless otherwise noted:

9.6 V < V_{BAT} < 64 V; -40 °C < T_{ambient} < 105 °C; Shift between AGND, DGND, CGND, GNDREF below +/-100 mV

Table 39. Cell voltage ADC electrical characteristics

Symbol	Parameter	Test conditions	Min.	Typ.	Max.	Unit
V _{CELL}	Cell Voltage Input Measurement Range	Design info C(n), n=1-14	0.1	-	5	V
V _{CELLRES}	Cell Voltage Measurement Resolution	Design info	-	89	-	μV
I _{CELL_LEAK}	Cn leakage current	C(n), n=1-14 C(n) – C(n-1) < 6V	-	-	300	nA
V _{CELLERR0}	Accuracy V _{BAT} = C14 C0 = GND	0.1V ≤ V _{CELL} < 0.3 V -40 °C < T _J < 125 °C	-10	-	10	mV
V _{CELLERR1}		0.3 V ≤ V _{CELL} < 0.5 V -40 °C < T _J < 125 °C	-5	-	5	mV
V _{CELLERR2}		0.5 V ≤ V _{CELL} ≤ 5 V 105 °C < T _J < -125 °C	-6	-	6	mV
V _{CELLERR3}		0.5 V ≤ V _{CELL} < 3.2 V -40 °C < T _J < 105 °C	-1	-	1	mV
V _{CELLERR4}		3.2 V ≤ V _{CELL} ≤ 4.3 V -40 °C < T _J < 105 °C	-1.4	-	1.4	mV
V _{CELLERR5}		4.3 V ≤ V _{CELL} ≤ 4.7 V -40 °C < T _J < 105 °C	-1.6	-	1.6	mV
V _{CELLERR6}		4.7 V ≤ V _{CELL} ≤ 5 V -40 °C < T _J < 105 °C	-5	-	5	mV
V _{CELLERR0}	Accuracy + Drift ⁽¹⁾ V _{BAT} = C14 C0 = GND	0.1V ≤ V _{CELL} < 0.3 V -40 °C < T _J < 125 °C	-10	-	10	mV
V _{CELLERR1}		0.3 V ≤ V _{CELL} < 0.5 V -40 °C < T _J < 125 °C	-5	-	5	mV
V _{CELLERR2}		0.5 V ≤ V _{CELL} ≤ 5 V 105 °C < T _J < -125 °C	-7	-	7	mV
V _{CELLERR3}		0.5 V ≤ V _{CELL} < 3.2 V -40 °C < T _J < 105 °C	-1.4	-	1.4	mV
V _{CELLERR4}		3.2 V ≤ V _{CELL} ≤ 4.3 V -40 °C < T _J < 105 °C	-2	-	2	mV
V _{CELLERR5}		4.3 V ≤ V _{CELL} ≤ 4.7 V -40 °C < T _J < 105 °C	-2.6	-	2.6	mV
V _{CELLERR6}		4.7 V ≤ V _{CELL} ≤ 5 V -40 °C < T _J < 105 °C	-6.5	-	6.5	mV
V _{CELL_NOISE1}	T _{CYCLEADC} = T _{CYCLEADC_000}	0.1 V ≤ V _{CELL} ≤ 5 V	-	-	600	μVrms

Symbol	Parameter	Test conditions	Min.	Typ.	Max.	Unit
		-40 °C < T _J < 125 °C				
V _{CELL_NOISE2}	T _{CYCLEADC} = T _{CYCLEADC_001}	0.1 V ≤ V _{CELL} ≤ 5 V -40 °C < T _J < 125 °C	-	-	400	μVrms
V _{CELL_NOISE3}	T _{CYCLEADC} = T _{CYCLEADC_010}	0.1 V ≤ V _{CELL} ≤ 5 V -40 °C < T _J < 125 °C	-	-	200	μVrms
V _{CELL_NOISE4}	T _{CYCLEADC} = T _{CYCLEADC_011} , T _{CYCLEADC_100} , T _{CYCLEADC_101} , T _{CYCLEADC_111}	0.1 V ≤ V _{CELL} ≤ 5 V -40 °C < T _J < 125 °C	-	-	150	μVrms
T _{CYCLEADC_000}	Conversion Time to Measure all cells	Tested by SCAN	-	290	-	μs
T _{CYCLEADC_001}		Tested by SCAN	-	1.16	-	ms
T _{CYCLEADC_010}		Tested by SCAN	-	2.32	-	ms
T _{CYCLEADC_011}		Tested by SCAN	-	9.28	-	ms
T _{CYCLEADC_100}		Tested by SCAN	-	18.56	-	ms
T _{CYCLEADC_101}		Tested by SCAN	-	37.12	-	ms
T _{CYCLEADC_110}		Tested by SCAN	-	74.24	-	ms
T _{CYCLEADC_111}		Tested by SCAN	-	148.48	-	ms
V _{CELL_OV}	Cell Over-voltage Fault Threshold threshVcellOV	Application info, tested by SCAN	0	-	5.80992	V
V _{CELL_OV_RES}	Cell Over-voltage Fault Threshold Resolution	Design info	-	22.784	-	mV
V _{CELL_UV}	Cell Under-voltage Fault Threshold threshVcellUV	Application info, tested by SCAN	0	-	5.80992	V
V _{CELL_UV_RES}	Cell Under-voltage Fault Threshold Resolution	Design info	-	22.784	-	mV
V _{CELL_BAL_UV_Δ}	Cell Balance Under-voltage Fault Threshold Vcell_bal_UV_delta_thr	Application info, Tested by SCAN	0	-	5	V
V _{CELL_BAL_UV_RES}	Cell Balance Under-voltage Fault Threshold Resolution	Design info	-	22.784	-	mV
R _{LPF_OPEN}	Equivalent open resistance in series to C _n pin	Application info	-	4	-	KΩ
V _{CxOPEN}	C _x open threshold for series resistor	Application info. Maximum voltage drop on the series resistor. To prevent excessive leakage from differential filtering capacitor Tested by SCAN	-	200	-	mV
I _{OPEN_DIAG_CX}	Pulldown current used for cell open load detection	For C1..14	40	50	60	μA
I _{OPEN_DIAG_C0}		For C0	-60	-50	-40	μA
V _{ADC_CROSS_FAIL}	Critical mismatch between ADC results causing cross-check failure	Tested by SCAN	-	20	-	mV
T _{CxOPEN_SET}	Settling time for cell open diagnostics	Tested by SCAN	-	0.7	-	ms
T _{CELL_SET_01}	Settling time in respect to the first step of the Voltage Conversion Routine for balancing auto pause and VTREF dynamic enable	Tested by SCAN	-	175	-	μs

Symbol	Parameter	Test conditions	Min.	Typ.	Max.	Unit
T _{CELL_SET_10}	Settling time in respect to the first step of the Voltage Conversion Routine for balancing auto pause and VTREF dynamic enable	Tested by SCAN	-	350	-	µs
T _{CELL_SET_11}	Settling time in respect to the first step of the Voltage Conversion Routine for balancing auto pause and VTREF dynamic enable	Tested by SCAN	-	700	-	µs

1. The drift in spec accounts for the effects of both soldering and ageing. Post-soldering drift is provided on “as is” basis for information only and it has been evaluated on a limited population of 30 samples, hence subject to potential deviations. HTOL ageing was evaluated according to qualification flow.

4.5 VBAT voltage measurement

4.5.1 Total battery voltage measurement

A measurement of the total stack voltage is implemented in two ways:

- By summing the single cell voltage during the **Cell Conversion**, thus obtaining VBATT_SUM, stored in **Vsum_batt(19:0)**
- Directly converting the VBAT pin during **VBAT Conversion**, thus obtaining VBATT_MONITOR, stored in **VBAT_DIV**

Both results can be read as:

Stack voltage decoding

$$\begin{cases} V_{BATT_SUM} = BINARY_CODE \times V_{BATRES} \\ V_{BATT_MONITOR} = BINARY_CODE \times V_{BATRES} \end{cases} \quad (3)$$

Besides that, an independent analog comparator monitors the VBAT pin for fast UV/OV detection.

Refer to the [Section 4.11.2: Total battery VBAT diagnostic](#) for further information about diagnostics.

4.5.2 Electrical parameters

All parameters are tested and guaranteed in the following conditions, unless otherwise noted:

9.6 V < VBAT < 64 V; -40 °C < Tambient < 105 °C; Shift between AGND, DGND, CGND, GNDREF below +/-100 mV

Table 40. Stack voltage measurement electrical parameters

Symbol	Parameter	Test conditions	Min.	Typ.	Max.	Unit
V _{BATRES}	VBAT Voltage Measurement Resolution ⁽¹⁾	Design info 70 V full scale input, obtained by sum of all cell voltages	-	89	-	µV
V _{BAT_OV_SUM}	VBAT Over-voltage Fault Threshold ⁽²⁾ VBATT_SUM_OV_TH	Tested by SCAN Related to sum of ADC (V _{BATT_SUM})	-	70.35	-	V
V _{BAT_UV_SUM}	VBAT Under-voltage Fault Threshold ⁽²⁾ VBATT_SUM_UV_TH	Tested by SCAN Related to sum of ADC (V _{BATT_SUM})	-	10	-	V
V _{BAT_SUM_RES}	Stack voltage UV/OV resolution for Sum Of Cells	Tested by SCAN	-	364.544	-	mV
V _{BAT_DIV_RES}	VBAT Voltage Measurement Resolution Related to ADC + divider (V _{BATT_MONITOR})	Design info 70 V full scale input, Related to ADC + divider (V _{BATT_MONITOR})	-	1.33	-	mV
V _{BAT_SUM_ERR_1}	VBAT = C14	0.1 V ≤ V _{CELL} < 0.3 V	-140	-	140	mV

Symbol	Parameter	Test conditions	Min.	Typ.	Max.	Unit
		$-40\text{ }^{\circ}\text{C} < T_J < 125\text{ }^{\circ}\text{C}$				
$V_{\text{BAT_SUM_ERR_2}}$	C0 = GND Sum of cells accuracy + drift Noise contribution of each single cell is given in the Table 39	$0.3\text{ V} \leq V_{\text{CELL}} < 0.5\text{ V}$ $-40\text{ }^{\circ}\text{C} < T_J < 125\text{ }^{\circ}\text{C}$	-70	-	70	mV
$V_{\text{BAT_SUM_ERR_3}}$		$0.5\text{ V} \leq V_{\text{CELL}} < 0.5\text{ V}$ $105\text{ }^{\circ}\text{C} < T_J < -125\text{ }^{\circ}\text{C}$	-56	-	56	mV
$V_{\text{BAT_SUM_ERR_4}}$		$0.5\text{ V} \leq V_{\text{CELL}} < 3.2\text{ V}$ $-40\text{ }^{\circ}\text{C} < T_J < 105\text{ }^{\circ}\text{C}$	-20	-	20	mV
$V_{\text{BAT_SUM_ERR_5}}$		$3.2\text{ V} \leq V_{\text{CELL}} < 4.3\text{ V}$ $-40\text{ }^{\circ}\text{C} < T_J < 105\text{ }^{\circ}\text{C}$	-28	-	28	mV
$V_{\text{BAT_SUM_ERR_6}}$		$4.3\text{ V} \leq V_{\text{CELL}} < 5\text{ V}$ $-40\text{ }^{\circ}\text{C} < T_J < 105\text{ }^{\circ}\text{C}$	-36.5	-	36.5	mV
V_{BATERR}	VBAT Voltage Measurement Error	Related to ADC + divider ($V_{\text{BATT_MONITOR}}$) Tested by SCAN	-	-	$\pm 0.5\%$	VBAT
$V_{\text{BAT_CRITICAL_OV_TH}}$	VBAT Over-voltage Fault Threshold	Related to ADC + divider ($V_{\text{BATT_MONITOR}}$) Tested by SCAN	70	70.35	70.7	V
$V_{\text{BAT_OVHYS (ADC)}}$	VBAT Over-voltage Hysteresis Voltage	Related to ADC + divider ($V_{\text{BATT_MONITOR}}$) Tested by SCAN	-	200	-	mV
$V_{\text{BAT_CRITICAL_UV_TH}}$	VBAT Under-voltage Fault Threshold	Related to ADC + divider ($V_{\text{BATT_MONITOR}}$) Tested by SCAN	9.6	9.95	10.3	V
$V_{\text{BAT_UVHYS}}$	VBAT Under-voltage Hysteresis Voltage	Related to ADC + divider ($V_{\text{BATT_MONITOR}}$) Tested by SCAN	-	200	-	mV
$V_{\text{BAT_OV_WARNING (COMP)}}$	VBAT warning OV Threshold	Analog comparator related to VBAT	64	67	70	V
$V_{\text{BAT_OV_WARN_HYS (COMP)}}$	VBAT warning OV Hysteresis Voltage	Analog comparator related to VBAT	2.2	2.5	2.8	V
$V_{\text{BAT_UV_WARNING (COMP)}}$	VBAT warning UV Threshold	Analog comparator related to VBAT	10	11	12	V
$V_{\text{BAT_UV_WARN_HYS (COMP)}}$	VBAT warning UV Hysteresis Voltage	Analog comparator related to VBAT	230	300	370	mV
$T_{\text{VBAT_FILT}}$	UV/OV digital filter time	Tested in SCAN	-	300	-	μs

1. The total voltage measurement is used for detecting the OV/UV of the chip inputs. Moreover, it also provides a redundant check for functional integrity and measurement accuracy of the cell voltage. It is realized by summing the voltage of all cell ADC.
2. The OV/UV thresholds of VBAT can be set by user.

4.6 Cell current measurement

The current flowing into the external shunt resistance RSENSE is measured through a differential amplifier stage (connected between ISENSEP/ISENSE pins) feeding a 18 bits ADC.

The current conversion chain can be enabled through the **CoulombCounter_en** bit and runs in background to perform the **Coulomb Counting Routine**.

Moreover, L99BM114 also allows to synchronize the **Voltage Conversion Routine** and the **Coulomb Counting Routine** for a precise State Of Charge estimation. Everytime an on-demand voltage conversion is requested by setting **SOC = 1**, the actual conversion start is delayed until the first useful current conversion takes place. This might result in a maximum delay of **TCYCLEADC_CUR**, that must be taken into account by user SW only in case current ADC is enabled.

Synchronized current sample is available into the **CUR_INST_Synch**.

4.6.1 Cell current ADC

In the typical application, the current measurement is performed by detecting the voltage drop on a shunt resistor **RSENSE** with a value of 0.1 mΩ, with a current range of +/-1500 A. By changing the value of the shunt resistance, it is possible to cover different current ranges.

The architecture includes an ADC that converts **ISENSEP-ISENSEM** voltage information into a digital value.

The input range of current measurement is set from -1500 A to +1500 A. In the range of [-600 A, +600 A], a constant error value of ±3 A (which is 600 A × ±5‰) is set to avoid the unlimited small error near the zero current. In the range of [-1500 A, -600 A) and (+600 A, +1500 A], the accuracy of ±5‰ is chosen.

Converted value is available in **CUR_INST_calib** register and follows 2's complement notation. Cell current can be calculated according to the following formula:

Cell current measurement

$$\begin{cases} V_{ISENSE} = BINARY_CODE|_{2's\ complement} \times V_{ISENSE_RES} \\ I_{CELL} = \frac{V_{ISENSE}}{R_{SHUNT}} \end{cases} \quad (4)$$

4.6.2 Electrical parameters

All parameters are tested and guaranteed in the following conditions, unless otherwise noted:

9.6 V < VBAT < 64 V; -40 °C < Tambient < 105 °C; Shift between AGND,DGND,CGND,GNDREF below +/-100 mV

Table 41. Current measurement electrical parameters

Symbol	Parameter	Test conditions	Min.	Typ.	Max.	Unit
Freq_CURR_MEAS	Frequency of input voltage	Not tested, design info	-	-	1	kHz
T_CYCLEADC_CUR	Conversion Time for Cyclic Wakeup state operation	Not tested, design info	-	328.25	-	μs
I_CELL	Current Input Measurement Range	Application only, not to be tested (R _{shunt} = 0.1 mΩ)	-1500	-	1500	A
I_ISENSEP	ISENSEP input current	ISENSEP = 0 mV	-140	-70	-30	μA
I_ISENSEM	ISENSEM input current	ISENSEM = 0 mV	-140	-70	-30	μA
I_ISENSE_DIF	ISENSE differential current		-1	-	1	μA
I_ISENSEP_LEAK	ISENSEP input leakage current	ISENSEP = 3.3 V	-	-	300	nA
I_ISENSEM_LEAK	ISENSEM input leakage current	ISENSEM = 3.3 V	-	-	300	nA
V_CUR_SENSE	Input voltage for ADC conversion	Application info. Absolute voltage on ISENSEP/M pins. Same as operating range	-300	-	+300	mV
V_DIFF_CUR_SENSE	Differential input voltage. ISENSEP- ISENSEM range	Design info	-150	-	+150	mV
I_CELLRES	Current Measurement Resolution	±1750 A full scale input assuming 18-bit signed data output and an R _{shunt} = 0.1 mΩ	-	13.33	-	mA

Symbol	Parameter	Test conditions	Min.	Typ.	Max.	Unit
		Not tested, application info				
$V_{\text{ISENSE_RES}}$	Voltage Measurement Resolution	± 175 mV full scale input assuming 18-bit signed data output Design info	-	1.33	-	μV
I_{CELLERR}	Current Measurement Error $V_{\text{DIFF_SENSE}} = V(\text{ISENSE+}) - V(\text{ISENSE-})$	$-150 \text{ mV} \leq V_{\text{DIFF_CUR_SENSE}} < -60 \text{ mV}$, $-40^\circ\text{C} < T_J < 125^\circ\text{C}$	-0.5	-	0.5	%
I_{CELLERR2}		$-60 \text{ mV} \leq V_{\text{DIFF_CUR_SENSE}} \leq 60 \text{ mV}$ $-40^\circ\text{C} < T_J < 125^\circ\text{C}$	-0.3	-	0.3	mV
I_{CELLERR3}		$60 \text{ mV} < V_{\text{DIFF_CUR_SENSE}} \leq 150 \text{ mV}$, $-40^\circ\text{C} < T_J < 125^\circ\text{C}$	-0.5	-	0.5	%
$I_{\text{CURR_SENSE_OC_SLEEP}}$	ISENSE Over-current Fault Threshold in Cyclic Wakeup	Tested in SCAN (76.8A with $R_{\text{shunt}} = 0.1 \text{ m}\Omega$)	0	-	10.55488	mV
$I_{\text{CURR_SENSE_OC_NORM}}$	ISENSE Over-current Fault Threshold in Normal		0	-	175	mV
$I_{\text{CELL_OC_SLP_RES}}$	ISENSE Over-current Fault Threshold Resolution in Cyclic Wakeup	Application info (+/-3.4048A with $R_{\text{shunt}} = 0.1 \text{ m}\Omega$)	-	340.48	-	μV
$I_{\text{CELL_OC_NORM_RES}}$	ISENSE Over-current Fault Threshold Resolution in Normal	Application info (+/-13.3 mA with $R_{\text{shunt}} = 0.1 \text{ m}\Omega$)	-	1.33	-	μV
$V_{\text{ISENSE_OPEN_thr}}$	ISENSE pins open threshold voltage		1.5	1.7	1.9	V
$T_{\text{CURR_SENSE_OPEN_filter}}$	Open digital filter time	Tested in SCAN	-	60	-	μs


4.7 Cell balancing

The Sx and Bx_x-1 pins are used to balance the charge of the cells by discharging the ones with a higher SOC (State Of Charge). Balancing can be performed either with external or internal MOSFETs.

Cell balance drivers are powered by VBAT stack voltage. Hence, balancing is theoretically possible even at low cell voltages, with an exception for cell 14. In case $V_{\text{CELL14}} < V_{\text{CELL14_BAL_MIN}}$, the correspondent balancing circuitry will not operate properly and false overcurrent detection may occur.

4.7.1 Passive cell balancing with internal MOSFETs

The internal balancing requires only on-board resistors, and the MOSFETs which are embedded in the chip.

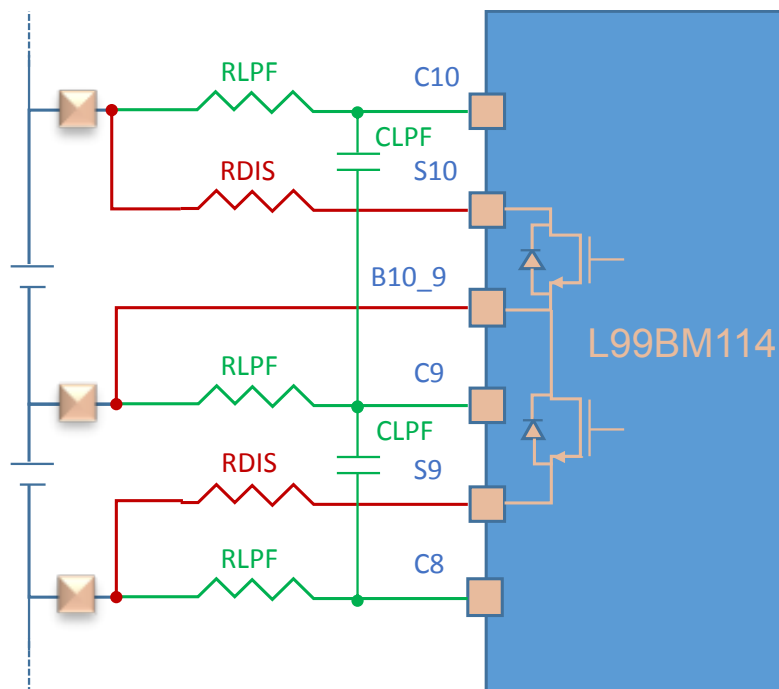Figure 16. Cell monitoring with Internal balancing


- Force lines used for balancing. Connect them as close as possible to the cell connector. This improves cell voltage sensing while balancing is ongoing, by minimizing the voltage drop on the sense lines while current is being sunk
- Sense lines used for cell voltage measurement. Keep away from noisy lines. Recommended PCB layout strategy is to route them over the first layer and shield them using the second layer as GND plane


The on-chip MOSFETs are switched on to sink a current from the cell, thus dissipating charge on RDIS. The affordable balancing current is restricted by the thermal relief on the current source circuits.

The maximum balance current on each cell is 200 mA. All cells can be balanced simultaneously, provided that junction temperature doesn't exceed the maximum operating defined in the [Table 5](#). To prevent thermal overstress, the **Die temperature diagnostic and over temperature** protections are implemented.

For further information, refer to the [Section 6.6.1: Cell balancing with internal MOSFETs](#).

4.7.2 Passive cell balancing with external MOSFETs

The external balancing includes the on-board power resistors and MOSFETs driven by the Sx pins.

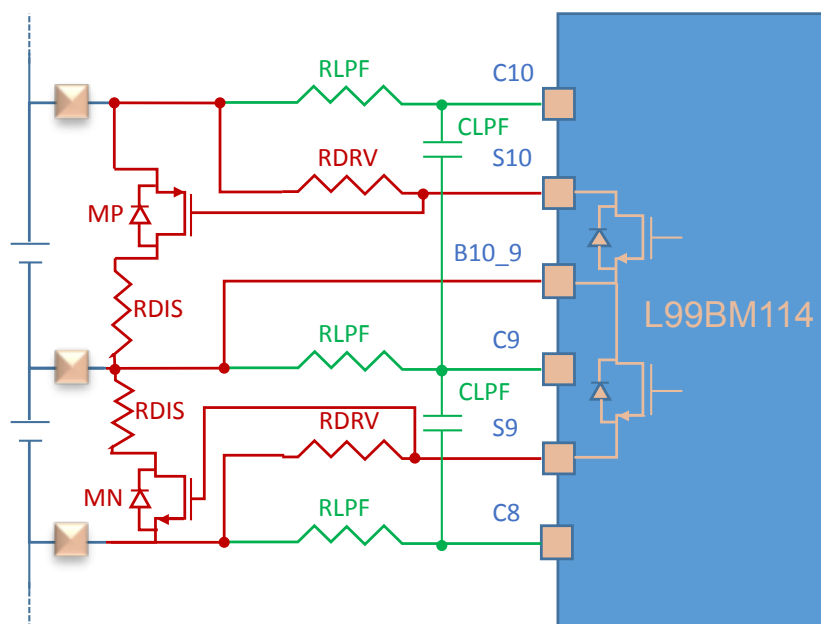Figure 17. Cell monitoring with external balancing with the mixed NMOS and PMOS transistors


- Force lines used for balancing. Connect them as close as possible to the cell connector. This improves cell voltage sensing while balancing is ongoing, by minimizing the voltage drop on the sense lines while current is being sunk
- Sense lines used for cell voltage measurement. Keep away from noisy lines. Recommended PCB layout strategy is to route them over the first layer and shield them using the second layer as GND plane

The schematic of the external balancing is shown in the figure above.

The cell stack can be divided into adjacent couples and, for each couple, the even cell is balanced by a PMOS, while the odd cell is balanced by an NMOS.

For further information refer to the [Section 6.6.2: Cell balancing with external MOSFETs](#).

4.7.3 Balancing modes

In order to allow maximum flexibility, the cell balancing process can be performed both in **Manual Balancing mode** and **Timed Balancing mode**. The configuration can be selected by acting on **Balmode** bit.

In case balancing is interrupted by **Voltage Conversion Routine**, any unfinished balancing state will be saved, and will resume once the measurement is done.

It is started writing **bal_start = 1** and **bal_stop = 0**, while it can be stopped by writing the opposite code (**bal_start = 0** and **bal_stop = 1**). Writing other codes will not alter the status of balancing. Switching from **Manual Balancing mode** to **Timed Balancing mode** will immediately apply the new settings. Balancing will not be interrupted, unless **ThrTimedBalCellxx** is set to '0' for a specific cell, causing the immediate end of balancing on it.

The **bal_on** and **eof_bal** flags indicate the status of the balancing FSM. Once a balancing task is over MCU must program **bal_start = 0** and **bal_stop = 1** in order to reset the FSM to the idle state.

Table 42. Balancing FSM

bal_on	eof_bal	Balancing Status
0	0	Idle
0	1	Balancing Over
1	0	Ongoing
1	1	Impossible

Note that balancing is performed only on enabled cells (**VCELLx_EN = 1**). Once balance is started, any change to **VCELLx_EN** or **BALx** will not disable the balancing function on the related cell. To disable balancing, **bal_start = 0** and **bal_stop = 1** must be programmed.

4.7.3.1 Manual balancing mode

The MCU directly controls the output state of S_n ($n=1 \dots 14$) individually. The start and end time of the balancing are controlled by **bal_start** and **bal_stop**.

To operate manual balancing, follow these steps:

1. Set **Balmode = 01** in the **Bal_2** register to configure manual balancing
2. Set **BALxx = 10** in the **BalCell14_7act** and **BalCell6_1act** registers to enable balancing on the selected cells
3. Set **bal_start = 1** and **bal_stop = 0** in the **Bal_1** register to start balancing

To prevent cell overdischarge due to misconfiguration, Manual Balancing does not support the **Silent Balancing** state. Any GO2SLP command or communication timeout will halt the operation and move L99BM114 to the **Sleep** mode, even if **slp_bal_conf** flag is set. Balancing will not be resumed once the device is woken up.

In order to prevent cells over-discharge, a watchdog timer **WDTimedBalTimer**, whose timeout is $T_{BAL_TIMEOUT}$, is always started at the beginning of each manual balancing start command. In case the timeout expires, the balancing is stopped and the **EoBtimeerror** latch is set. FAULT line will also be triggered.

4.7.3.2 Timed balancing mode

The device is able to balance at the same time up to 14 cells. The balancing procedure is the following:

1. Set **Balmode = 10** in the **Bal_2** register to configure timed balancing;
2. The MCU can program up to 14 registers (**ThrTimedBalCellxx**) to assign each cell with its own balancing time duration, based on the estimation of the charge to be subtracted;
3. Set **BALxx = 10** in the **BalCell14_7act** and **BalCell6_1act** registers to enable balancing on the selected cells;
4. Set **bal_start = 1** and **bal_stop = 0** in the **Bal_1** register to start balancing.

The global **TimedBalTimer** is started and the balancing operation begins. The watchdog timer **WDTimedBalTimer** starts along with the primary one. When one of the two counters reaches the threshold designated for a cell, balancing is stopped on the involved cell.

While they start balancing at the same time, each balancing driver stops when its own time-threshold elapses. When all the balancing tasks are done, the **TimedBalTimer** is reset and the eof_bal latch is set.

The balancing timer resolution can be programmed according to the **TimedBalacc** bit:

- **TimedBalacc = 0** selects the coarse resolution: 8 min 32 sec
- **TimedBalacc = 1** selects the fine resolution: 4 sec

The Table 43 lists all the available configurations for the balancing thresholds (**ThrTimedBalCellxx**).

In case GO2SLP command is received or communication timeout occurs, the behavior depends on **slp_bal_conf**:

- **slp_bal_conf = 0** means that balancing will be stopped when L99BM114 moves to a low power state (**Sleep** or **Cyclic Wakeup**)
- **slp_bal_conf = 1** means that L99BM114 moves to **Silent Balancing** state and balancing will continue.

Balancing is always stopped when moving from a low power state to **Normal**.

Table 43. Balancing threshold configuration

		TimedBalacc = 0 (coarse)	TimedBalacc = 1 (fine)
ThrTimedBalCellxx [dec]	ThrTimedBalCellxx [bin]	Threshold [hh:mm:ss]	Threshold [hh:mm:ss]
0	0000000	0:0:0	0:0:0
1	0000001	0:8:32	0:0:4
2	0000010	0:17:4	0:0:8
3	0000011	0:25:36	0:0:12
4	0000100	0:34:8	0:0:16
5	0000101	0:42:40	0:0:20
6	0000110	0:51:12	0:0:24
7	0000111	0:59:44	0:0:28
8	0001000	1:8:16	0:0:32
9	0001001	1:16:48	0:0:36
10	0001010	1:25:20	0:0:40
11	0001011	1:33:52	0:0:44
12	0001100	1:42:24	0:0:48
13	0001101	1:50:56	0:0:52
14	0001110	1:59:28	0:0:56
15	0001111	2:8:0	0:1:0
16	0010000	2:16:32	0:1:4
17	0010001	2:25:4	0:1:8
18	0010010	2:33:36	0:1:12
19	0010011	2:42:8	0:1:16
20	0010100	2:50:40	0:1:20
21	0010101	2:59:12	0:1:24
22	0010110	3:7:44	0:1:28
23	0010111	3:16:16	0:1:32
24	0011000	3:24:48	0:1:36
25	0011001	3:33:20	0:1:40

		TimedBalacc = 0 (coarse)	TimedBalacc = 1 (fine)
ThrTimedBalCellxx [dec]	ThrTimedBalCellxx [bin]	Threshold [hh:mm:ss]	Threshold [hh:mm:ss]
26	0011010	3:41:52	0:1:44
27	0011011	3:50:24	0:1:48
28	0011100	3:58:56	0:1:52
29	0011101	4:7:28	0:1:56
30	0011110	4:16:0	0:2:0
31	0011111	4:24:32	0:2:4
32	0100000	4:33:4	0:2:8
33	0100001	4:41:36	0:2:12
34	0100010	4:50:8	0:2:16
35	0100011	4:58:40	0:2:20
36	0100100	5:7:12	0:2:24
37	0100101	5:15:44	0:2:28
38	0100110	5:24:16	0:2:32
39	0100111	5:32:48	0:2:36
40	0101000	5:41:20	0:2:40
41	0101001	5:49:52	0:2:44
42	0101010	5:58:24	0:2:48
43	0101011	6:6:56	0:2:52
44	0101100	6:15:28	0:2:56
45	0101101	6:24:0	0:3:0
46	0101110	6:32:32	0:3:4
47	0101111	6:41:4	0:3:8
48	0110000	6:49:36	0:3:12
49	0110001	6:58:8	0:3:16
50	0110010	7:6:40	0:3:20
51	0110011	7:15:12	0:3:24
52	0110100	7:23:44	0:3:28
53	0110101	7:32:16	0:3:32
54	0110110	7:40:48	0:3:36
55	0110111	7:49:20	0:3:40
56	0111000	7:57:52	0:3:44
57	0111001	8:6:24	0:3:48
58	0111010	8:14:56	0:3:52
59	0111011	8:23:28	0:3:56
60	0111100	8:32:0	0:4:0
61	0111101	8:40:32	0:4:4
62	0111110	8:49:4	0:4:8
63	0111111	8:57:36	0:4:12
64	1000000	9:6:8	0:4:16
65	1000001	9:14:40	0:4:20

		TimedBalacc = 0 (coarse)	TimedBalacc = 1 (fine)
ThrTimedBalCellxx [dec]	ThrTimedBalCellxx [bin]	Threshold [hh:mm:ss]	Threshold [hh:mm:ss]
66	1000010	9:23:12	0:4:24
67	1000011	9:31:44	0:4:28
68	1000100	9:40:16	0:4:32
69	1000101	9:48:48	0:4:36
70	1000110	9:57:20	0:4:40
71	1000111	10:5:52	0:4:44
72	1001000	10:14:24	0:4:48
73	1001001	10:22:56	0:4:52
74	1001010	10:31:28	0:4:56
75	1001011	10:40:0	0:5:0
76	1001100	10:48:32	0:5:4
77	1001101	10:57:4	0:5:8
78	1001110	11:5:36	0:5:12
79	1001111	11:14:8	0:5:16
80	1010000	11:22:40	0:5:20
81	1010001	11:31:12	0:5:24
82	1010010	11:39:44	0:5:28
83	1010011	11:48:16	0:5:32
84	1010100	11:56:48	0:5:36
85	1010101	12:5:20	0:5:40
86	1010110	12:13:52	0:5:44
87	1010111	12:22:24	0:5:48
88	1011000	12:30:56	0:5:52
89	1011001	12:39:28	0:5:56
90	1011010	12:48:0	0:6:0
91	1011011	12:56:32	0:6:4
92	1011100	13:5:4	0:6:8
93	1011101	13:13:36	0:6:12
94	1011110	13:22:8	0:6:16
95	1011111	13:30:40	0:6:20
96	1100000	13:39:12	0:6:24
97	1100001	13:47:44	0:6:28
98	1100010	13:56:16	0:6:32
99	1100011	14:4:48	0:6:36
100	1100100	14:13:20	0:6:40
101	1100101	14:21:52	0:6:44
102	1100110	14:30:24	0:6:48
103	1100111	14:38:56	0:6:52
104	1101000	14:47:28	0:6:56
105	1101001	14:56:0	0:7:0

		TimedBalacc = 0 (coarse)	TimedBalacc = 1 (fine)
ThrTimedBalCellxx [dec]	ThrTimedBalCellxx [bin]	Threshold [hh:mm:ss]	Threshold [hh:mm:ss]
106	1101010	15:4:32	0:7:4
107	1101011	15:13:4	0:7:8
108	1101100	15:21:36	0:7:12
109	1101101	15:30:8	0:7:16
110	1101110	15:38:40	0:7:20
111	1101111	15:47:12	0:7:24
112	1110000	15:55:44	0:7:28
113	1110001	16:4:16	0:7:32
114	1110010	16:12:48	0:7:36
115	1110011	16:21:20	0:7:40
116	1110100	16:29:52	0:7:44
117	1110101	16:38:24	0:7:48
118	1110110	16:46:56	0:7:52
119	1110111	16:55:28	0:7:56
120	1111000	17:4:0	0:8:0
121	1111001	17:12:32	0:8:4
122	1111010	17:21:4	0:8:8
123	1111011	17:29:36	0:8:12
124	1111100	17:38:8	0:8:16
125	1111101	17:46:40	0:8:20
126	1111110	17:55:12	0:8:24
127	1111111	18:3:44	0:8:28

4.7.4 Balancing state transition

When the chip is in the NORMAL mode, the sleep conditions (communication timeout or GO2SLP command) will demand the chip entering the SLEEP or SILENT BALANCING state depending on the **slp_bal_conf**. Silent balancing is only available for **Timed Balancing mode (Balmode = 10 and slp_bal_conf = 1)**, while **Manual Balancing mode (Balmode = 01)** will be interrupted and the state transition is forced to SLEEP, regardless of **slp_bal_conf**.

If the **slp_bal_conf = 0**, whatever kind of balancing is currently being operated, it will be stopped, and then the chip will turn to the SLEEP mode.

4.7.5 Electrical parameters

All parameters are tested and guaranteed in the following conditions, unless otherwise noted:

9.6 V < VBAT < 64 V; -40 °C < Tambient < 105 °C

Table 44. Balancing electrical characteristics

Symbol	Parameter	Test conditions	Min.	Typ.	Max.	Unit
V _{BAL_OPEN}	Open load Fault Detection Voltage Threshold	Balance Power OFF (Open Load), voltage ramp on Power Drain	0.3	0.55	0.74	V
I _{PD_CB}	Output OFF Open Load Detection Pull-down Current	VDS = 5 V Balance Power OFF Open Load Detect Enabled	100	-	300	µA
I _{OUT(LKG)}	Output Leakage Current	VDS = 5 V	-	-	1	µA

Symbol	Parameter	Test conditions	Min.	Typ.	Max.	Unit
		Balance Driver disabled (current on Sn Bn,n-1) Open Load Detect Disabled				
$I_{OUT(BAL_OFF)}$	Output Driver Current	VDS = 5 V Balance Driver enabled but Power OFF (current on Sn, Bn,n-1) Open Load Detect Disabled	-35	-	5	μA
R_{DS_ON}	Drain-to-Source On Resistance	$I_{OUT} = 200\text{ mA}$ $-40\text{ }^{\circ}\text{C} < T_J < 125\text{ }^{\circ}\text{C}$ $1.8\text{ V} < V_{cell}(1..12) < 5\text{ V}$	-	-	0.8	Ω
		$I_{OUT} = 200\text{ mA}$ $-40\text{ }^{\circ}\text{C} < T_J < 125\text{ }^{\circ}\text{C}$ $3.2\text{ V} < V_{cell}(13..14) < 5\text{ V}$	-	-	0.8	Ω
		$I_{OUT} = 200\text{ mA}$ $40\text{ }^{\circ}\text{C} < T_J < 80\text{ }^{\circ}\text{C}$ (production test at room) $1.8\text{ V} < V_{cell}(13..14) < 3.2\text{ V}$	-	-	1.3	Ω
		$I_{OUT} = 200\text{ mA}$ $80\text{ }^{\circ}\text{C} < T_J < 125\text{ }^{\circ}\text{C}$ (production test at 125 $^{\circ}\text{C}$) $1.8\text{ V} < V_{cell}(13..14) < 3.2\text{ V}$	-	-	1.5	Ω
I_{BAL_OC}	Over Current Short detection Current flowing through the PowerMOS when BALx_SHORT = 1	Vcell(1..14) = 5 V, Power MOS ON, current ramp on Power Drain	250	-	-	mA
V_{BAL_CLAMP}	Static clamp	$I_{forced} = 300\text{ mA}$	10	-	13	V
$V_{CELL14_BAL_MIN}$	Minimum voltage on cell 14 that guarantees correct operation of the balance driver	Application info	-	-	1.7	V
T_{ON_BAL}	Cell Balance Driver Turn On Time	$R_L = 40\text{ }\Omega$ (that gives a 130 mA balancing current when Vcell = 5 V) from internal command to 10% of VDS	0.5	1.8	5	μs
T_{OFF_BAL}	Cell Balance Driver Turn Off Time	$R_L = 40\text{ }\Omega$ (that gives a 130 mA balancing current when Vcell = 5 V) from internal command to 90% of VDS	0.5	4.7	15	μs
T_{BAL_OL}	Open load digital filter time	Tested by SCAN	-	11	-	ms
$T_{BAL_OL_HWSC}$	Digital Filter time for HWSC	Tested by SCAN	-	4	-	μs
$T_{BAL_OVC_DEGLITCH}$	Short Detect Glitch Filter	Tested by SCAN	-	61	-	μs
$T_{BAL_TIMEOUT}$	Secondary Balancing Timer Timeout in Manual Mode	Tested by SCAN	-	600	-	min

4.8 Device regulators

All the internal blocks of the device are supplied by VBAT or VREG pin.

In order to optimize the power dissipation, to provide a suitable voltage for different functions or to decouple sensible from noisy blocks, different regulators are available.

4.8.1

Linear regulators

VREG

This is a linear regulator that uses an external MOS in order to decrease the power dissipation inside L99BM114. It acts as pre-regulator supplying all other internal regulators (VANA, VCOM, VTREF and VDIG). It is switched OFF in low power modes (Sleep, Silent Balancing, OFF phase of Cyclic Wakeup). The source of the MOS is connected to VREG pin, while the gate is connected to EXTDRV pin and the drain to VBAT. VREG regulator has to be intended for L99BM114 use only. For the regulator external components, refer to the [Table 73](#).

VREG regulator has a dedicated UV/OV diagnostic:

- if VREG voltage goes below V_{VREG_UV} threshold for a time longer than T_{VREG_FILT} a VREG undervoltage condition is latched into **VREG_UV** flag and the bootstrap is disabled;
- if VREG voltage goes over V_{VREG_OV} threshold for a time longer than T_{VREG_FILT} a VREG overvoltage condition is latched into **VREG_OV** flag.

VANA

This low drop regulator supplies all the ADC, comparators, monitors, main bandgap, current generator and other analogic blocks. An external stabilization capacitance placed close to the pin is needed (see the [Table 73](#)). VANA regulator has to be intended for L99BM114 use only.

VANA regulator has a dedicated UV/OV diagnostic:

- if VANA voltage goes below V_{VANA_UV} threshold for a time longer than T_{POR_FILT} a POR condition is triggered;
- if VANA voltage goes over V_{VANA_OV} threshold for a time longer than $T_{VANA_OV_FILT}$ a VANA overvoltage condition is latched into **VANA_OV** flag.

VANA regulator has an internal current limitation, its value is $I_{VANA_curr_lim}$.

VCOM

The isolated communication receiver/transmitter and the GPIO output buffers are supplied by this low drop regulator. An external stabilization capacitance placed close to the pin is needed (see the [Table 73](#)).

VCOM regulator can also be used to supply external loads with I_{VCOM_ext} max. current budget.

VCOM regulator has a dedicated UV/OV diagnostic:

- if VCOM voltage goes below V_{VCOM_UV} threshold for a time longer than T_{VCOM_FILT} a VCOM undervoltage condition is latched into **VCOM_UV** flag;
- if VCOM voltage goes over V_{VCOM_OV} threshold for a time longer than T_{VCOM_FILT} a VCOM overvoltage condition is latched into **VCOM_OV** flag.

VCOM regulator has an internal current limitation, its value is $I_{VCOM_curr_lim}$.

VTREF

This low drop regulator is used as precise voltage reference to supply external components such as NTCs for temperature sensing. An external stabilization capacitance placed close to the pin is needed (see the [Table 73](#)).

VTREF regulator has I_{VTREF_ext} max. current budget. The recommended application circuit in **NTC Analog Front End** guarantees that each NTC channel sinks no more than 500 μ A.

VTREF regulator has a dedicated UV/OV diagnostic:

- if VTREF voltage goes below V_{VTREF_UV} threshold for a time longer than T_{VTREF_FILT} a VTREF undervoltage condition is latched into **VTREF_UV** flag;
- if VTREF voltage goes over V_{VTREF_OV} threshold for a time longer than T_{VTREF_FILT} a VTREF overvoltage condition is latched into **VTREF_OV** flag.

VTREF regulator has an internal current limitation, its value is $I_{VTREF_curr_lim}$.

VTREF regulator is disabled by default. Its operation can be controlled via SPI according to the [Table 55](#).

VDIG


VDIG regulator has a dedicated UV/OV diagnostic:

- if VDIG voltage goes below V_{VDIG_UV} threshold for a time longer than T_{POR_FILT} a POR condition is triggered;
- if VDIG voltage goes over V_{VDIG_OV} threshold for a time longer than T_{VDIG_FILT} a VDIG overvoltage condition is latched into **VDIG_OV** flag.

For all regulators the slew rate at the power up can be evaluated considering corresponding current limitation applied on capacitance connected to related pin. The equation below estimates the startup time considering a 20% tolerance on the external stabilization capacitance (refer to the Table 73). The VREG regulator implements a soft start strategy and its startup time is $T_{VREG_SOFT_START}$.

$$\begin{cases} T_{VCOMstart} = \frac{V_{VCOM} \times C_{VCOM}}{I_{VCOM_curr_lim}} = [85 - 275] \mu s \\ T_{VTREFstart} = \frac{V_{VTREF} \times C_{VTREF}}{I_{VTREF_curr_lim}} = [85 - 270] \mu s \\ T_{VANAst} = \frac{V_{VANA} \times C_{VANA}}{I_{VANA_curr_lim}} = [65 - 260] \mu s \end{cases} \quad (5)$$

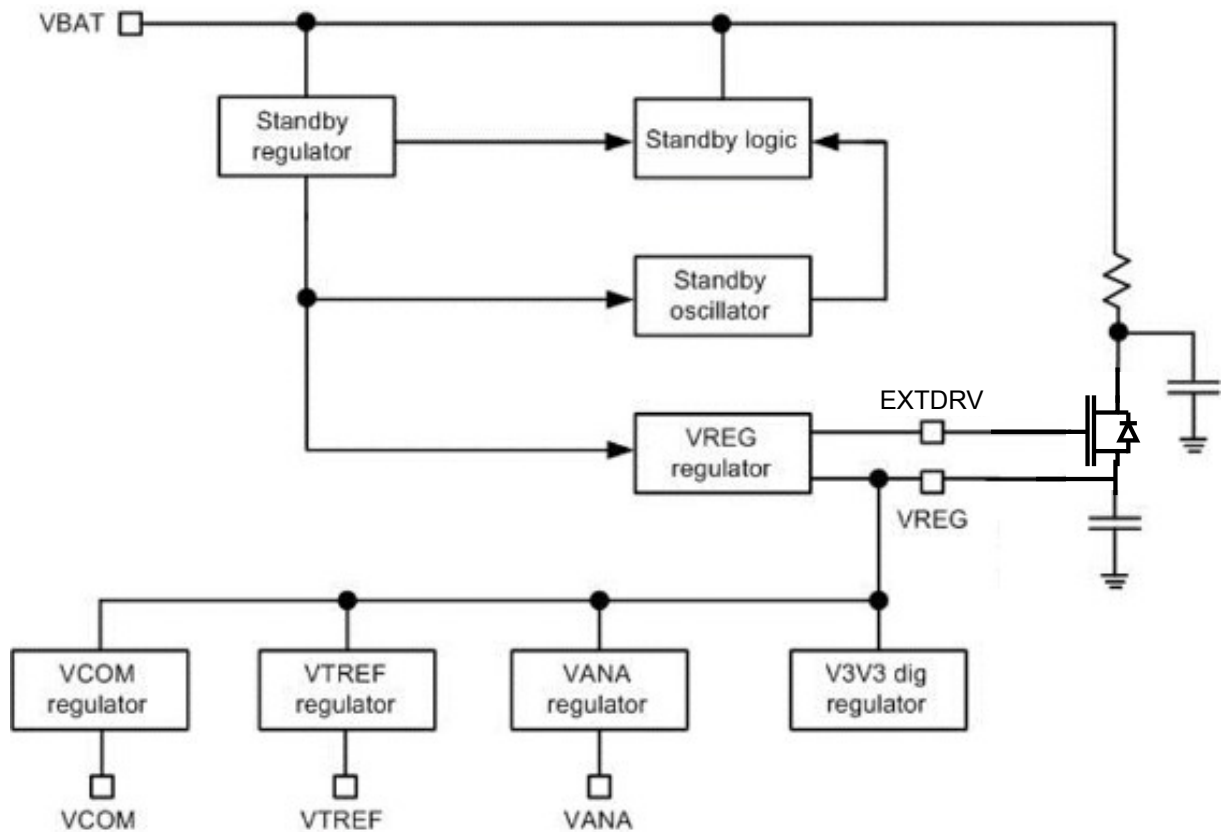Figure 18. Regular scheme



4.8.2 Bootstrap

In order to provide a supply higher than VBAT to the level shifters of the ADC, a Bootstrap solution has been implemented. The Bootstrap is automatically enabled in NORMAL mode. The bootstrap works with an external capacitance C_{CB} .

Bootstrap works in 2 phases:

- during phase 1 capacitance C_{CB} is charged between 0 V and VREG for a time long T_{RELOAD_PHASE} .
- during phase 2 the same capacitance is bootstrapped, connecting its negative terminal to VBAT. This phase lasts T_{BOOT_PHASE} .

A VREG OV condition turns off bootstrap circuit.

4.8.3 Electrical parameters

All parameters are tested and guaranteed in the following conditions, unless otherwise noted:
 $9.6\text{ V} < \text{VBAT} < 64\text{ V}$; $-40\text{ }^{\circ}\text{C} < \text{T}_{\text{ambient}} < 105\text{ }^{\circ}\text{C}$

Table 45. Regulators electrical characteristics

Symbol	Parameter	Test conditions	Min.	Typ.	Max.	Unit
V_{VREG}	Regulated voltage	Tested with external Iload = 10 mA/120 mA $9.6\text{ V} < \text{VBAT} < 70\text{ V}$	6	6.5	7	V
$V_{\text{REG_LOAD_TRAN}}$	Transient load regulation	$\text{VBAT} = 9.6/80$ $I = 10\text{ mA} \rightarrow 120\text{ mA}$	-120	-	120	mV
$R_{\text{PD_EXTDRV}}$	Pulldown resistor on EXTDRV pin	VREG regulator OFF	-	1	-	MΩ
$V_{\text{VREG_ovs}}$	Overshoot at power on	$I_{\text{VREG}} = 10\text{ mA}$ $C_{\text{VREG}} = 4.7\text{ }\mu\text{F}$	-	-	6.8	V
$T_{\text{VREG_SOFT_START}}$	Soft start time	$I_{\text{VREG}} = 10\text{ mA}$ $C_{\text{VREG}} = 4.7\text{ }\mu\text{F}$	100	300	500	μs
$V_{\text{VREG_UV}}$	Under voltage monitor		5	5.5	6	V
$V_{\text{VREG_UV_HYS}}$	Under voltage monitor hysteresis		100	-	250	mV
$V_{\text{VREG_OV}}$	Over voltage monitor		7	7.5	8	V
$V_{\text{VREG_OV_HYS}}$	Over voltage monitor hysteresis		100	-	250	mV
$T_{\text{VREG_FILT}}$	UV/OV digital filter time	Tested in SCAN	17	20	23	μs
V_{VCOM}	Regulated voltage	Tested with external Iload = 0, 10 mA $5.8\text{ V} < \text{VREG} < 7.2\text{ V}$	4.8	5	5.2	V
$I_{\text{VCOM_curr_lim}}$	Current limitation	Measured with $V_{\text{COM}} = 0\text{ V}$	50	75	100	mA
$I_{\text{VCOM_ext}}$	Current budget for supplying external components	Application info	-	-	25	mA
$V_{\text{VCOM_UV}}$	Under voltage monitor		4.25	4.5	4.75	V
$V_{\text{VCOM_UV_HYS}}$	Under voltage monitor hysteresis		100	-	250	mV
$V_{\text{VCOM_OV}}$	Over voltage monitor		5.25	5.5	5.75	V
$V_{\text{VCOM_OV_HYS}}$	Over voltage monitor hysteresis		100	-	250	mV
$T_{\text{VCOM_FILT}}$	UV/OV filter	Tested in SCAN	17	20	23	μs
V_{VTREF}	Regulated voltage	Tested with external Iload = 0, 10 mA $5.8\text{ V} < \text{VREG} < 7.2\text{ V}$	4.8	4.958	5.1	V
$V_{\text{VTREF_TEMP_SPREAD}}$	Maximum negative variation of VTREF in respect to the room temperature value	Tested with external Iload = 0 $5.8\text{ V} < \text{VREG} < 7.2\text{ V}$ Guarantee by design	-12	-	-	mV
$I_{\text{VTREF_curr_lim}}$	Current limitation	Measured with $V_{\text{TREF}} = 0\text{ V}$	50	75	100	mA
$I_{\text{VTREF_ext}}$	Current budget for supplying external components	Application info	-	-	50	mA
$V_{\text{VTREF_UV}}$	Under voltage monitor		4.25	4.5	4.75	V

Symbol	Parameter	Test conditions	Min.	Typ.	Max.	Unit
V _{VTREF_UV_HYS}	Under voltage monitor hysteresis		100	-	250	mV
V _{VTREF_OV}	Over voltage monitor		5.25	5.5	5.75	V
V _{VTREF_OV_HYS}	Under voltage monitor hysteresis		100	-	250	mV
T _{VTREF_FILT}	UV/OV filter	Tested in SCAN	17	20	23	µs
V _{ANA}	Regulated voltage	Tested with external Iload = 0, 10 mA 5.8 V < VREG < 7.2 V	3.15	3.3	3.45	V
I _{VANA_curr_lim}	Current limitation	Measured with VANA = 2.5 V	35	60	85	mA
V _{VANA_UV}	Under voltage monitor		2.6	2.75	2.9	V
V _{VANA_UV_HYS}	Under voltage monitor hysteresis		50	-	150	mV
V _{VANA_OV}	Over voltage monitor		3.6	-	4	V
V _{VANA_OV_HYS}	Over voltage monitor hysteresis		50	-	200	mV
T _{VANA_OV_FILT}	VANA Over voltage filter time	Tested in SCAN	17	20	23	µs
V _{VANA_POR_LH}	Power on reset going out of POR		2.7	2.85	3	V
V _{VANA_POR_HL}	Power on reset going into POR		2.6	2.75	2.9	V
V _{VANA_POR_HYS}	POR monitor hysteresis		50	-	150	mV
V _{DIG}	Regulated voltage	Tested with external Iload = 0 5.8 V < VREG < 7.2 V	3.15	3.3	3.45	V
V _{VDIG_UV}	Under voltage monitor		2.6	2.75	2.9	V
V _{VDIG_UV_HYS}	Under voltage monitor hysteresis		50	-	150	mV
V _{VDIG_OV}	Over voltage monitor		3.6	-	4	V
V _{VDIG_OV_HYS}	Under voltage monitor hysteresis		50	-	200	mV
T _{VDIG_FILT}	UV/OV filter	Tested in SCAN	17	20	23	µs
T _{POR_FILT}	Power on reset filter		4	-	16	µs
T _{POR_FILT_LH}			2.5	-	7.5	µs
V _{BOOT}	CAP2 voltage during bootstrap phase		VBAT+2.5 V + 840 mV (840 mV = 6.5 mA*128 µs/1 µF) Design info			V
T _{BOOT_PHASE}	Bootstrap phase duration	Tested in SCAN	-	128	-	µs
T _{RELOAD_PHASE}	Bootstrap reload phase duration	Tested in SCAN	-	17	-	µs
I _{VBOOT_CURR}	Bootstrap charge current for external cap	Bootstrap charge phase, CAP1 = 2 V, measured sinked current between CAP1 and GND	30	65	100	mA
C _{CB}	External capacitance between CAP1 and CAP2 pins	Application info	0.7	1	1.3	µF
T _{GND_LOSS_filter}	GND loss digital filter time	Tested in SCAN	-	300	-	µs

Symbol	Parameter	Test conditions	Min.	Typ.	Max.	Unit
GND_LOSS_THR	GND loss analog threshold		100	300	450	mV

4.9 General purpose I/O: GPIOs

L99BM114 provides 9 GPIOs which can be individually configured as digital I/Os or analog I/Os according to the following configuration:

Table 46. GPIO port configuration

GPIO port	Digital				Analog
	Std. GPIO	SPI	Wake up	FAULT	Absolute input
1	X			X	
2	X			X	
3	X				X
4	X				X
5	X				X
6	X				X
7	X		X		X
8	X	X			X
9	X	X			X

Note: 'X' means the option is available.

GPIO default configuration depends on the device operating mode:

Table 47. GPIO default configuration

GPIO	Type	SPIEN = 1	SPIEN = 0
GPIO1_FAULTH	Read Only	Digital Input ⁽¹⁾	
GPIO2_FAULTL	Read Only	Digital Output ⁽¹⁾	
GPIO3	Read/Write	Analog Input	
GPIO4	Read/Write	Analog Input	
GPIO5	Read/Write	Analog Input	
GPIO6	Read/Write	Analog Input	
GPIO7_WAKEUP	Read/Write	Digital Input	
GPIO8_SCK	Read/Write conditioned	Digital Input ⁽¹⁾	Analog Input
GPIO9_SDO	Read/Write conditioned	Digital Output ⁽¹⁾	Analog Input

1. Configuration is locked and cannot be changed by MCU.

4.9.1 GPIO3-9: absolute analog inputs

Seven GPIOs (from GPIO3 to GPIO9) can be used as analog inputs. They can be converted during the **Voltage conversion routine**.

This configuration is usually implemented in order to monitor external Negative Temperature Coefficient (NTCs). Refer to the [Section 6.7: NTC analog front end](#) for the application circuit.

The buffered regulator output VTREF is used to bias up to 7 NTC probes.

Depending on the measurement strategy selected via **ratio_abs_x_sel** bit, two decoding formulas apply:

GPIO measurement formula

$$\begin{cases} V_{GPIO} = BINARY_CODE * V_{GPIO_ABS_RES}, & \text{if } ratio_abs_x_sel = 0 \\ \frac{V_{GPIO}}{V_{TREF}} = BINARY_CODE * V_{GPIO_RATIO_RES}, & \text{if } ratio_abs_x_sel = 1 \end{cases} \quad (6)$$

ADCs integrity is checked by **Cell open with ADC_CROSS_CHECK = 1** and **Voltage ADC BIST**.

To cover latent failures, MCU can check if the divider is working properly by toggling the **ratio_abs_x_sel** bit:

1. MCU performs a GPIO conversion with **ratio_abs_x_sel = 0** (absolute measurement)
2. MCU manually evaluates the quantity **GPIOx_MEAS / VTREF_MEAS**
3. MCU switches to **ratio_abs_x_sel = 1** (ratiometric measurement)
4. MCU reads the ratiometric quantity in the **GPIOx_MEAS** registers and verifies that it matches the one evaluated at point 2.

Note: When toggling ratio_abs_x_sel bit, OT/UT and fast charge OT thresholds are not automatically updated, since they are supposed to be written by the MCU. Hence, unwanted failures might be flagged. For this reason, it is recommended to perform the divider integrity check at system startup.

4.9.2 GPIO1-9: standard digital I/O

The GPIO can be used in a standard digital input (Schmitt trigger) or digital Output buffer configuration, depending on the configuration defined by dedicated register.

4.9.3 GPIO8-9: SPI commands

When the L99BM114 is connected to the micro (bottom device of the chain, SPIEN pin connected to the 5 V LDO of the microcontroller), these two of the GPIO pins are used as SPI digital pins (the other 2 pins needed for SPI communication are ISOLP/M pins):

- ISOLM:CS (chip select) INPUT
- ISOLP: SDI (serial data in) INPUT
- GPIO8: SCLK (serial clock) INPUT
- GPIO9: SDO (serial data out) BUFFERED OUTPUT

4.9.4 GPIO7: wake up feature

To enable GPIO7 as wakeup source, it must be configured as digital input (**GPIO7_CONFIG = 10**) and the **GPIO7_WUP_EN** bit must be set to '1':

- Driving GPIO7 high for longer than TGPIO7_WAKEUP moves L99BM114 from a low power state to normal mode.
- A high logic value on GPIO7 pin keeps the device awake, also in case a GO2SLP command is received or communication timeout expires.
- In order to move the device to a low power state, the GPIO7 must be driven low and either a GO2SLP command must be issued or the communication timeout has to expire.

4.9.5 GPIO1-2: FAULT feature

The fault information is transmitted in the chain by optocouplers connected to GPIO pins. The L99BM114 senses the FAULT signal incoming from an upper device on **GPIO1_FAULTH** pin: external components must guarantee that the voltage on the FAULTH pin lays inside the operating range. The L99BM114 transmits the fault signal to the bottom of the chain through **GPIO2_FAULTL** pin that drives the optocoupler. External components must limit the current coming out from GPIO2 pin when a logic '1' is passed.

The FAULTL pin of the device at the bottom of the stack can be directly connected to the MCU digital input to connect a fault interrupt.

For further information about FAULT line, refer to the [Section 4.3: FAULT line](#).

Refer to the FAULT line circuit for the application circuit.

4.9.6 Electrical parameters

4.9.6.1 Analog input

All parameters are tested and guaranteed in the following conditions, unless otherwise noted:

9.6 V < VBAT < 64 V; -40 °C < Tambient < 105 °C

Table 48. GPIO electrical parameters for analog input configuration

Symbol	Parameter	Test conditions	Min.	Typ.	Max.	Unit
V _{GPIOAN}	GPIO Analog Voltage Input Measurement Range ⁽¹⁾	Design info Valid for GPIO3-9	0.1	-	5	V
V _{GPIO_ABS_RES}	GPIO Analog Voltage Input Measurement Resolution, when ratio_abs_x_sel = 0	Application Info, same as V _{CELLRES}	-	89	-	μV
V _{GPIO_RATIO_RES}	GPIO Analog Voltage Input Measurement Resolution, when ratio_abs_x_sel = 1	Application Info	-	2 ⁻¹⁶	-	-
I _{OUT_HIZ}	Analog Input leakage current	Output buffer in tristate 0 < V _{GPIO} < V _{COM} - 0.5 V	-0.5	-	0.5	μA
V _{GPIOANERR0}	Accuracy VBAT = C14 C0 = GND	0.1 V ≤ V _{CELL} < 0.3 V -40 °C < T _J < 125 °C	-10	-	10	mV
V _{GPIOANERR1}		0.3 V ≤ V _{CELL} < 0.5 V -40 °C < T _J < 125 °C	-5	-	5	mV
V _{GPIOANERR2}		0.5 V ≤ V _{CELL} ≤ 5 V 105 °C < T _J < -125 °C	-7	-	7	mV
V _{GPIOANERR3}		0.5 V ≤ V _{CELL} < 3.2 V -40 °C < T _J < 105 °C	-2	-	2	mV
V _{GPIOANERR4}		3.2 V ≤ V _{CELL} ≤ 4.3 V -40 °C < T _J < 105 °C	-2.4	-	2.4	mV
V _{GPIOANERR5}		4.3 V ≤ V _{CELL} ≤ 4.7 V -40 °C < T _J < 105 °C	-2.6	-	2.6	mV
V _{GPIOANERR6}		4.7 V ≤ V _{CELL} ≤ 5 V -40 °C < T _J < 105 °C	-6	-	6	mV
V _{GPIOANERR0}	Accuracy + Drift VBAT = C14 C0 = GND Noise contribution is V _{CELL_NOISE1}	0.1 V ≤ V _{GPIO} < 0.3 V -40 °C < T _J < 125 °C	-10	-	10	mV
V _{GPIOANERR1}		0.3 V ≤ V _{GPIO} < 0.5 V -40 °C < T _J < 125 °C	-5	-	5	mV
V _{GPIOANERR2}		0.5 V ≤ V _{GPIO} ≤ 5 V 105 °C < T _J < -125 °C	-8	-	8	mV

Symbol	Parameter	Test conditions	Min.	Typ.	Max.	Unit
$V_{\text{GPIOANERR3}}$	Accuracy + Drift $V_{\text{BAT}} = C14$ $C0 = \text{GND}$ Noise contribution is $V_{\text{CELL_NOISE1}}$	$0.5 \text{ V} \leq V_{\text{GPIO}} < 3.2 \text{ V}$ $-40^\circ\text{C} < T_J < 105^\circ\text{C}$	-2.4	-	2.4	mV
$V_{\text{GPIOANERR4}}$		$3.2 \text{ V} \leq V_{\text{GPIO}} \leq 4.3 \text{ V}$ $-40^\circ\text{C} < T_J < 105^\circ\text{C}$	-3	-	3	mV
$V_{\text{GPIOANERR5}}$		$4.3 \text{ V} \leq V_{\text{GPIO}} \leq 4.7 \text{ V}$ $-40^\circ\text{C} < T_J < 105^\circ\text{C}$	-3.6	-	3.6	mV
$V_{\text{GPIOANERR5}}$		$4.7 \text{ V} \leq V_{\text{GPIO}} \leq 5 \text{ V}$ $-40^\circ\text{C} < T_J < 105^\circ\text{C}$	-7	-	7	mV
$V_{\text{GPIOAN_UT}}$	GPIO Analog Input Over-voltage Fault Threshold ⁽²⁾ GPIO_UT_TH	Application info Used for NTC UT failure detection on GPIO3-9 Tested by SCAN	0.1	-	5	V
$V_{\text{GPIOAN_UT_RES}}$	GPIO Analog Voltage Input Over-voltage Fault Threshold Resolution ⁽²⁾ Valid when ratio_abs_x_sel = 0	Design info Valid for GPIO3-9	-	11.392	-	mV
$V_{\text{GPIOAN_UT_RATIO_RES}}$	GPIO Analog Voltage Input Over-voltage Fault Threshold Resolution ⁽²⁾ Valid when ratio_abs_x_sel = 1	Application info, valid for GPIO3-9	-	2^{-9}	-	-
$V_{\text{GPIOAN_OT}}$	GPIO Analog Input Under-voltage Fault Threshold ⁽²⁾ GPIO_OT_TH	Application info Used for NTC OT failure detection on GPIO3-9 Tested by SCAN	0.1	-	5	V
$V_{\text{GPIOAN_OT_RES}}$	GPIO Analog Voltage Input Under-voltage Fault Threshold Resolution ⁽²⁾ Valid when ratio_abs_x_sel = 0	Design info Valid for GPIO3-9	-	11.392	-	mV
$V_{\text{GPIOAN_OT_RATIO_RES}}$	GPIO Analog Voltage Input Under-voltage Fault Threshold Resolution ⁽²⁾ Valid when ratio_abs_x_sel = 1	Application info, valid for GPIO3-9	-	2^{-9}	-	-
$V_{\text{GPIO_FASTCH_OT_DELTA}}$	GPIO Analog Input Fast charge Fault Threshold Gpio_fastchg_OT_delta_thr	Design info, tested by SCAN Valid for GPIO3-9	0	-	5	V
$V_{\text{GPIO_FASTCH_OT_DELTA_RES}}$	GPIO Analog Voltage Input Fast Charge Under-voltage Fault Threshold Resolution ⁽²⁾ Valid when ratio_abs_x_sel = 0	Design info, tested by SCAN Valid for GPIO3-9	-	22.784	-	mV
$V_{\text{GPIO_FASTCH_OT_DELTA_RATIO_RES}}$	GPIO Analog Voltage Input Fast Charge Under-voltage Fault Threshold Resolution ⁽²⁾ Valid when ratio_abs_x_sel = 1	Application info, tested by SCAN Valid for GPIO3-9	-	2^{-8}	-	-
$V_{\text{GPIO_OL}}$	Open load voltage threshold	Covered by SCAN Valid for GPIO3-9	-	200	-	mV
$I_{\text{GPIO_PD_OPEN}}$	Open load pulldown current		10	-	40	μA
$T_{\text{GPIO_OPEN_SET}}$	Open load diagnostics settling time	Tested in SCAN	-	0.7	-	ms

1. The measurement range and accuracy are the same of these for cell voltage. The GPIO readout is done in a time frame non-overlapping with the readout of Cell voltage.
2. When the GPIO ports are used for temperature measurement, the OV/UV detection can be used for OT/UT (under voltage → over-temperature, over voltage → under-temperature).

4.9.6.2 Digital input

All parameters are tested and guaranteed in the following conditions, unless otherwise noted:
 $9.6\text{ V} < V_{BAT} < 64\text{ V}$; $-40\text{ }^{\circ}\text{C} < T_{\text{ambient}} < 105\text{ }^{\circ}\text{C}$

Table 49. Electrical parameters for GPIOs as digital inputs

Symbol	Parameter	Test conditions	Min.	Typ.	Max.	Unit
V_{IN_L}	Low input level	Slow rising ramp on GPIO	0	-	1.4	V
V_{IN_H}	High input level	Slow falling ramp on GPIO	1.3	-	VCOM	V
V_{IN_HYS}	Input hysteresis	Calculation $V_{IN_H} - V_{IN_L}$	0.15	-	0.4	V

4.9.6.3 Digital output

All parameters are tested and guaranteed in the following conditions, unless otherwise noted:
 $9.6\text{ V} < V_{BAT} < 64\text{ V}$; $-40\text{ }^{\circ}\text{C} < T_{\text{ambient}} < 105\text{ }^{\circ}\text{C}$


Table 50. GPIO digital output electrical characteristics

Symbol	Parameter	Test conditions	Min.	Typ.	Max.	Unit
V_{OUT_L}	GPIO1..9 Low output level	IGPIO = 2 mA	0	-	0.4	V
V_{OUT_H}	GPIO1..9 High output level	IGPIO = -2 mA	VCOM-0.4	-	VCOM	V
T_{OUT_trans9}	GPIO9 Rise and Fall time	Clload=120pF 20-80% on rising edge of VGPIO 80-20% on falling edge of VGPIO	5	-	35	ns
T_{OUT_trans}	GPIO1..8 Rise and Fall time	Clload = 120 pF 20-80% on rising edge of VGPIO 80-20% on falling edge of VGPIO	5	-	400	ns
$T_{FILT_GPIO_ECHO}$	GPIO1..9 short fault digital filter time	Tested in SCAN	-	2	-	μs

4.9.6.4 SPI specification

L99BM114 implements an SPI slave with the following timing requirements:

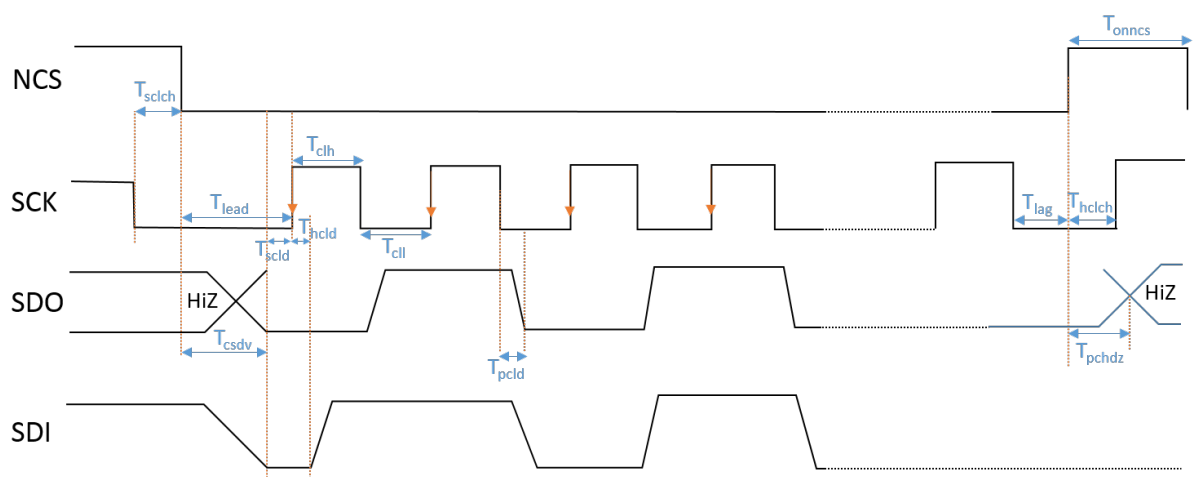Figure 19. SPI timing diagram



All parameters are tested and guaranteed in the following conditions, unless otherwise noted:
9.6 V < VBAT < 64 V; -40 °C < Tambient < 105 °C

Table 51. SPI electrical characteristics

Symbol	Parameter	Test conditions	Min.	Typ.	Max.	Unit
T _{cll}	Minimum time CLK = LOW	Application info	75	-	-	ns
T _{clh}	Minimum time CLK = HIGH	Application info	75	-	-	ns
T _{pclld}	Propagation delay (SCLK to data at SDO active)	Cload = 30 pF Valid for GPIO9	-	-	50	ns
T _{lead}	CLK change L/H after NCS = low	Application info	75	-	-	ns
T _{sclld}	SDI input setup time (CLK change H/L after SDI data valid)	Application info	15	-	-	ns
T _{hclld}	SDI input hold time (SDI data hold after CLK change H/L)	Application info	15	-	-	ns
T _{sclch}	CLK low before NCS low	Application info	75	-	-	ns
T _{lag}	CLK low before NCS high	Application info	100	-	-	ns
T _{hclch}	CLK high after NCS high	Application info	100	-	-	ns
T _{onncs}	NCS min high time	Application info	300	-	-	ns
T _{pchdz}	NCS L/H to SDO @ high impedance	Cload = 30 pF Valid for GPIO9	-	-	75	ns
T _{csdv}	NCS H/L to SDO active	Cload = 30 pF Valid for GPIO9	-	-	90	ns
F _{CLK_SPI}	CLK frequency (50% duty cycle)	Application info	0.5	-	5	MHz
T _{SPI_ERR}		Tested by SCAN	-	5	-	ms
RPULLDOWN_SPIEN	Pulldown resistance on SPIEN pin		50	-	150	kΩ

4.10 Internal Non Volatile Memory (NVM)

L99BM114 offers the possibility to store pack ID and other sensitive data in the internal NVM, up to NNVM_SIZE bit.

Three operations are available:

- **NVM Read:** this operation downloads the NVM content into RAM. This function populates **NVM_RD_x** and **NVM_CNTR** registers with the NVM content. Also trimming and calibration data will be re-downloaded.
- **NVM Write:** this operation pushes the RAM content into NVM. This function writes the NVM internal sub-sectors fetching the data from **NVM_WR_x** and **NVM_CNTR** registers. Such a procedure does not involve trimming and calibration data sectors. Since write operation is only capable of writing 'ones' and it cannot write 'zeroes', before executing a Write operation, the NVM must be erased first. A maximum of NNVM_MAX_WRITE write cycles is allowed.
- **NVM Erase:** this operation erases the NVM content, resetting all sub-sectors corresponding to **NVM_RD_x** and **NVM_CNTR** registers to '0x0'. Such a procedure does not involve trimming and calibration data sectors. After an Erase operation, only the Write operation is allowed.

The NVM must be operated in the following way: first Erase, then Write, then Read.

4.10.1 NVM read

To read the updated NVM content, simply re-trigger the NVM download performing the following procedure:

1. Set **trimming_retrigger** = '1'
2. Wait for **T_{NVM_OP}**
3. Set **trimming_retrigger** = '0'

NVM_RD_x and **NVM_CNTR** registers are now populated with the updated data downloaded from NVM. The whole NVM content, including user data, is checked against CRC upon download. In case of errors in the user sectors, the **EEPROM_CRC_ERR_CAL_RAM** flag will be set.

Note: **NVM_WR_BUSY** flag is not set during read operation. Do not perform Read operation after Erase (refer to **NVM Erase**).

4.10.2 NVM erase

To erase the NVM content corresponding to **NVM_RD_x** registers, follow this procedure:

1. Program **NVM_OPER** = 10 and **NVM_PROGRAM** = 1 to set Erase mode
2. Write first unlock key **NVM_UNLOCK_START** = 0x1572F
3. Write second unlock key **NVM_UNLOCK_START** = 0x1602F
4. Wait **TNVM_OP** (during wait time, the flag **NVM_WR_BUSY** = 1)
5. Check **NVM_WR_BUSY** = 0, indicating the operation has been successfully accomplished
6. Set **NVM_PROGRAM** = 0

After an erase, it is mandatory to perform **NVM Write** operation in order to bring the internal NVM registers to a defined state.

Note: Read operation after an Erase is strictly forbidden. It will result in populating the RAM with randomic values, including the **NVM_CNTR**. In case **NVM_CNTR** results greater than **NNVM_MAX_WRITE**, the memory will be locked and no further erase/write will be possible.

4.10.3 NVM write

To update the NVM content corresponding to **NVM_RD_x** registers with new data, follow this procedure:

1. Write the desired data into **NVM_WR_x** registers (all registers have to be populated; it is not possible to write just a selected bunch of registers). Make sure the **NVM_WR_x** registers are populated with the desired data by reading back the answers incoming from L99BM114.
2. Program **NVM_OPER** = 11 and **NVM_PROGRAM** = 1 to set Write mode
3. Write first unlock key **NVM_UNLOCK_START** = 0x1572F
4. Write second unlock key **NVM_UNLOCK_START** = 0x1602F
5. Wait **TNVM_OP** (during wait time, the flag **NVM_WR_BUSY** = 1)
6. Check **NVM_WR_BUSY** = 0, indicating the operation has been successfully accomplished
7. Set **NVM_PROGRAM** = 0

Note: Remember to perform **NVM Erase** before executing a Write operation. The Write operation actually writes only 'ones' and is not capable of writing 'zeroes'. To see the effects of Write, the **NVM_RD_x** and **NVM_CNTR** registers have to be refreshed by re-downloading the NVM content via **NVM Read** procedure.

Each writing operation increments the **NVM_CNTR** counter by '1'. In case **NVM_CNTR** saturates to **NNVM_MAX_WRITE**, writing operations are inhibited. User software shall inhibit any further Erase action in order to avoid counter reset. Only reading operations are possible.

4.10.4 Electrical parameters

Table 52. NVM electrical parameters

Symbol	Parameter	Test conditions	Min.	Typ.	Max.	Unit
N_{NVM_SIZE}	NVM size allocated for external use	Design info	-	-	112	bit
T_{NVM_OP}	Time interval required to perform each NVM operation.	Tested by SCAN	-	-	10	ms
N_{NVM_MAX_WRITE}	Maximum number of NVM writing operations allowed.	Design info	-	-	32	Write cycles

4.11 Diagnostic features

L99BM114 provides several diagnostics and integrity checks. Faults can be notified in a redundant way to the MCU: **Global Status Word (GSW)** allows failure notification over daisy chain communication lines, while **FAULT Line** exploits a second independent pair. Every detected failure is available in SPI registers.

4.11.1 Cell UV/OV diagnostic

It is possible to select the value for the Overvoltage threshold (V_{CELL_OV}) as well as for the Undervoltage threshold (V_{CELL_UV}) of the cells.

It is also possible to specify an increment ($V_{CELL_BAL_UV_Δ}$) with respect to the undervoltage threshold V_{CELL_UV} . Such an increment will determine the position of the balance Undervoltage threshold ($V_{BAL_UV_TH}$). Such a failure can be masked through dedicated SPI bit. The actual balance undervoltage threshold will be placed according to the following formula:

$$V_{BAL_UV_TH} = V_{CELL_UV} + V_{CELL_BAL_UV} \quad (7)$$

Measurements will be performed just on enabled cells.

In case of cell UV/OV ($V_{CELL_OV/UV}$):

- Corresponding fault flag is set and latched into **VCELL_OV / VCELL_UV** register
- Fault is propagated through the **FAULT Line**
- Balance is stopped in case of UV event
 - A cell UV causes the balance activity to be stopped on the whole cell stack
 - A cell balance UV causes the balance activity to be stopped only on the affected cell
- Conversion routine goes into **Configuration Override**

Balance UV ($V_{BAL_UV_TH}$) fault can be masked via **VCELLx_BAL_UV_MSK** bit. When masking is activated:

- Fault is not propagated through the **FAULT Line**
- Conversion routine doesn't go into **Configuration Override**
- **VCELLx_BAL_UV** SPI flag is not set

4.11.2 Total battery VBAT diagnostic

The total stack voltage diagnostic is implemented through three different safety mechanisms:

- Arithmetic sum of the digital information of cell ADC (within the **Cell Conversion** step of the **Voltage Conversion Routine**): V_{BATT_SUM} , stored in **Vsum_batt(19:0)**. Such a value is then compared to the digital thresholds $V_{BAT_OV(SUM)}$ or $V_{BAT_UV(SUM)}$ (programmable via the **VBATT_SUM_OV_TH** and **VBATT_SUM_UV_TH** registers). This diagnostic is intended to catch stack undervoltage and overvoltage events with a high precision.
- Direct conversion of the voltage $V_{BATT_MONITOR}$ at VBAT pin through internal resistive divider (within the **VBAT Conversion** step of the **Voltage Conversion Routine**). The result is compared to the $V_{BAT_CRITICAL_OV_TH}$ or $V_{BAT_CRITICAL_UV_TH}$ fixed thresholds. This diagnostic is mainly intended to protect the IC against AMR violation on VBAT pin. It can also be used as a redundant coherency check with the arithmetic sum of cells.
- Continuous sense of the VBAT pin voltage with a $V_{BAT_UV/OV}$ comparator, featuring fixed thresholds ($V_{BAT_OV_WARNING(OMP)}$ and $V_{BAT_UV_WARNING(OMP)}$). It is used as an "over voltage warning" or an "under voltage warning". This diagnostic is intended to provide a fast reaction against transient overvoltage and undervoltage events.

This UV/OV comparator is always enabled in order to guarantee a continuous safety check on VBAT voltage.

Refer to the [Table 40](#) for the electrical parameters.

4.11.2.1 VBAT over-voltage

The aim of this diagnostic is to detect a dangerous increase of battery voltage in order to protect the circuitry connected to VBAT.

If $VBAT > V_{BAT_OV_WARNING(OMP)}$ (for a time longer than T_{VBAT_FLT}) or $V_{BATT_SUM} > V_{BAT_OV(SUM)}$ or $V_{BATT_MONITOR} > V_{BAT_CRITICAL_OV_TH}$ the over-voltage fault is directly reported in registers and notified to the microcontroller with 3 dedicated flags, according to the Fault communication procedure.

In case of VBAT overvoltage detection during voltage conversion routine (violation of $V_{BAT_OV(SUM)}$ or $V_{BAT_CRITICAL_OV_TH}$):

- Corresponding fault flag is set and latched into register **VSUM_OV** or **VBATTCRIT_OV**
- Fault is propagated through the **FAULT Line**
- Voltage conversion routine goes into **Configuration Override**

In case of VBAT overvoltage detection through the analog comparator ($V_{BAT_OV_WARNING}$):

- Corresponding fault flag is set and latched into register **VBATT_WRN_OV**
- Fault is propagated through the **FAULT Line**
- Voltage conversion routine is not involved, since this diagnostic is not part of the routine steps

For further details see the [Section 4.12: Voltage conversion routine](#).

4.11.2.2 VBAT under-voltage

The aim of this diagnostic is to detect a decrease of battery voltage in order to notify this fault that may cause system malfunctions.

If $V_{BAT} < V_{BAT_UV_WARNING (COMP)}$ (for a time longer than T_{VBAT_FILT}) or $V_{BATT_SUM} < V_{BAT_UV (SUM)}$ or $V_{BATT_MONITOR} < V_{BAT_CRITICAL_UV_TH}$ the under-voltage fault is reported in the register and notified to the microcontroller with 3 dedicated flags, according to the Fault communication procedure.

In case of VBAT undervoltage detection during voltage conversion routine (violation of $V_{BAT_UV (SUM)}$ or $V_{BAT_CRITICAL_UV_TH}$):

- Corresponding fault flag is set and latched into register **VSUM_UV** or **VBATTCRIT_UV**
- Fault is propagated through the **FAULT Line**
- Balance is stopped on the whole stack
- Voltage conversion routine goes into **Configuration Override**

In case of VBAT undervoltage detection through the analog comparator ($V_{BAT_UV_WARNING}$):

- Corresponding fault flag is set and latched into register **VBATT_WRN_UV**
- Fault is propagated through the **FAULT Line**
- Voltage conversion routine is not involved, since this diagnostic is not part of the routine steps

In case of VBAT pin loss, the internal resistive divider will pull-down VBAT to GND, thus causing VBAT UV failure and, eventually, POR.

For further details see the [Section 4.12: Voltage conversion routine](#).

4.11.3 Cell open wire diagnostic

The cell open detection can be performed through the **Voltage Conversion Routine** and it has been studied to address several safety issues. Diagnostic strategy depends on the **ADC_CROSS_CHECK** bit.

4.11.3.1 Cell open with **ADC_CROSS_CHECK = 0**

If the **Cell Terminal Diagnostics** step of the **Voltage Conversion Routine** is executed having programmed **ADC_CROSS_CHECK = 0**, then the diagnostic addresses the following failures:

- RLPF degradation: diagnostic has been implemented to guarantee that low pass filter resistor in series to the Cx pin is below the critical limit R_{LPF_OPEN}
 - On odd cells, RLPF degradation will cause the assertion of the corresponding **CELLx_OPEN** flag
 - On even cells, flag assertion depends on the RLPF degradation
 - A small degradation ($RLPF < 24\text{ k}\Omega$ typ. with 10 nF CLPF) will only cause the assertion of the corresponding **CELLx_OPEN** flag
 - A huge degradation ($RLPF > 24\text{ k}\Omega$ typ. with 10 nF CLPF) will cause the assertion of both the corresponding **CELLx_OPEN** flag and the lower odd cell **CELLx-1_OPEN** flag
- L99BM114 C1-C14 pin open
- L99BM114 C0 pin open or PCB connector open

Diagnostic is present just on enabled cells (**VCELLx_EN = 1**).

The mechanism used for this detection is based on a diagnostic pull down current ($I_{OPEN_DIAG_CX}$), which allows to measure the voltage drop generated on the external RLPF resistance connected in series to Cx pin. If such a voltage drop is higher than V_{CxOPEN} threshold a Cx open connection is detected.

C0 open diagnostic is performed with a pullup current ($I_{OPEN_DIAG_C0}$) instead of a pulldown. A dedicated comparator senses C0 pin voltage and compares it with V_{CxOPEN} . In case $V(C0) > V_{CxOPEN}$, open detection occurs.

In case of failure detection on an enabled cell:

- Corresponding fault flag is set and latched into **CELLx_OPEN** register;

- Fault is propagated through the **FAULT Line**;
- Voltage conversion routine goes into **Configuration Override**.

For further details see the [Section 4.12: Voltage conversion routine](#).

4.11.3.2 **Cell open with ADC_CROSS_CHECK = 1**

If the **Cell Terminal Diagnostics** step of the **Voltage Conversion Routine** is executed having programmed **ADC_CROSS_CHECK = 1**, then the diagnostic addresses the following issues:

- Failure in the filtering capacitor CLPF causing an excessive leakage from cell;
- ADC error due to bandgap shift or failure on the conversion path.

The mechanism used for this detection is the same as **Cell open with ADC_CROSS_CHECK = 0**, except that no pull-down current is sunk from Cx pin.

For each pair of consecutive cells, the two corresponding ADCs, each of whom is referenced to a different bandgap, are measuring the voltage drop on the external RLPF.

Since no pull-down current is applied while measurement is on going, the voltage drop on RLPF is expected to be null, and the two measurement results should match.

If one of the two ADCs is experiencing an issue, or an excessive leakage from the CLPF is causing a voltage drop on the RLPF, a mismatch in the results occurs. If such a mismatch is greater than $V_{ADC_CROSS_FAIL}$, failure is detected.

In case of failure detection on an enabled cell:

- The **CELLx_OPEN** fault latch will be set for both cells belonging to the pair that failed;
- Fault is propagated through the **FAULT Line**;
- Voltage conversion routine goes into **Configuration Override**.

For further details see the [Section 4.12: Voltage conversion routine](#).

4.11.4 **ADC swap**

Failures on the ADCs can be detected by the **HardWare Self-Check (HWSC)** step of the **Voltage Conversion Routine**.

L99BM114 provides the means to operate a limp home functionality. For each pair of cells, in case one of the two independent ADC fails, it is still possible to perform a swap of the input MUX, in order to allow the remaining ADC measuring both cells.

User FW may activate, by means of **CROSS_ODD_EVEN_CELL**, a swap between the two ADCs of a cell pair, in order to measure even cells through ADCs dedicated to the odd cells, and vice versa. For instance, if the ADC assigned to cell Cx (even) fails, the adjacent one assigned to cell Cx-1 (odd) can be exploited to implement the limp home functionality.

Since one ADC has failed, it is not possible to perform a complete scan of the cells in a single measurement cycle. User SW must switch to the limp home routine where each scan requires two **On-Demand Conversions**:

- The first iteration will be executed having set **CROSS_ODD_EVEN_CELL = 0** (default)
 - ADCx measures cell Cx → MCU must discard the result, since ADCx is broken
 - ADCx-1 measures cell Cx-1 → Result is good
- The second iteration will be executed having set **CROSS_ODD_EVEN_CELL = 1** (swap mode)
 - ADCx measures cell Cx-1 → MCU must discard the result, since ADCx is broken
 - ADCx-1 measures cell Cx → Result is good

MCU then merges the results of the first and second iteration to obtain a set of 14 reliable values, that can be used to:

- Detect an UV/OV on cells (comparison with threshold must be made by user FW)
- Get an accurate conversion of cells even if in case of fault on a ADC. This makes State Of Charge estimation still possible
- Perform total stack voltage measurement as the sum of cells

When in limp home mode, all the ADC based diagnostics are not guaranteed. Fault tolerant time requirements can still be met by doubling the sample rate (e.g. switching from 100 ms to 50 ms sample time).

4.11.5 **PCB open diagnostic**

To detect loss of cell wire at PCB connector, the following procedure must be executed:

1. Convert even cells with an on-demand conversion.
2. Enable the diagnostic current (I_{PD_CB}) on even cells by programming **PCB_open_en_even_curr = 1**.
3. Wait for a proper settling time T_{PCB_SET} , whose minimum value and the minimum settling time can be estimated according to the following equation:

$$T_{PCB_SET} = \frac{\Delta V_{PCBmax}}{I_{PD_CBmin}} \times 2C_{LPF} = \quad (8)$$

$$(e.g.) \frac{1V}{100\mu A} \times 2 \times 10nF = 200\mu s$$

Choosing $T_{PCB_SET} = T_{CxOPEN_SET}$ is enough if using **TCYCLEADC_000** filter option to convert cells at step 1. In general, the settling time T_{PCB_SET} should be longer than **TSAMPLE_MIN** in the [Table 38](#).

4. Convert even cells with an on-demand conversion.
5. Disable the diagnostic current (I_{PD_CB}) on even cells by programming **PCB_open_en_even_curr = 0**.
6. For each cell, evaluate the difference between conversion at step 1 and step 4. If higher than a defined threshold V_{PCB_DIFF} , the PCB connection to the cell is degraded. The open resistance depends on V_{PCB_DIFF} according to the following equation:

PCB open resistance evaluation

$$R_{PCB_OPEN} = \frac{V_{PCB_DIFF}}{I_{PD_CB}} \quad (9)$$

For instance, setting $V_{PCB_DIFF} = 40$ mV allows detecting R_{PCB_OPEN} in the [133-400] Ω range.

7. Repeat all the previous steps for odd cells, using **PCB_open_en_odd_curr** to manage the diagnostic current.

Note: When performing PCB open diagnostic, other diagnostics such as **Cell UV/OV diagnostic** and **Balancing open load diagnostic** might also be triggered. They must be then discarded by user SW.

4.11.6 Voltage ADC BIST

Besides **Cell open with ADC_CROSS_CHECK = 1**, the **HardWare Self-Check (HWSC)** step of the **Voltage Conversion Routine** covers all the additional conversion paths, such as VTREF, GPIOs configured as analog input and VBAT resistive divider. As a redundant mechanism, it also covers conversion paths involving Cx pins.

If BIST result is not aligned to expectations:

- Corresponding fault flag is set and latched into register **MUX_BIST_FAIL** or **OPEN_BIST_FAIL** or **GPIO_BIST_FAIL**
- Fault is propagated through the **FAULT Line**
- Balance is stopped
- Voltage conversion routine goes into **Configuration Override**

For further details see the [Section 4.12: Voltage conversion routine](#).

4.11.7 Die temperature diagnostic and over temperature

An internal temperature sensor continuously monitors the temperature of the chip: measurement result is available in the **TempChip** register and can be evaluated according to the following formula:

Temperature Measurement Formula

$$T_j = 1.3828 \times BINARY_{CODE} + 99.733 \quad (10)$$

T_j is in $^{\circ}C$ and the binary code is in 2's complement format.

The chip prevents over-heating through an over temperature threshold TSD (which includes a hysteresis TSD_HY). Once the die temperature reaches TSD, a thermal shutdown circuit will force the chip to reduce the consumption by stopping balancing. A fault is reported to the μC with a dedicated bit **OTchip** and propagated through the **FAULT Line**. When the temperature of the die returns to a normal level, L99BM114 can resume the normal operation. Balancing is released after the μC reads **OTchip** latch.

4.11.8 Balancing open load diagnostic

During Balancing open load diagnostic a pulldown current I_{PD_CB} is applied through the balancing path, including the discharge resistor. A voltage comparator is able to detect whether the voltage $|S_n - B_n, n-1|$, in Power balance OFF condition, falls below the open load threshold V_{BAL_OPEN} . If $T_{OPEN} - T_{NOT_OPEN} > T_{BAL_OL}/2$, the open load fault (**BALx_OPEN**) is latched.

Note: T_{OPEN} is the time interval where the comparator output is high (open fault present), while T_{NOT_OPEN} is the time interval where the comparator output is low (open fault not present).


Balance comparator has a self test mechanism used to check internal integrity. In case BIST fails (**BIST_BAL_COMP_HS_FAIL** or **BIST_BAL_COMP_LS_FAIL**), balancing is stopped.

The equivalent open load resistance in series to the balancing path can be evaluated according to the following equation:

Equivalent balance open resistance estimation

$$R_{BAL_OPEN} = \frac{V_{CELL} - V_{BAL_OPEN}}{I_{PD_CB}} \quad (11)$$

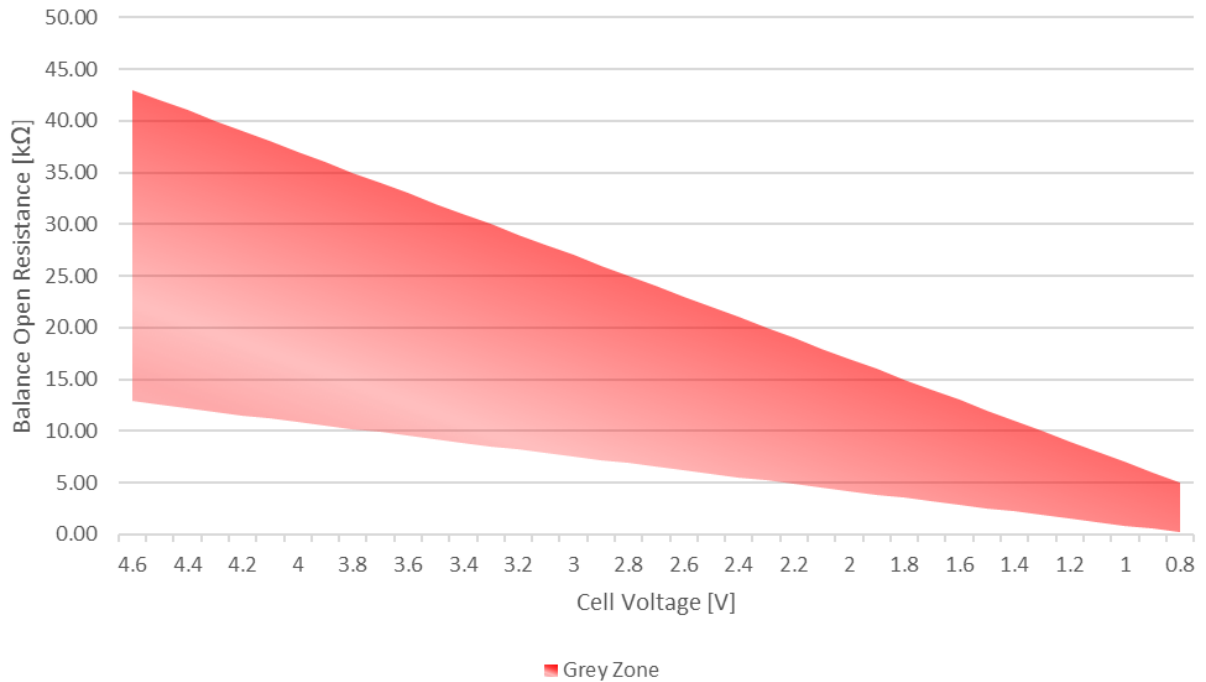Figure 20. Equivalent open resistance vs.cell voltage



In case of balance open detection on an enabled cell:

- Corresponding fault flag is set and latched into **BALX_OPEN** register
- Fault is propagated through the **FAULT Line**
- Voltage conversion routine goes into **Configuration Override**

For further details see the [Section 4.12: Voltage conversion routine](#).

This safety mechanism is also able to detect loss of cell PCB connector. In fact, if Celln positive terminal is disconnected from PCB, both BALn_OPEN and BALn+1_OPEN failures will be flagged. Two exceptions:

- If PCB connector to cell14 positive terminal (C14) is lost, only BAL14_OPEN flag will be set
- If PCB connector to cell1 negative terminal (C0), CELL0_OPEN flag will be set

4.11.9

Balancing short load diagnostic

The detection of the short load is implemented through the detection of overcurrent: if the balance current exceeds the overcurrent threshold I_{BAL_OC} for a time longer than $T_{BAL_OVC_DEGLITCH}$ a diagnostic short fault is reported. Such a diagnostic is active during Power balance ON condition.

Balance comparator has a self test mechanism used to check internal integrity. In case BIST fails (**BIST_BAL_COMP_HS_FAIL** or **BIST_BAL_COMP_LS_FAIL**), balancing is stopped.

In case of short detection:

- Corresponding fault flag is set and latched into register **BALx_SHORT**
- Fault is propagated through the **FAULT Line**
- Balance is stopped on the involved cell

Balance short detection is always active, even in low power modes (Silent Balancing, Cyclic Wakeup). When a failure is detected in low power states, balancing will be immediately stopped; however, the device will not wake up. **FAULT Line** and related fault latch will be triggered once the device has moved to **Normal**, following a wake up condition.

4.11.10 Balancing secondary timing

Secondary balancing timer is used to avoid over-discharge when manual balancing stop command communication failure or primary balancing timer function disorder happens.

4.11.11 Oscillator main clock monitoring

The oscillator used for the main logic functionalities and digital timings is monitored with a redundant oscillator that is electrically independent from the main one. Redundant oscillator is used just for safety purpose, in order to check a possible stuck condition. It can be activated by setting **clk_mon_en = 1**, and the confirmation of its activation can be read back via the **clk_mon_init_done** bit.

If a frequency difference greater than **Freq_diff** occurs between the two redundant clocks, the **OSCFail** flag is set.

4.11.11.1 Electrical parameters

All parameters are tested and guaranteed in the following conditions, unless otherwise noted:

9.6 V < VBAT < 64 V; -40 °C < Tambient < 105 °C

Main Oscillator Electrical parameters

Table 53. Main oscillator electrical parameters

Symbol	Parameter	Test conditions	Min.	Typ.	Max.	Unit.
FMAIN_OSC	Internal MAIN Oscillator frequency		15	16	17	MHz
FAUX_OSC	Internal redundant Oscillator frequency		15	16	17	MHz
Freq_diff	Delta oscillator check		-	15	-	%

4.11.12 Stand-by oscillator main clock monitoring

The Stand-by oscillator is used in both **Normal** operation and low power modes. It keeps alive all the standby functionalities, including wakeup circuitries, during **Sleep**, **Silent Balancing** and **Cyclic Wakeup**. It is also responsible for clocking the balancing activity during **Normal**, **Cyclic Wakeup** and **Silent Balancing** operation.

Thanks to this oscillator, balancing drivers can be continuously protected against a sudden short event, even in low power modes. In order to guarantee a maximum coverage against latent failures that could prevent from balancing short detection, such oscillator is monitored with a redundant oscillator that is electrically independent from the main one. Redundant oscillator is always available and is used just for safety purposes, in order to check a possible stuck condition of the main one. In case the main oscillator gets stuck, the Balancing Drivers are automatically switched off. This guarantees a fail safe operation, preventing infinite balancing duration.

If the failure happens while the device is in Normal mode, the communication with L99BM114 will still be functional.

If the failure occurs while the device is in a Low Power mode, L99BM114 will fail safely, but it will be impossible to wake up.

4.11.13 Regulator UV/OV diagnostic

VTREF, VCOM, VREG regulators have dedicated UV/OV diagnostic implementation. If one of these regulated voltages goes lower than the corresponding UV threshold or higher than the corresponding OV threshold for a time longer than the corresponding digital filter, the related fault flag is latched. Failure is then propagated through the **FAULT Line**.

In case of UV/OV detection:

- Corresponding fault flag is set and latched into **Faults1** register
- Fault is propagated through the **FAULT Line**
- In the specific case of VREG OV, Bootstrap and Balance functions are disabled
- In the specific case of VREG UV, Balance is disabled

4.11.14 Regulator self test

All power supplies are provided with a dedicate undervoltage or overvoltage test.

An analog self test on UV/OV comparators is implemented in order to guarantee high robustness safety requirements. Such a BIST can be requested via **Voltage Conversion Routine**:

- VTREF
- VCOM
- VREG

In case of wrong self test detection:

- Corresponding fault flag is set and latched into **BIST_COMP** register
- Fault is propagated through the **FAULT Line**
- Voltage conversion routine goes into **Configuration Override**

4.11.15 Regulator current limitation

Regulators VANA, VTREF, VCOM have dedicated current limitation features (refer to the [Table 45](#)).

4.11.16 GPIO short FAULT

When GPIO are configured as digital outputs, they are short-protected. GPIO output value is monitored via the input Schmitt Trigger. If it differs from the programmed **GPOxOn** for a time interval longer than $T_{\text{FILT_GPIO_ECHO}}$, the short fault is detected.

In case of short detection:

- Corresponding fault flag is set and latched into **GPOxshort** register;
- Fault is propagated through the **FAULT Line**;
- Corresponding output buffer is put in HiZ.

The output re-engagement strategy is:

1. Toggle **GPOxOn** bit;
2. Clear **GPOxshort** latch via SPI read;
3. Reprogram **GPOxOn** bit to the desired value.

GPIO short detection is not available for GPIO9 when configured as SDO in SPI mode.

4.11.17 GPIO open fault (GPIO3-9)

When GPIO are used as analog inputs, it is possible to detect if an open wire has occurred between the pin and the R_{NTC} resistances on the board. To do this, a pulldown current $I_{\text{GPIO_PD_OPEN}}$ is turned on and, after $T_{\text{GPIO_OPEN_SET}}$, GPIO voltage is converted with $T_{\text{CYCLEADC_000}}$; if converted voltage is lower than a threshold $V_{\text{GPIO_OL}}$, the open load detection occurs. This diagnostics is available just for GPIO3-9, if configured as analog input.

In case of open detection (with GPIO configured as analog input):


- Corresponding fault flag is set and latched into **GPIOX_OPEN** register;
- Fault is propagated through the **FAULT Line**;
- Voltage conversion routine goes into **Configuration Override**.

In case connection to the external NTC is lost at the PCB connector, the GPIO is pulled up to VTREF, thus causing OV/UT failure when the GPIO is converted. MCU is responsible for programming an OV/UT threshold below VTREF, in order to catch such event.

The [Figure 21](#) shows the equivalent series open resistance vs. temperature. The estimation has been made considering an NTC with $R_{25^{\circ}\text{C}}$ and $B = 3984 \text{ K}$. The calculation already accounts for the presence of the series filtering resistor and the BOM recommended in the [Table 79](#).

Estimation of the GPIO open resistance in the NTC analog front end

$$R_{\text{OPEN}} = \frac{V_{\text{TREF}} \cdot \frac{R_{\text{NTC}}(T)}{R_{\text{NTC}}(T) + R_{\text{PU}}}}{I_{\text{GPIO_PD_OPEN}}} - \frac{R_{\text{PU}} \cdot R_{\text{NTC}}(T)}{R_{\text{PU}} + R_{\text{NTC}}(T)} - R_{\text{FIL}} - \frac{V_{\text{GPIO_OL}}}{I_{\text{GPIO_PD_OPEN}}} \quad (12)$$

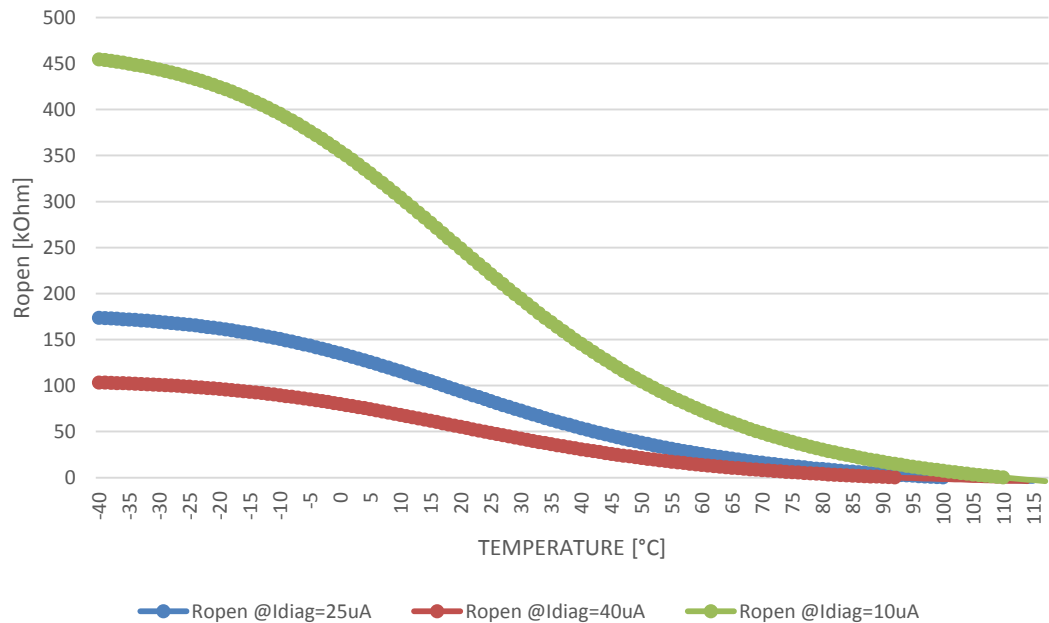Figure 21. GPIO open resistance vs. temperature


The proposed solution works fine in the whole cell operating temperature range. For very high and abnormal cell temperatures (greater than 90°C), a GPIOx_OPEN failure could be triggered when performing GPIO open diagnostic.

For further details see the [Section 4.12: Voltage conversion routine](#).

4.11.18 GPIO OT/UT (UV/OV) and fast charge OT diagnostic (GPIO3-9)

It is possible to select the value for the Overvoltage threshold (V_{GPIOAN_UT}) as well as for the Undervoltage threshold (V_{GPIOAN_OT}) of the analog voltages applied on GPIO pins. These diagnostics are available for GPIO3-9, if configured as analog input.

Dedicated OV/UT (**GPIOx_UT_TH**) and UV/OT (**GPIOx_OT_TH**) thresholds are available for each GPIO3-9. Individual OT/UT failures can be masked via dedicated **Gpiox_OT_UT_MSK** mask bit.

It is also possible to specify an increment ($V_{GPIO_FASTCH_OT_DELTA}$) of the undervoltage threshold V_{GPIOAN_OT} . This increment, programmable via **Gpio_fastchg_OT_delta_thr** bit, will determine the position of the Fast Charge Undervoltage threshold ($V_{FASTCHG_OT_TH}$). Purpose of this diagnostic is providing an additional OT threshold to help MCU understanding when switching from fast charge (high DC current) to low power charge, thus preventing excessive overheating during the battery charging process.

The failure can be masked through the **Gpiox_fastchg_OT_MSK** bit. The actual fast charge undervoltage threshold will be placed according to the following formula:

$$V_{FASTCHG_OT_TH} = V_{GPIOAN_OT} + V_{GPIO_FASTCH_OT_DELTA} \quad (13)$$

This diagnostic can be used in application to monitor Overtemperature/Undertemperature events on external NTCs: UV is related to Overtemperature while OV is related to Undertemperature.

If voltage (measured using $T_{CYCLEADC_000}$) is higher than the V_{GPIOAN_UT} threshold or lower than V_{GPIOAN_OT} threshold:

- Corresponding fault flag is set and latched into **VGPIO_OT_UT** register;
- Fault is propagated through the **FAULT Line**;
- Conversion routine goes into **Configuration Override**.

GPIO UT/OT failures can be masked via **Gpiox_OT_UT_MSK** bit. When masking is activated:

- Fault is not propagated through the **FAULT Line**;

- Conversion routine doesn't go into **Configuration Override**;
- **GPIOx_UT** and **GPIOx_OT** SPI flags are not set.

Masking OT/UT failure is useful when using analog inputs to measure sensors different than cell NTCs.

If voltage (measured using $T_{CYCLEADC_000}$) is lower than $V_{FASTCHG_OT_TH}$ threshold:

- Corresponding Fast charge OT fault flag is set and latched into **GPIO_fastchg_OT** register;
- Fault is propagated through the **FAULT Line**;
- Conversion routine goes into **Configuration Override**.

$V_{GPIO_FASTCH_OT_DELTA}$ has to be intended as a delta increase to be added to V_{GPIOAN_OT} threshold, as total Fast charge threshold must be always higher than V_{GPIO_UV} .

Fast charge stop fault can be masked via **Gpiox_fastchg_OT_MSK** bit. When masking is activated:

- Fault is not propagated through the **FAULT Line**;
- Conversion routine doesn't go into **Configuration Override**;
- **GPIOx_fastchg_OT** SPI flag is not set.

For further details refer to the [Section 4.12: Voltage conversion routine](#).

4.11.19 Current sense overcurrent

Current sense circuitry includes an overcurrent diagnostic active while the Coulomb Counter is enabled and the device is in **Cyclic Wakeup**. The diagnostic compares each sample of the current sense conversion with a digital threshold ($I_{CURR_SENSE_OC_SLEEP}$). If the converted value is higher than $I_{CURR_SENSE_OC_SLEEP}$, overcurrent detection occurs.

In case of curr sense OVC detection:

- Corresponding fault flag is set and latched into **curr_sense_ovc_sleep** register
- Fault is propagated through the **FAULT Line**
- Normal mode is entered

Failure can be masked by setting **ovc_sleep_msk = 1**.

Current sense circuitry includes also an overcurrent diagnostic active while the Coulomb Counter is enabled and the device is in **Normal**. The diagnostic compares each sample of the current sense conversion with a digital threshold ($I_{CURR_SENSE_OC_NORM}$). If the converted value is higher than $I_{CURR_SENSE_OC_NORM}$, overcurrent detection occurs.

In case of curr sense OVC detection:

- Corresponding fault flag is set and latched into **curr_sense_ovc_norm** register
- Fault is propagated through the **FAULT Line**

Failure can be masked by setting **ovc_norm_msk = 1**.

4.11.20 Current sense open diagnostic

Curr sense performs open diagnostic using internal I_{SENSEP} and I_{SENSEM} currents. If I_{SENSEP} or I_{SENSEM} pin voltages are higher than $V_{SENSEP_OPEN_th}$ or $V_{SENSEM_OPEN_th}$ threshold for a time longer than digital filter $T_{CURR_SENSE_OPEN_filter}$, current sense open detection occurs.

In case of curr sense open detection, which occurs only if coulomb counter is enabled (**CoulombCounter_en = 1**):

- Corresponding fault flag is set and latched into **sense_plus_open** or **sense_minus_open** register. Because the CSA is chopping the inputs, both latches could be alternatively set
- Fault is propagated through the **FAULT Line**

4.11.21 Reference voltage monitor

Two BG references are used in order to guarantee independency between monitor functions. For each pair of cells, the two corresponding ADCs are referenced to different bandgaps. This guarantees results independency when performing **Cell open with ADC_CROSS_CHECK = 1** diagnostic.

4.11.22 Communication integrity

The communication frame is checked and verified to ensure the information is valid.

A Cyclic Redundancy Check (CRC) is used to ensure the serial data read from L99BM114 is valid and has not been corrupted even in application environments of high noise. For further information, refer to the [Section 4.2.4.6: CRC calculation](#).

4.11.23 Communication loss detection

In case no valid communication frame is received for $t > t_{\text{SLEEP}}$ (programmable via **CommTimeout** bit), the **Comm_timeout_flt** latch is set and the device moves to **Sleep** or **Silent Balancing** state, depending on the **slp_bal_conf** bit.

In a vertical interface arrangement, any command addressing a slave unit will pass through the whole chain, thus serving the communication timeout for all the units. On the contrary, polling the Master unit is not a good strategy to refresh the communication timeout.

Communication timeout is enabled by default, but can be disabled by programming **comm_timeout_dis = '1'**. For further information about Master and Slaves, refer to the [Section 4.2.1: Communication interface selection](#).

4.11.24 Rolling counter

To improve fault coverage on unintended message repetition, a rolling counter functionality has been implemented. MCU can send a MOSI frame setting a certain value for the Rolling Counter bit (LSB of the **Global Status Word (GSW)**). L99BM114 will answer setting the same Rolling Counter value in the next communication iteration (protocol is out of frame). So that this safety mechanism to be effective, MCU should continuously toggle the rolling counter bit each MOSI frame.

4.11.25 Trimming and calibration data integrity check

This safety mechanism checks:

- The trimming and calibration data stored in internal EEPROM. This is done everytime the NVM is downloaded (**EEPROM_DWNLD_DONE 0** → **1**). In case one of the EEPROM sectors is corrupted, the following error bit will be set:
 - **EEPROM_CRC_ERR_SECT_0** covers the trimming data
 - **EEPROM_CRC_ERR_CAL_RAM** covers the calibration data used by the **Voltage Conversion Routine**
 - **EEPROM_CRC_ERR_CAL_FF** covers the calibration data used by the **Coulomb Counting Routine**
- The data loaded into RAM, everytime it is requested by the **Voltage Conversion Routine** and **Coulomb Counting Routine**. In case of error, the following bit will be set:
 - **RAM_CRC_ERR** covers the data stored in RAM
 - The RAM correct functionality is guaranteed by BIST

NVM is downloaded upon first power up. Manual connection of battery cells might cause first power up failure due to slow stack voltage increase. In such a case, NVM first download might fail. Once the device has been correctly woken up, MCU shall check all the NVM error bit and, in case of data corruption, trimming data re-download can be triggered by attaining to the following procedure:

1. Set **trimming_retrigger = '1'**;
2. Wait for **Inter-frame Delay**;
3. Set **trimming_retrigger = '0'**;
4. Check all NVM error bit to confirm trimming and calibration data integrity;
5. Wait for at least **timeout_VCOM_UP_first** before executing any conversion.

4.11.26 FAULT heart beat

The heart beat functionality of the fault line guarantees continuous fault line integrity monitoring. Moreover, it acts as a windowed watchdog, where every stacked device monitors its upper companion. Refer to the [Section 4.3: FAULT line](#) for further information.

4.11.27 GND loss detection

The device is able to check a possible AGND or DGND or CGND loss detection. If one of these ground pins has a voltage level higher than **GND_LOSS_THR** for a time longer than digital filter $T_{\text{GND_LOSS_filter}}$ the fault is confirmed and latched into one among **loss_agnd**, **loss_dgnd** or **loss_cgnd** bit.

4.11.28 Diagnostics summary

Table 54. Diagnostics summary

Category	Diagnostic name	Condition	Available in	Availability type	Actions	SPI related fields name	SPI related fields description	Masking	Masking condition
Cells	Cell UV	$V_{CELL} < V_{CELL_UV}$	Normal, Cyclic Wakeup	Periodic or On-Demand Voltage Conversion Routine	•Set Latch •Raise FAULTL •Stop balance on involved cell •Configuration override	VCellx	Measurement Result	YES	$VCELLx_EN = 0$
						VCELLx_UV	Fault Latch		
						threshVcell UV	UV threshold		
Cells	Cell Balance UV	$V_{CELL} < V_{BAL_UV_TH}$	Normal, Cyclic Wakeup	Periodic or On-Demand Voltage Conversion Routine	•Set Latch •Raise FAULTL •Stop balance on involved cell •Configuration override	VCellx	Measurement Result	YES	$VCELLx_EN = 0$ OR $VCELLx_BAL_UV_MSK = 1$
						VCELLx_BAL_UV	Fault Latch		
						Vcell_bal_UV_delta_thr	Increment in respect to threshVcell UV		
Cells	Cell OV	$V_{CELL} > V_{CELL_OV}$	Normal, Cyclic Wakeup	Periodic or On-Demand Voltage Conversion Routine	•Set Latch •Raise FAULTL •Configuration override	VCellx	Measurement Result	YES	$VCELLx_EN = 0$
						VCELLx_OV	Fault Latch		
						threshVcell OV	OV threshold		
Battery Stack	Sum Of Cells UV	$V_{BATT_SUM} < V_{BATT_UV_SUM}$	Normal, Cyclic Wakeup	Periodic or On-Demand Voltage Conversion Routine	•Set Latch •Raise FAULTL •Stop balance on whole stack •Configuration override	vsum_batt1_0	Measurement Result LSB	NO	
						vsum_batt1_9_2	Measurement Result MSB		
						VSUM_UV	Fault Latch		
						VBATT_SUM_UV_TH	UV threshold		
Battery Stack	Sum Of Cells OV	$V_{BATT_SUM} > V_{BATT_OV_SUM}$	Normal, Cyclic Wakeup	Periodic or On-Demand Voltage Conversion Routine	•Set Latch •Raise FAULTL •Configuration override	vsum_batt1_0	Measurement Result LSB	NO	
						vsum_batt1_9_2	Measurement Result MSB		
						VSUM_OV	Fault Latch		
						VBATT_SUM_OV_TH	OV threshold		

Category	Diagnostic name	Condition	Available in	Availability type	Actions	SPI related fields name	SPI related fields description	Masking	Masking condition
Battery Stack	VBAT Critical UV	$V_{BATT_MONITOR} < V_{BATT_CRITICAL_UV_TH}$	Normal, Cyclic Wakeup	Periodic or On-Demand Voltage Conversion Routine	•Set Latch •Raise FAULTL •Stop balance on whole stack •Configuration override	VBATTCRIT_UV	Fault Latch	NO	
Battery Stack	VBAT Critical OV	$V_{BATT_MONITOR} > V_{BATT_CRITICAL_OV_TH}$	Normal, Cyclic Wakeup	Periodic or On-Demand Voltage Conversion Routine	•Set Latch •Raise FAULTL •Configuration override	VBATTCRIT_OV	Fault Latch	NO	
Battery Stack	VBAT UV Warning	$V_{BAT} < V_{BAT_UV_WARNING} \text{ for } t > T_{VBAT_FLT}$	Normal, Cyclic Wakeup	Always ON	•Set Latch •Raise FAULTL	VBATT_WRN_UV	Fault Latch	NO	
BIST	VBAT UV Comparator BIST failure	VBAT Undervoltage Analog Comparator BIST Fail	Normal, Cyclic Wakeup	Periodic or On-Demand Voltage Conversion Routine	•Set Latch •Raise FAULTL	VBAT_COMP_BIST_FAIL	Fault Latch	NO	
Battery Stack	VBAT OV Warning	$V_{BAT} > V_{BAT_OV_WARNING} \text{ for } t > T_{VBAT_FLT}$	Normal, Cyclic Wakeup	Always ON	•Set Latch •Raise FAULTL	VBATT_WRN_OV	Fault Latch	NO	
BIST	VBAT OV Comparator BIST failure	VBAT Overvoltage Analog Comparator BIST Fail	Normal, Cyclic Wakeup	Periodic or On-Demand Voltage Conversion Routine	•Set Latch •Raise FAULTL	VBAT_COMP_BIST_FAIL	Fault Latch	NO	
Cells	Cell Open	$V_{Cx_SERIES_DROP} > V_{CxOPEN}$	Normal, Cyclic Wakeup	Periodic or On-Demand Voltage Conversion Routine	•Set Latch •Raise FAULTL •Configuration override	CELLx_OPEN	Fault Latch	YES	$V_{CELLx_EN} = 0$
BIST	ADCV BIST Fail	Failure converting internal reference connected to each input of the MUX	Normal, Cyclic Wakeup	Periodic or On-Demand Voltage Conversion Routine	•Set Latch •Raise FAULTL •Stop balance on whole stack •Configuration override	MUX_BIST_FAIL	Cx pin measurement failure	NO	
						OPEN_BIST_FAIL	Sx and Bx _{x-1} pin failure		
						GPIO_BIST_FAIL	GPIOx measurement failure		

Category	Diagnostic name	Condition	Available in	Availability type	Actions	SPI related fields name	SPI related fields description	Masking	Masking condition
BIST	ADCV BIST Fail	Failure converting internal reference connected to each input of the MUX	Normal, Cyclic Wakeup	Periodic or On-Demand Voltage Conversion Routine	•Set Latch •Raise FAULTL •Stop balance on whole stack •Configuration override	VTREF_BIST_FAIL	Failure converting VTREF pin	NO	
						VBAT_DIV_BIST_FAIL	Failure converting VBAT pin		
BIST	ADCV Cross Check Fail	$ V_{ADCn} - V_{ADCn+1} > V_{ADC_CROSS_FAIL}$	Normal, Cyclic Wakeup	Periodic or On-Demand Voltage Conversion Routine	•Set Latch •Raise FAULTL •Configuration override	CELLn_OPEN	Fault Latch	YES	VCELLx_EN = 0
						CELLn+1_OPEN			
Junction Temperature	IC Overtemperature	$T_j > T_{SD}$	Normal, Cyclic Wakeup	Always ON	•Set Latch •Raise FAULTL •Stop balance on whole stack	Otchip	Fault Latch	NO	
						TempChip	Measurement Result		
Balance	Balance Open	$T_{OPEN} - T_{NOT_OPEN} > T_{BAL_OL/2}$ refer to Balancing open load diagnostic	Normal, Cyclic Wakeup	Periodic or On-Demand Voltage Conversion Routine	•Set Latch •Raise FAULTL •Configuration override	BALx_OPEN	Fault Latch	YES	VCELLx_EN = 0
Balance	Balance Short	$I_{BAL} > I_{BAL_OC}$ for $t > T_{BAL_OVC_DEGLITCH}$	Normal, Cyclic Wakeup, Silent Balancing	Always ON when balance is active	•Set Latch •Raise FAULTL •Stop balance on involved cell	BALx_SHORT	Fault Latch	YES	VCELLx_EN = 0
Balance	Balancing Secondary Timer Timeout	Balancing active for $t > T_{BAL_TIMEOUT}$	Normal, Cyclic Wakeup	Always ON when balance is active	•Set Latch •Raise FAULTL •Stop balance on whole stack	EoBtimeerror	Fault Latch	NO	
BIST	Balance Open/Short Comparator BIST failure	Analog Comparator monitoring PowerMOS VDS BIST Fail	Normal, Cyclic Wakeup	Periodic or On-Demand Voltage Conversion Routine	•Set Latch •Raise FAULTL •Stop balance on involved cell	BIST_BAL_COMP_HS_FAIL	Fault Latch for Even Cells	YES	VCELLx_EN = 0
						BIST_BAL_COMP_LS_FAIL	Fault Latch for Odd Cells		
BIST	Main Oscillator Monitor Failure	Frequency mismatch between the two oscillators	Normal, Cyclic Wakeup	Always ON, when enabled	•Raise FAULTL •Set latch	clk_mon_en	Enable Bit	YES	clk_mon_en = 0
						OSCFail	Fault Status Bit		
						clk_mon_init_done	Enable Status Bit		

Category	Diagnostic name	Condition	Available in	Availability type	Actions	SPI related fields name	SPI related fields description	Masking	Masking condition
BIST	Standby Oscillator Monitor Failure	Frequency mismatch between the two oscillators	Normal, Cyclic Wakeup, Silent Balancing, Sleep	Always ON, when enabled	•Stop balance on whole stack			NO	
Regulators	VREG UV	$V_{VREG} < V_{VREG_UV}$ for $t > T_{VREG_FILT}$	Normal, Cyclic Wakeup	Always ON	•Set Latch •Raise FAULTL •Stop balance on whole stack	VREG_UV	Fault Latch	NO	
BIST	VREG UV Comparator BIST failure	VREG Undervoltage Analog Comparator BIST Fail	Normal, Cyclic Wakeup	Periodic or On-Demand Voltage Conversion Routine	•Set Latch •Raise FAULTL	VREG_COMP_BIST_FAIL	Fault Latch	NO	
Regulators	VREG OV	$V_{VREG} > V_{VREG_OV}$ for $t > T_{VREG_FILT}$	Normal, Cyclic Wakeup	Always ON	•Set Latch •Raise FAULTL •Stop balance on whole stack •Disable bootstrap	VREG_OV	Fault Latch	NO	
Regulators	VANA OV	$V_{VANA} > V_{VANA_OV}$ for $t > T_{VANA_OV_FILT}$	Normal, Cyclic Wakeup	Always ON	•Set Latch	VANA_OV	Fault Latch	NO	
Regulators	VANA UV	$V_{VANA} < V_{VANA_UV}$ for $t > T_{PDR_FILT}$	All states	Always ON	•POR			NO	
Regulators	VDIG OV	$V_{VDIG} > V_{VDIG_OV}$ for $t > T_{VDIG_FILT}$	Normal, Cyclic Wakeup	Always ON	•Set Latch	VDIG_OV	Fault Latch	NO	
Regulators	VDIG UV	$V_{VDIG} < V_{VDIG_UV}$ for $t > T_{PDR_FILT}$	All states	Always ON	•POR			NO	
BIST	VREG OV Comparator BIST failure	VREG Overvoltage Analog Comparator BIST Fail	Normal, Cyclic Wakeup	Periodic or On-Demand Voltage Conversion Routine	•Set Latch •Raise FAULTL	VREG_COMP_BIST_FAIL	Fault Latch	NO	
Regulators	VTREF UV	$V_{VTREF} < V_{VTREF_UV}$ for $t > T_{VTREF_FILT}$	Normal, Cyclic Wakeup	Always ON	•Set Latch •Raise FAULTL	VTREF_UV	Fault Latch	NO	

Category	Diagnostic name	Condition	Available in	Availability type	Actions	SPI related fields name	SPI related fields description	Masking	Masking condition
Regulators	VTREF UV	$V_{VTREF} < V_{VTREF_UV}$ for $t > T_{VTREF_FILTER}$	Normal, Cyclic Wakeup	Always ON	•Set Latch •Raise FAULTL	VTREF_MEAS	Measurement Result	NO	
BIST	VTREF UV Comparator BIST failure	VTREF Undervoltage Analog Comparator BIST Fail	Normal, Cyclic Wakeup	Periodic or On-Demand Voltage Conversion Routine	•Set Latch •Raise FAULTL	VTREF_COMP_BIST_FAIL	Fault Latch	NO	
Regulators	VTREF OV	$V_{VTREF} > V_{VTREF_OV}$ for $t > T_{VTREF_FILTER}$	Normal, Cyclic Wakeup	Always ON	•Set Latch •Raise FAULTL	VTREF_OV VTREF_MEAS	Fault Latch Measurement Result	NO	
BIST	VTREF OV Comparator BIST failure	VTREF Overvoltage Analog Comparator BIST Fail	Normal, Cyclic Wakeup	Periodic or On-Demand Voltage Conversion Routine	•Set Latch •Raise FAULTL	VTREF_COMP_BIST_FAIL	Fault Latch	NO	
Regulators	VCOM UV	$V_{VCOM} < V_{VCOM_UV}$ for $t > T_{VCOM_FILTER}$	Normal, Cyclic Wakeup	Always ON	•Set Latch •Raise FAULTL	VCOM_UV	Fault Latch	NO	
BIST	VCOM UV Comparator BIST failure	VCOM Undervoltage Analog Comparator BIST Fail	Normal, Cyclic Wakeup	Periodic or On-Demand Voltage Conversion Routine	•Set Latch •Raise FAULTL	VCOM_COMP_BIST_FAIL	Fault Latch	NO	
Regulators	VCOM OV	$V_{VCOM} > V_{VCOM_OV}$ for $t > T_{VCOM_FILTER}$	Normal, Cyclic Wakeup	Always ON	•Set Latch •Raise FAULTL	VCOM_OV	Fault Latch	NO	
BIST	VCOM OV Comparator BIST failure	VCOM Overvoltage Analog Comparator BIST Fail	Normal, Cyclic Wakeup	Periodic or On-Demand Voltage Conversion Routine	•Set Latch •Raise FAULTL	VCOM_COMP_BIST_FAIL	Fault Latch	NO	
GPIO	GPIO Short	$GPO_{xN} \neq GPI_{xN}$ for $t > T_{FILT_GPIO_ECHO}$	Normal, Cyclic Wakeup	Always ON, when GPIO configured as Digital Output	•Set Latch •Raise FAULTL •Put GPIO in HiZ	GPOxshort	Fault Latch	YES	$GPI_{Ox_CONF} \neq 11$
GPIO	GPIO Open	$V_{GPIO} < V_{GPIO_OL}$	Normal, Cyclic Wakeup	Periodic or On-Demand Voltage Conversion Routine	•Set Latch •Raise FAULTL •Configuration override	GPI_{Ox_OPEN}	Fault Latch	YES	$GPI_{Ox_CONF} \neq 00$

Category	Diagnostic name	Condition	Available in	Availability type	Actions	SPI related fields name	SPI related fields description	Masking	Masking condition
				Only for GPIO3-9					
GPIO	GPIO OT	$V_{GPIO} < V_{GPIOAN_OT}$	Normal, Cyclic Wakeup	Periodic or On-Demand Voltage Conversion Routine Only for GPIO3-9	•Set Latch •Raise FAULTL •Configuration override	GPIO_OT_TH	OT threshold	YES	GPIOx_CO NFIG != 00 OR Gpiox_OT_UT_MSK = 1
						GPIOx_OT	Fault Latch		
						GPIOx_MEAS	Measurement Result		
GPIO	GPIO Fast Charge OT	$V_{GPIO} < V_{FASTCHG_OT_TH}$	Normal, Cyclic Wakeup	Periodic or On-Demand Voltage Conversion Routine Only for GPIO3-9	•Set Latch •Raise FAULTL •Configuration override	Gpio_fastchg_OT_delta_thr	Increment in respect to GPIO_OT_TH	YES	GPIOx_CO NFIG != 00 OR Gpiox_fastchg_OT_MSK = 1
						GPIOx_fastchg_OT	Fault Latch		
						GPIOx_MEAS	Measurement Result		
GPIO	GPIO UT	$V_{GPIO} > V_{GPIOAN_UT}$	Normal, Cyclic Wakeup	Periodic or On-Demand Voltage Conversion Routine Only for GPIO3-9	•Set Latch •Raise FAULTL •Configuration override	GPIO_UT_TH	UT threshold	YES	GPIOx_CO NFIG != 00 OR Gpiox_OT_UT_MSK = 1
						GPIOx_UT	Fault Latch		
						GPIOx_MEAS	Measurement Result		
GPIO	Incoming Fault	FAULTH = 1 for $t > T_{FIL_H_LONG}$	Normal, Cyclic Wakeup, Silent Balancing, Sleep	Always ON	•Set Latch •Raise FAULTL	FaultHline_fault	Fault Latch	YES	HeartBeat_En = 0
		FAULTH = 1 for $t > T_{FIL_H_SHORT}$							OR FaultH_EN = 0
GPIO	Absence Of Heartbeat	FAULTH = 0 for $t > 1.2 \cdot T_{HB_CYCLE}$	Normal	Always ON	•Set Latch •Raise FAULTL	HeartBeat_fault	Fault Latch	YES	HeartBeat_En = 0 OR FaultH_EN = 0
Coulomb Counter	CSA Open	$V_{ISENSEP} > V_{ISENSEP_OPEN_TH}$ for $t > T_{CURR_SENSE_OPEN_FILTER}$ OR	Normal, Cyclic Wakeup	Always ON	•Set Latch •Raise FAULTL	sense_plus_open	Fault Latch	YES	CoulombCounter_en = 0
						sense_minus_open	Fault Latch		

Category	Diagnostic name	Condition	Available in	Availability type	Actions	SPI related fields name	SPI related fields description	Masking	Masking condition
Coulomb Counter	CSA Open	$V_{ISENSEM} > V_{ISENSEM_OPEN_TH}$ for $t > T_{CURR_SENSE_OPEN_FILTER}$	Normal, Cyclic Wakeup	Always ON	•Set Latch •Raise FAULTL			YES	CoulombCounter_en = 0
Coulomb Counter	OC Sleep	$I_{SENSE} > I_{CURR_SENSE_OC_SLEEP}$	Cyclic Wakeup	Always ON in the duty phase	•Set Latch •Raise FAULTL	curr_sense_ovc_sleep CUR_INST_calib adc_ovc_curr_threshold_sleep	Fault Latch Measurement Result OC Threshold	YES	CoulombCounter_en = 0 OR ovc_sleep_msk = 1
Coulomb Counter	OC Normal	$I_{SENSE} > I_{CURR_SENSE_OC_NORM}$	Normal	Always ON	•Set Latch •Raise FAULTL	curr_sense_ovc_norm CUR_INST_calib adc_ovc_curr_threshold_norm	Fault Latch Measurement Result OC Threshold	YES	CoulombCounter_en = 0 OR ovc_norm_msk = 1
Coulomb Counter	Sample Counter or Accumulator Overflow	CoulombCounterTime overflows OR CoulombCounter_msb overflows	Normal	Always ON	•Set Latch •Raise FAULTL	CoCouOvF	Fault Latch	NO	
BIST	Bandgap Monitor Fail	One Bandgap Reference shifts too much in respect to the other	Normal, Cyclic Wakeup	Always ON	•POR			NO	
BIST	EEPROM Checksum Failure	An unwanted change in EEPROM data occurred	Trimming, Normal	Upon EEPROM Download	•Set Latch •Stop balance on whole stack	EEPROM_CRC_ERR_SECT_0 EEPROM_CRC_ERR_CAL_RAM EEPROM_CRC_ERR_CAL_FF	Fault Latch Fault Latch Fault Latch	YES	EEPROM_CRC_ERR_MSK_SECT_0 = 1 EEPROM_CRC_ERR_MSK_CAL_RAM = 1 EEPROM_CRC_ERR_MSK_CAL_FF = 1

Category	Diagnostic name	Condition	Available in	Availability type	Actions	SPI related fields name	SPI related fields description	Masking	Masking condition
BIST	RAM Checksum Failure	An unwanted change in RAM data occurred	Normal, Cyclic Wakeup	Always ON	•Set Latch •Stop balance on whole stack	RAM_CRC_ERR	Fault Latch	YES	RAM_CRC_ERRMSK = 1
BIST	AGND and GNDREF Loss	Loss of both AGND and GNDREF in respect to DGND, lasting more than TGND_LOSS_FILTER	Normal, Cyclic Wakeup	Always ON	•Set Latch •Raise FAULTL	loss_agnd	Fault Latch	NO	
BIST	DGND / CGND Loss	A ground shift among AGND, and DGND, or AGND and CGND, lasts more than TGND_LOSS_FILTER	Normal, Cyclic Wakeup	Always ON	•Set Latch •Raise FAULTL	loss_dgnd	Fault Latch	NO	
						loss_cgnd	Fault Latch		

4.12 Voltage conversion routine

L99BM114 implements a flexible voltage conversion routine, whose main goals are:

- Providing on-demand information about the cells voltage, the stack voltage and the cell temperature;
- Providing on-demand diagnostic information about the device functionality;
- Periodically monitoring the cells and the stack status, along with the device functionality;
- Limit the power consumption by activating only the necessary resources;
- Automatically validate any possible failure detected during the routine execution.

The following parameters play a key role in the definition of the voltage routine behavior:


- **TCYCLEADC** refers to the duration of a voltage conversion step. It can be programmed via the **ADC_FILTER_SOC** (for **On-Demand Conversions** in **Normal** state) and **ADC_FILTER_CYCLE** (for cyclic operation in both **Normal** and **Cyclic Wakeup** states) bit fields. Available values are listed in the [Table 38](#):
 - **TCYCLEADC_XXX** refers to a fixed option of **TCYCLEADC**, thus implying a fixed duration for the voltage conversion;

- **TCYCLE** refers to the internal counter determining the routine period (sum of active and idle phases). It can be programmed via the **TCYCLE** (for operation in **Normal** state) and **TCYCLE_SLEEP** (for operation in **Cyclic Wakeup** state) bit fields. Available values are listed in the [Table 68](#):
 - **TROUTINE** refers to the duration of the active phase. It's a variable time interval depending on how many steps have been scheduled for execution and their duration;
 - **DUTY_ON** is a flag set during the active phase, that is during **TROUTINE**, independently of the routine execution mode;
 - The idle phase lasts **TCYCLE - TROUTINE**. Hence the routine duty-cycle is represented by the ratio **TROUTINE / TCYCLE**;
 - **TCYCLE_OVF** is a latch set when **TROUTINE > TCYCLE**. This anomalous situation is often referred to an **overflow** because it leads to duty-cycle saturation (100%);
- **NCYCLE** refers to the internal counter that is incremented by one every time a routine period ends. It is useful for scheduling optional step execution every X cycles.
 - **NCYCLE_X** refers to a threshold specifying the X-th step periodicity. It can be programmed independently of each step via SPI (e.g. **NCYCLE_GPIO = '010'** specifies that GPIO conversion must take place every 4 cycles). Refer to the [Section 4.12.4: Operations periodicity](#) for all the available options.

4.12.1 Routine structure

The voltage conversion routine is structured as follows:

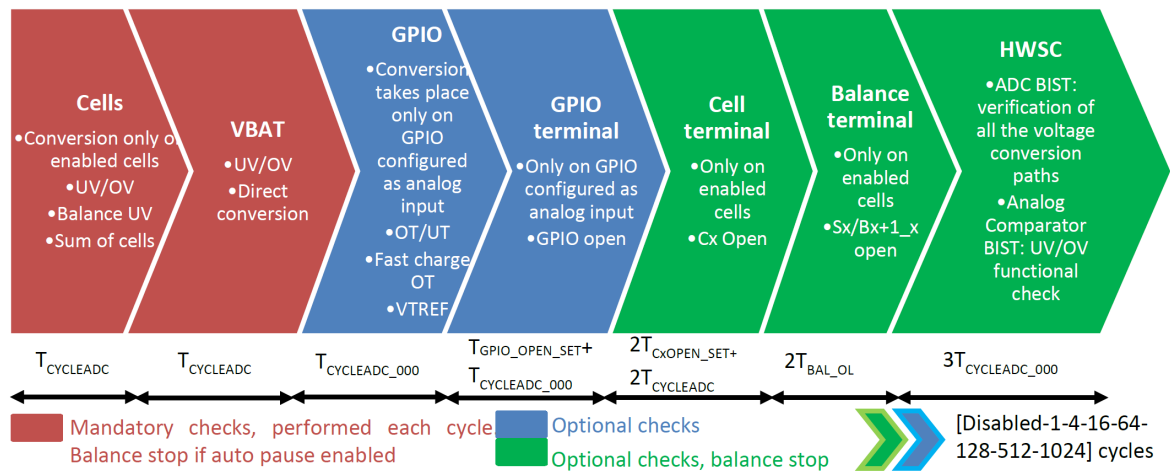Figure 22. Voltage conversion routine



The steps are organized as follows:

- **Mandatory checks:** they are fixed and cannot be excluded. They perform main operations such as Cells and VBAT measurement;
 - Balance is paused if **BAL_AUTO_PAUSE = 1**.
- **Optional checks:** they can be excluded or periodically executed. Each step periodicity can be configured independently via its **NCYCLE_X** bit field (e.g. the **NCYCLE_GPIO** field programs the cyclic execution of the GPIO conversion);
 - Steps involving the GPIOs do not affect balancing.
 - Steps involving Cell Terminal, Balance Terminal and HWSC require balance to be stopped independently of the **BAL_AUTO_PAUSE** value.

In case balance is paused during a step, balance timer is frozen if **BAL_TIM_AUTO_PAUSE = 1**, otherwise it keeps running even if balance operation is temporarily interrupted. Refer to the [Figure 25](#) in order to understand the functionality of **BAL_AUTO_PAUSE** and **BAL_TIM_AUTO_PAUSE** bit.

Refer to the [Figure 25](#) for a graphic example of the **BAL_AUTO_PAUSE** and **BAL_TIM_AUTO_PAUSE** bit.

Depending on the wire length of the cell wires connected to the PCB, some inductive spikes might be seen when interrupting the balancing, prior to “Cells” step of the **Voltage Conversion Routine**. These spikes can be a source of inaccuracy, especially if Cx pins are filtered using high values for RLPF (e.g. 3 kΩ), requiring a relatively high settling time. It is possible to specify a settling time T_{CELL_SET} by programming the **T_CELL_SET** SPI field. Upon Start Of Conversion (SOC) event, L99BM114 will wait for **T_CELL_SET** before starting the **Voltage Conversion Routine**. Such a settling time is only enabled if **BAL_AUTO_PAUSE = 1**. In order to keep synchronization with the **Coulomb Counting Routine**, the Cells step might be additionally delayed in order to align with the first useful current sample. In the worst case, the total delay is **T_CELL_SET** + $T_{CYCLEADC_CUR}$. The VTREF regulator is normally used for temperature sensing applications, involving the GPIO steps of the routine. To save current, it can be dynamically enabled only when needed, according to the following table:

Table 55. VTREF operating modes

VTREF_EN	VTREF_DYN_EN	VTREF Regulator behavior
0	0	(Default). VTREF regulator disabled
0	1	VTREF regulator disabled
1	0	VTREF regulator permanently enabled
1	1	VTREF regulator dynamically enabled. The regulator is normally OFF. It is enabled at each Start Of Conversion (SOC) event (either on-demand or cyclic), with a settling time T_{CELL_SET} in respect to the Cells step of the Voltage Conversion Routine . The regulator is kept enabled until the last step of the routine (HWSC) has been performed.

Due to flexibility, routine execution time $T_{ROUTINE}$ is not fixed. It depends on the programmed voltage acquisition window (either **ADC_FILTER_SOC** or **ADC_FILTER_CYCLE** depending on the conversion type) and the number of steps scheduled for execution (see the [Section 4.12.4: Operations periodicity](#)).


Voltage conversion routine duration

$$\begin{cases} T_{ROUTINE_MIN} = 2T_{CYCLEADC}, & \text{when only mandatory checks are executed} \\ T_{ROUTINE_MAX} = 4T_{CYCLEADC} + 5T_{CYCLEADC_000} + 2T_{BAL_OL} + 2T_{CxOPEN_SET} + T_{GPIO_OPEN_SET}, & \text{when all checks are executed} \end{cases} \quad (14)$$

4.12.2 Routine execution modes

The voltage conversion routine can be executed in three different ways according to microcontroller commands. The different modes are mutually exclusive: only one routine execution at a time is allowed and multiple threads are not supported.

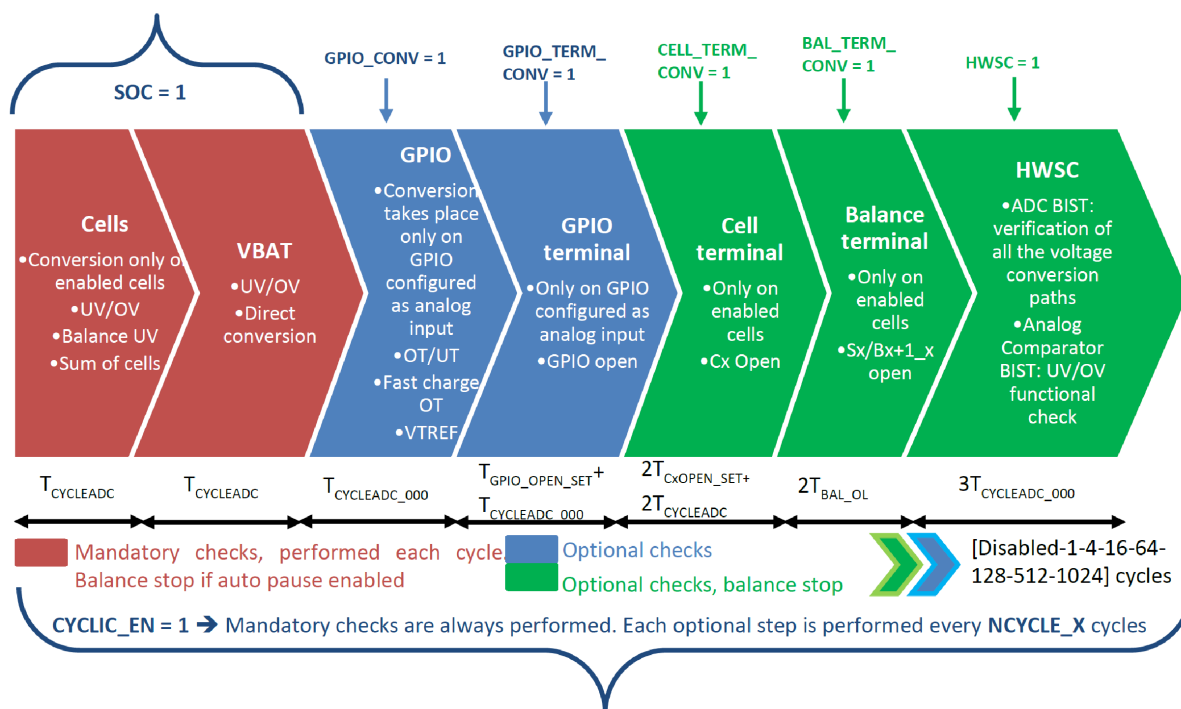Figure 23. Routine execution modes: on-demand and cyclic executions



The execution modes follow a priority concept:

- **Configuration Override** has high priority, since its purpose is to perform diagnostics upon failure detection in order to validate the catch. It can interrupt any ongoing activity and, once done, Voltage conversion routine is moved to **Idle** state, waiting for the microcontroller to interpret the diagnostic data.
- **On-Demand Conversions** have low priority. They are meant to allow microcontroller performing measurements or diagnostics at specific time instants. They cannot co-exist with **Cyclic Conversions**: to run an on-demand conversion, cyclic conversions have to be disabled and MCU has to wait for their termination (monitor the **DUTY_ON** flag). On the other hand **On-Demand Conversions** cannot interrupt themselves, nor a **Configuration Override**.
- **Cyclic Conversions** have low priority. Their purpose is mainly to monitor battery pack and L99BM114 status. However, they can also be used to periodically retrieve measurement data. They can be interrupted by **Configuration Override**. They cannot co-exist with **On-Demand Conversions**: before enabling cyclic conversions, MCU must wait for any ongoing on-demand conversion to end first (monitor the **DUTY_ON** flag).

In general, microcontroller is able to determine L99BM114 activity by performing a read operation on the **ADCV_CONV** register and observing the following bit:


Table 56. Voltage conversion routine status

SOC (status upon readback)	OVR_LATCH	CONF_CYCLIC_EN	DUTY_ON	Device status
0	0	0	0	Idle
0	0	0	1	Not possible
0	0	1	0	Cyclic activity, (idle phase)

SOC (status upon readback)	OVR_LATCH	CONF_CYCLIC_EN	DUTY_ON	Device status
0	0	1	1	Cyclic activity, (duty phase)
0	1	0	0	Idle (last execution set the override latch)
0	1	0	1	Not possible
0	1	1	0	Cyclic activity locked in idle phase after the end of override: MCU must set CONF_CYCLIC_EN = 0 and then run a SOC
0	1	1	1	Fault detected during cyclic activity with override still ongoing
1	0	0	0	Not possible
1	0	0	1	On-demand conversion
1	0	1	0	Not possible
1	0	1	1	On-demand conversion interrupting a cyclic one (must be avoided since results may not be reliable)
1	1	0	0	Not possible
1	1	0	1	On-demand conversion after a fault was detected
1	1	1	0	Not possible
1	1	1	1	On-demand conversion interrupting a cyclic one. Failure detected during the on-demand conversion (must be avoided since results may not be reliable)

The following FSM describes the functionality and the transitions among the different operating modes of the voltage conversion routine.

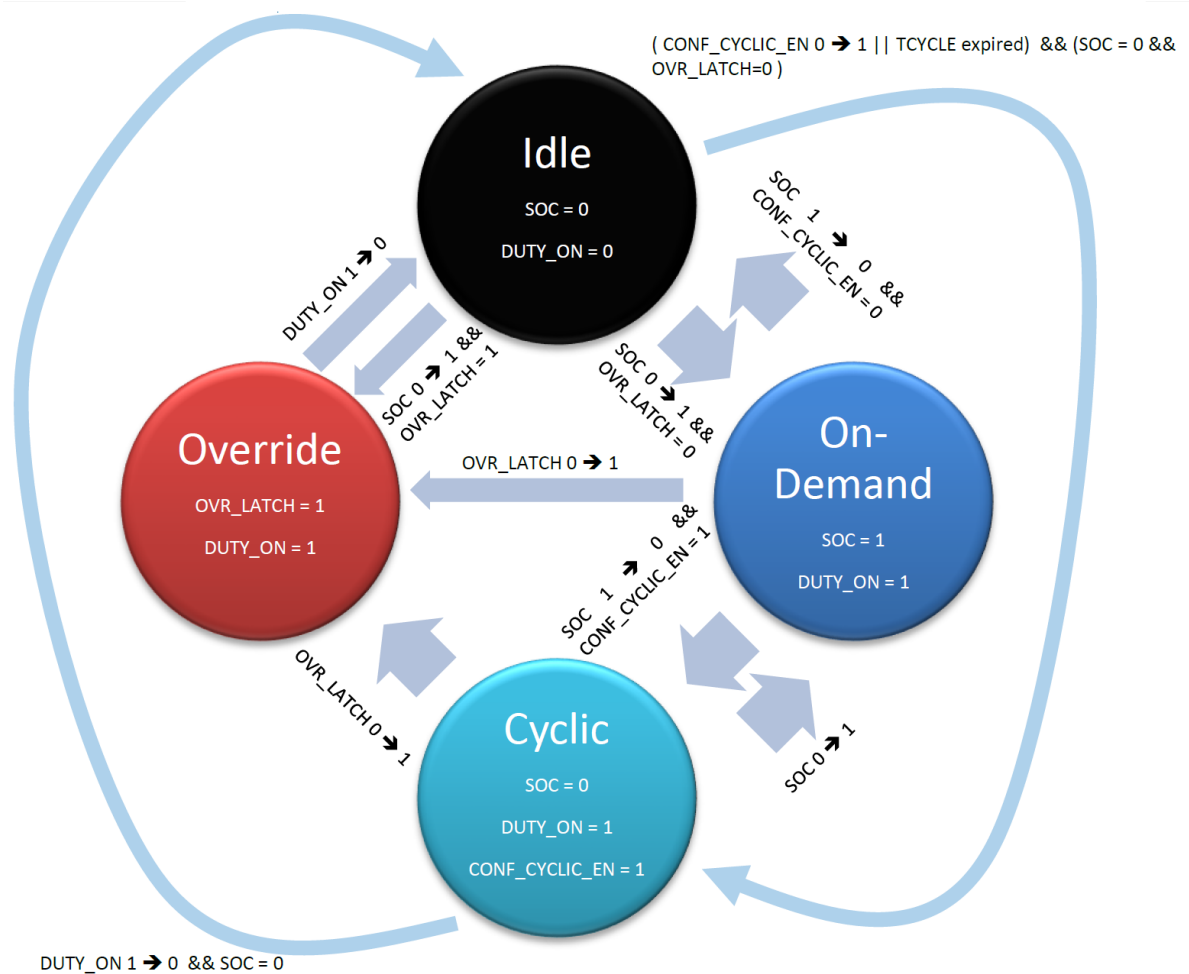Figure 24. Equivalent FSM behavior of the voltage conversion routine



4.12.2.1 On-Demand conversions

To start **On-Demand Conversions**, the user must set **SOC = 1** in the **ADCV_CONV** register: in case the **Coulomb Counting Routine** is enabled, everytime an on-demand voltage conversion is requested by setting **SOC = 1**, the actual conversion start is delayed until the first useful current conversion takes place. This allows a perfect synchronization between voltage and current samples, but might result in a maximum delay of $T_{CYCLEADC_CUR}$, that must be taken into account by user SW and added to the recommended T_{DATA_READY} in the Table 38.

- **Cell Conversion** and **VBAT Conversion** step are always executed
- **GPIO Conversion** is executed only if **GPIO_CONV = 1** in the same SPI frame
- **GPIO Terminal Diagnostics** is executed only if **GPIO_TERM_CONV = 1** in the same SPI frame
- **Cell Terminal Diagnostics** is executed only if **CELL_TERM_CONV = 1** in the same SPI frame
- **Balance Terminal Diagnostics** is executed only if **BAL_TERM_CONV = 1** in the same SPI frame
- **HardWare Self-Check (HWSC)** is executed only if **HWSC = 1** in the same SPI frame

Once set, **SOC** stays high until the conversion routine ends (refer to the Eq. (14) for the routine duration $T_{ROUTINE}$), then it is internally reset. While **SOC** is high, any attempt to perform an on-demand conversion will be discarded. A feedback on the on-demand conversion status can be retrieved via the **DUTY_ON** flag. Setting any of the optional bit without setting **SOC** in the same SPI frame has no effect: conversion will not be started.

The user can select the desired voltage acquisition window ($T_{CYCLEADC}$) by programming the **ADC_FILTER_SOC** fielding the **ADCV_CONV** register.

Registers containing measurement results are updated as soon as the related conversion step is over, so they are available before **T_{ROUTINE}** ends. Each measurement register contains a **d_rdy_xx** (data ready) bit, which is set when a new measurement incomes and is reset upon a data read operation.

Upon an on-demand conversion (SOC), the first step of the voltage conversion routine (cell measurement) is delayed until the first available current conversion start pulse comes. Hence, the cell measurement will start synchronously with the current sample acquisition. This technique is effective only by choosing the shortest filter option for voltage conversion routines (**T_{CYCLEADC_000}**).

On-Demand Conversions have lower priority than **Configuration Override**. When **SOC 0 → 1**:

- If a **Configuration Override** is ongoing, it won't be affected by **SOC** command. Therefore **SOC**, **GPIO_CONV** and **DIAG** bit will be discarded and kept '0'.

4.12.2.2

Cyclic conversions

To start **Cyclic Conversions**, the user must set **CONF_CYCLIC_EN = 1** in the **ADCV_CONV** register. The **ADC_FILTER_CYCLE** determines the duration of the routine steps. **Cyclic Conversions** activity can be used for both diagnostic and measurement purposes:

- In case the routine is only intended for diagnostic purposes, the user may program **CYCLIC_UPDATE = 0**. This setting will cause any conversion result to be used only for internal comparisons. Data will be subsequently discarded and registers containing measurement results won't be updated.
- In case measurement results are important, the user may program **CYCLIC_UPDATE = 1**, thus causing measurement registers update upon each step completion, as for **On-Demand Conversions**. Be aware that results of a previous on-demand conversion might be overwritten by the ones of cyclic executions.

Two counters are implemented for driving the cyclic execution:

- **TCYCLE** is an SPI programmable timer accounting for cycle period. User can program the **TCYCLE** field in the **ADCV_CONV** register.
- **NCYCLE** is an internal counter, incremented by 1 every time **TCYCLE** expires: it counts the number of cycles executed. It works in conjunction with the **NCYCLE_X** parameters to determine the periodicity of each routine step (refer to the [Section 4.12.4: Operations periodicity](#)). In general, each step is executed if its **NCYCLE_X** parameter is different than 0.


TCYCLE and **NCYCLE** shall not be updated while **Cyclic Conversions** are ongoing: routine must be first disabled by programming **CONF_CYCLIC_EN = 0** and then re-enabled once all configuration parameters have been updated.

Such counters are started/stopped upon FSM transitions. The following table summarizes all events involving the two timers:

Table 57. Summary of the NCYCLE and TCYCLE events

Event	NCYCLE	TCYCLE	Effect on routine
Routine active phase (T_{ROUTINE})	Frozen	Counting	Steps are being performed
Routine idle phase	Frozen	Counting	No step is being performed
TCYCLE expiration	NCYCLE = NCYCLE + 1	Restarted from 0	Routine restarted from first step
CONF_CYCLIC_EN → 1	no action	Reset and start from 0	Routine initialized and started. See the Table 58 for additional information
CONF_CYCLIC_EN 1 → 0	Wait for idle phase (DUTY_ON 1 → 0), then Stop and Reset	Wait for idle phase (DUTY_ON 1 → 0), then Stop and Reset	Routine disabled and reset after the active phase completion. See the Table 58 for additional information

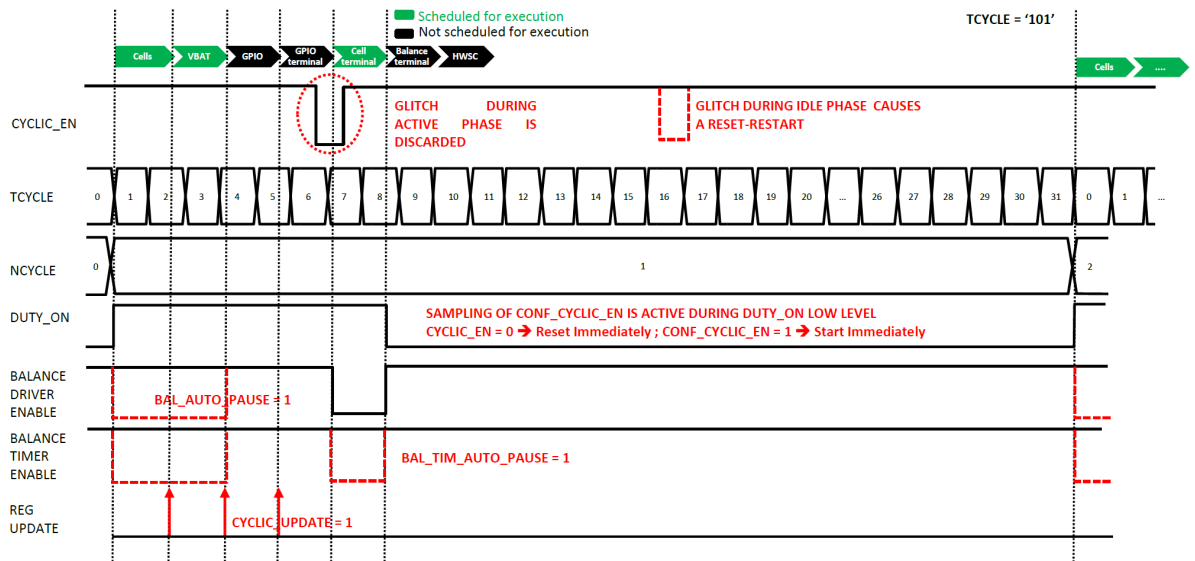Figure 25. Example of routine execution in normal mode



During a **TCYCLE**, the **DUTY_ON** flag is set when the routine is in the active phase (during **T_{ROUTINE}**), while it is reset during the remaining idle time. It reflects the duty-cycle of the cyclic routine:

DUTY_ON flag duty-cycle during a cyclic execution

$$DUTY_ON_{high\%} = \frac{T_{ROUTINE}}{T_{CYCLE}} \times 100 \quad (15)$$

Programming a **T_{ROUTINE}** longer than **TCYCLE** is not recommended. Routine will behave in continuous mode, even if not explicitly set.

In order to program a continuous execution the user must set **CYCLIC_CONTINUOUS = 1** before enabling the cyclic mode (**CONF_CYCLIC_EN = 1**).

Table 58. Focus on routine enable/disable and continuous mode activation/deactivation

CONF_CYCLIC_EN	CYCLIC_CONTINUOUS	Effect on routine
1 → 0	0	Any ongoing routine is disabled once the active phase of the current cycle is completed (DUTY_ON 1 → 0). Setting-Resetting CONF_CYCLIC_EN while DUTY_ON = 1 is considered as a glitch and will be discarded. Refer to the Figure 25 .
1 → 0	1	The routine is disabled after the last enabled step of the cycle has been executed (upon T_{ROUTINE} completion).
0 → 1	0	Routine is started with TCYCLE periodicity.
0 → 1	1	Routine is started in continuous mode. NCYCLE started.
0	X	Changing CYCLIC_CONTINUOUS while the routine is disabled has no effect.

While in continuous mode, **TCYCLE** is ignored and the periodicity will be given by **T_{ROUTINE}**. **NCYCLE** will be incremented upon each routine completion (every **T_{ROUTINE}**).

The following table lists sampling intervals for the configuration parameters related to the cyclic functionality. It is useful to understand when the new settings will be applied after they have been modified during an on-going activity.

Table 59. Sampling intervals for the configuration parameters related to cyclic functionality

Parameter	Normal mode	Continuous mode
CONF_CYCLIC_EN	Continuously sampled while DUTY_ON = 0	Every T _{ROUTINE}
ADC_FILTER_CYCLE	Every TCYCLE	Every T _{ROUTINE}
CYCLIC_CONTINUOUS	Every TCYCLE	Every T _{ROUTINE}
BAL_TIM_AUTO_PAUSE	Every TCYCLE	Every T _{ROUTINE}
BAL_AUTO_PAUSE	Every TCYCLE	Every T _{ROUTINE}
CYCLIC_UPDATE	Every TCYCLE	Every T _{ROUTINE}
NCYCLE_X	Every TCYCLE	Every T _{ROUTINE}

4.12.2.3 Configuration override

The **Configuration Override** is a special routine execution mode, which is internally triggered by failure assertion, independently of the conversion type. It is meant to simplify failure validation and it works according to the following algorithm.

If a failure is asserted at the x-th routine step, all the following steps will be performed, independently of their activation or periodicity. Any failure detected during these steps will be latched and available for the microcontroller to perform failure validation (refer to the [Figure 26](#)).

- Finding the **OVR_LATCH** set means that override occurred:
 - The **OVR_LATCH** is set upon failure assertion during the routine execution.
 - The **OVR_LATCH** is released and can be cleared upon read in case the last on-demand execution has ended without any failure detected (even if failures detected by previous executions are still latched in diagnostic registers).
 - All fault latches related to measurement registers (e.g. CELLx_UV/OV, GPIO UT/OT, etc.) cannot be cleared until a new conversion is executed and the root cause fault has disappeared. To understand the fault status of the last routine execution the MCU SW should observe the **OVR_LATCH**.
- In case cyclic mode was activated, routine is not restarted after a **Configuration Override**. The **OVR_LATCH** masks the **CONF_CYCLIC_EN** configuration. This helps locking the routine status, allowing the MCU to intervene and observe the snapshot of the last execution.
- Once **Configuration Override** is over (**DUTY_ON 1** → **0**), the voltage conversion routine is kept in idle, waiting for microcontroller to read diagnostic registers and validate the failure.
- The following fault handling procedure must be executed once configuration override is over:
 1. MCU must access diagnostic latches and perform correct failure validation as recommended in the [Table 60](#).
 2. MCU must launch **On-Demand Conversions** (SOC = 1) in order to update measurement registers, while also disabling any cyclic execution by setting **CONF_CYCLIC_EN = 0** in the same SPI frame.
 3. MCU must wait for **On-Demand Conversions** to be over and evaluate routine result by reading the **ADCV_CONV** register. A read operation on such a register would reset the **OVR_LATCH** in case the execution launched at step 2 ended with no failure:
 - In case failure persists, the read operation will not reset the **OVR_LATCH**. Return to step 1.
 - In case failure disappeared, reading the **ADCV_CONV** register will also reset the **OVR_LATCH**. Proceed to step 4.
 4. Read all diagnostic latches in order to clear them.
 5. (Optional) Restart any cyclic execution by setting **CONF_CYCLIC_EN = 1**


Writing **ADCV_CONV** and **NCYCLE_PROG_X** registers during a **Configuration Override** is strongly not recommended, since it might affect the failure validation. The configuration override is performed keeping the same ADC filter settings programmed for the execution mode that was being executed. For instance, if it occurs during **On-Demand Conversions**, the **ADC_FILTER_SOC** will be used; in case it interrupts **Cyclic Conversions**, the **ADC_FILTER_CYCLE** or the **ADC_FILTER_SLEEP** will be used, depending on the device status. Microcontroller is able to detect the **Configuration Override** activity by polling the voltage conversion routine status as shown in the [Table 56](#).

The steps of the voltage conversion routine have been arranged in a fixed order, engineered to allow failure validation in every possible scenario thanks to the **Configuration Override** capability:

Table 60. Failure validation table

Failure type	What to check for validation	Reason
Cell UV/OV	Sum of cells	Is the sum of cells coherent with a cell UV/OV failure?
	Balance UV	If a cell UV is detected, then also balance UV should be flagged
	Cx Open	Not measuring actual cell voltage
	Balance open	PCB connector to a cell might have been lost
	HWSC	Is measurement reliable?
Sum of cells UV/OV	VBAT direct conversion	Is the VBAT direct conversion close to the sum of cells?
	Cell UV/OV	Is there at least one cell in UV/OV condition?
	Cx Open	Not measuring actual cell voltage
	HWSC	Is measurement reliable?
Balance UV	Cell UV	If a Cell UV is flagged, then it's much worse than simple balance UV
	Cx Open	Not measuring actual cell voltage
	Balance open	PCB connector to cell might have been lost
	HWSC	Is measurement reliable?
VBAT UV/OV	Cell UV/OV	If no cell is UV/OV, then it's not plausible
	Sum of Cells	Does the sum of cells confirm the UV/OV event?
	VBAT direct conversion and monitor	Is the conversion value actually reporting an OV/UV? Or is it just a transient OV/UV (as per VDA)?
	Cx Open	Summing wrong Cx contributions
	HWSC	Is measurement reliable?
GPIO UT/OT	GPIO open	Not measuring actual load voltage
	HWSC	Is measurement reliable?
	VTREF	Is the VTREF regulator working properly?
Fast Charge OT	GPIO open	Not measuring actual load voltage
	HWSC	Is measurement reliable?
	VTREF	Is the VTREF regulator working properly?
Cell open	HWSC	Is measurement reliable?
GPIO open	GPIO UT/OT	If connection to the external NTC is lost at the PCB connector, the GPIO will be pulled up to VTREF, thus causing GPIO UT detection. On the other hand, if the connection is lost at the device pin, the GPIO open internal diagnostic circuitry will detect it.
	HWSC	Is measurement reliable?
	VTREF	Is the VTREF regulator working properly?
Balance open	HWSC	Comparators must have correctly flagged open
PCB Connector open	Balance open	In case PCB connector to CELLx is open, then BALx and BALx+1 open failures will be flagged
HWSC	VREG UV/OV	BIST may have failed because supply is not in range. Checking VBAT and UV/OV comparators functionality is recommended.
	VBAT UV/OV	

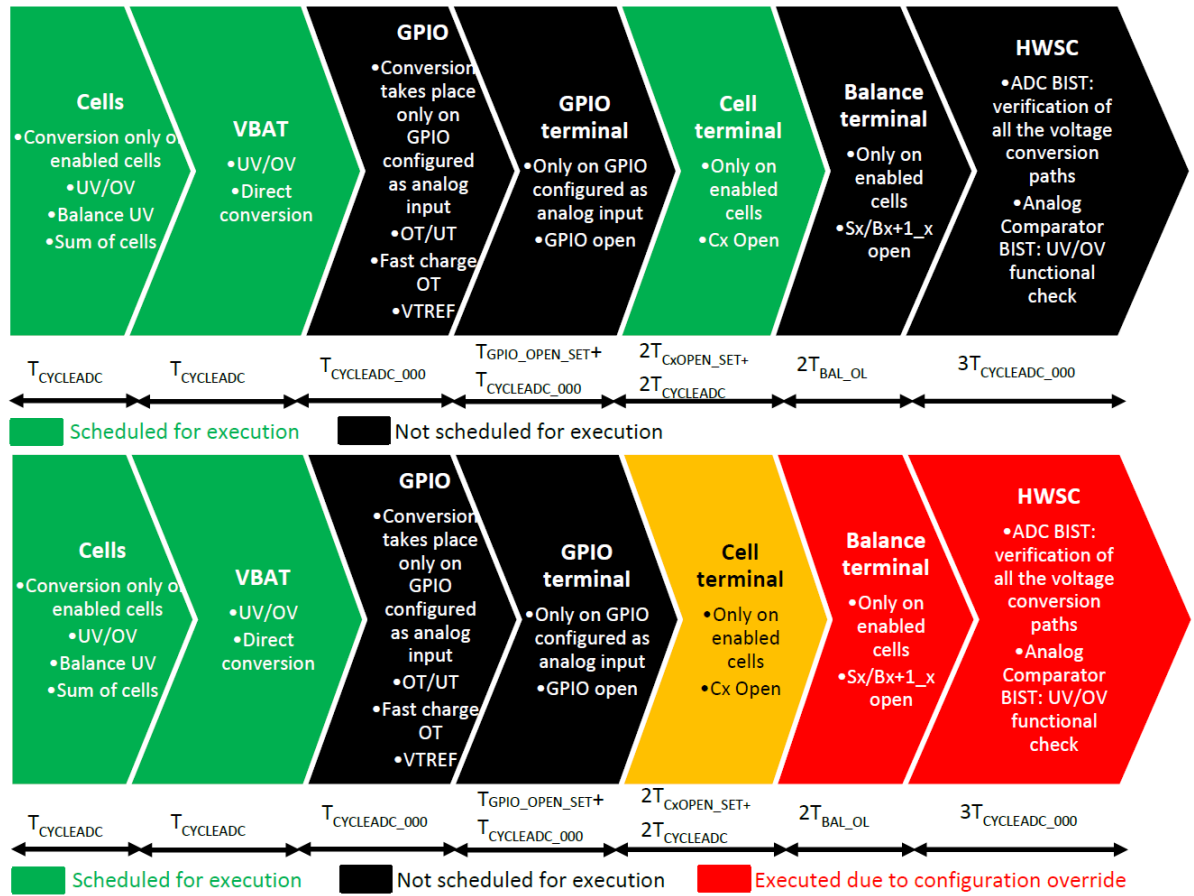Figure 26. Example of configuration override: a failure detected during Cell Terminal diagnostics (yellow background) causes the following two steps (red background) to be executed



4.12.3 Routine steps

The following paragraph will cover the functionality of each step embedded in the voltage conversion routine.

4.12.3.1 Cell conversion

Cell conversion is the first step of the voltage conversion routine. It is mandatory, meaning that it cannot be excluded from routine execution, neither in **On-Demand Conversions** nor in **Cyclic Conversions**.

During this step, all the enabled cells will be converted and their voltage will be added to obtain the total stack value.

Table 61. Operations performed during cell conversion step

Operation	Skip condition
C1-C0	VCELL1_EN = 0
C2-C1	VCELL2_EN = 0
C3-C2	VCELL3_EN = 0
C4-C3	VCELL4_EN = 0
C5-C4	VCELL5_EN = 0
C6-C5	VCELL6_EN = 0
C7-C6	VCELL7_EN = 0
C8-C7	VCELL8_EN = 0
C9-C8	VCELL9_EN = 0

Operation	Skip condition
C10-C9	VCELL10_EN = 0
C11-C10	VCELL11_EN = 0
C12-C11	VCELL12_EN = 0
C13-C12	VCELL13_EN = 0
C14-C13	VCELL14_EN = 0

The step duration is not fixed, since it lasts **TCYCLEADC**, thus depending on the value programmed in the **ADC_FILTER_SOC** or **ADC_FILTER_CYCLE** fields (refer to the [Table 38](#)).

The following failures can be flagged during cell conversion step execution, thus causing **Configuration Override**:

- **VCELLX_UV**: if the voltage of the x-th cell is lower than the programmed UV threshold (V_{CELL_UV})
- **VCELLX_OV**: if the voltage of the x-th cell is higher than the programmed OV threshold (V_{CELL_OV})
- **VSUM_OV**: if summing all cells voltage the outcome is higher than the programmed OV threshold ($V_{BAT_OV(SUM)}$)
- **VSUM_UV**: if summing all cells voltage the outcome is lower than the programmed UV threshold ($V_{BAT_UV(SUM)}$)
- **VCELLX_BAL_UV (maskable)**: if the voltage of the x-th cell is lower than the programmed balance UV threshold ($V_{CELL_UV} + V_{CELL_BAL_UV_Δ}$)

4.12.3.2 VBAT conversion

VBAT pin conversion is the second step of the voltage conversion routine. It is mandatory, meaning that it cannot be excluded from routine execution, neither in **On-Demand Conversions** nor in **Cyclic Conversions**.

During this step, the voltage on VBAT pin will be converted.

The step duration is not fixed, since it lasts **TCYCLEADC**, thus depending on the value programmed in the **ADC_FILTER_SOC** or **ADC_FILTER_CYCLE** fields (refer to the [Table 38](#)).

The following failures can be flagged during VBAT conversion step execution, thus causing **Configuration Override**:

- **VBATTCRIT_OV**: if the voltage converted is higher than the $V_{BAT_CRITICAL_OV_TH}$.
- **VBATTCRIT_UV**: if the voltage converted is lower than the $V_{BAT_CRITICAL_UV_TH}$.

4.12.3.3 GPIO conversion

GPIO conversion is the third step of the voltage conversion routine.

L99BM114 allows possible to provide either the absolute conversion or the ratiometric conversion with respect to **VTREF_MEAS**, based on GPIOx dedicated R/W SPI register bits **ratio_abs_x_sel**.

This step is optional:

- To include it in **On-Demand Conversions**, the **GPIO_CONV** bit must be set along with the **SOC** in the same SPI frame.
- To specify its periodicity in **Cyclic Conversions**, the **NCYCLE_GPIO** field must be programmed (refer to **Operations Periodicity**).

During this step, all the GPIO configured as analog inputs will be converted.

Table 62. Operations performed during GPIO conversion step

Operation	Skip condition
GPIO1	Always
GPIO2	Always
GPIO3	GPIO3_CONFIG != 00
GPIO4	GPIO4_CONFIG != 00
GPIO5	GPIO5_CONFIG != 00

Operation	Skip condition
GPIO6	GPIO6_CONFIG != 00
GPIO7	GPIO7_CONFIG != 00
GPIO8	GPIO8_CONFIG != 00
GPIO9	GPIO9_CONFIG != 00

The step duration is fixed: it lasts **T_{CYCLEADC_000}** (refer to the [Table 38](#)).

The following failures can be flagged during GPIO conversion step execution, thus causing **Configuration Override**:

- **GPIOX_OT**: if the converted voltage is lower than the programmed UV/OT threshold (V_{GPIOAN_OT}).
- **GPIOX_UT**: if the converted voltage is higher than the programmed OV/UT threshold (V_{GPIOAN_UT}).
- **GPIOX_fastchg_OT**: if the converted voltage is lower than the programmed fast charge UV/OT threshold ($V_{GPIOAN_OT} + V_{GPIO_FASTCH_OT_DELTA}$); this function can be masked with a dedicated bit (**Gpiox_fastchg_OT_MSK**).

4.12.3.4 GPIO terminal diagnostics

GPIO terminal diagnostics is the fourth step of the voltage conversion routine. It is optional:

- To include it in an **On-Demand Conversions**, the **GPIO_TERM_CONV** bit must be set along with the **SOC** in the same SPI frame.
- To specify its periodicity in **Cyclic Conversions**, the **NCYCLE_GPIO_TERM** field must be programmed (refer to the [Section 4.12.4: Operations periodicity](#)).

During this step, the GPIO open diagnostic will be performed on all GPIOs configured as analog inputs.

Table 63. Operations performed during GPIO terminal diagnostics step

Operation	Skip condition
GPIO1 Open	Always
GPIO2 Open	Always
GPIO3 Open	GPIO3_CONFIG != 00
GPIO4 Open	GPIO4_CONFIG != 00
GPIO5 Open	GPIO5_CONFIG != 00
GPIO6 Open	GPIO6_CONFIG != 00
GPIO7 Open	GPIO7_CONFIG != 00
GPIO8 Open	GPIO8_CONFIG != 00
GPIO9 Open	GPIO9_CONFIG != 00

The step duration is fixed: it lasts **T_{GPIO_OPEN_SET} + T_{CYCLEADC_000}** (refer to the [Table 38](#)).

The following failure can be flagged during GPIO terminal diagnostics step execution, thus causing **Configuration Override**:

- **GPIOX_OPEN**: if $V_{GPIO} < V_{GPIO_OL}$ while $I_{GPIO_PD_OPEN}$ is applied

4.12.3.5 Cell terminal diagnostics

Cell terminal diagnostics is the fifth step of the voltage conversion routine. It is optional and its execution mode depends on the **ADC_CROSS_CHECK** bit (refer to **Cell open wire diagnostic** for further information):

- To include it in **On-Demand Conversions**, the **CELL_TERM_CONV** bit must be set along with the **SOC** in the same SPI frame.
- To specify its periodicity in **Cyclic Conversions**, the **NCYCLE_CELL_TERM** field must be programmed (refer to the [Section 4.12.4: Operations periodicity](#)).

During this step, the cell terminal open diagnostic will be performed on all enabled cells.

Table 64. Operations performed during cell terminal diagnostics step

Operation	Skip condition
C0 Open	VCELL1_EN = 0
C1 Open	VCELL1_EN = 0
C2 Open	VCELL2_EN = 0
C3 Open	VCELL3_EN = 0
C4 Open	VCELL4_EN = 0
C5 Open	VCELL5_EN = 0
C6 Open	VCELL6_EN = 0
C7 Open	VCELL7_EN = 0
C8 Open	VCELL8_EN = 0
C9 Open	VCELL9_EN = 0
C10 Open	VCELL10_EN = 0
C11 Open	VCELL11_EN = 0
C12 Open	VCELL12_EN = 0
C13 Open	VCELL13_EN = 0
C14 Open	VCELL14_EN = 0

The step duration is not fixed, since it lasts $2 \cdot (T_{CxOPEN_SET} + T_{CYCLEADC})$, thus depending on the value programmed in the **ADC_FILTER_SOC** or **ADC_FILTER_CYCLE** fields (refer to the [Table 38](#)).

The following failure can be flagged during cell terminal diagnostics step execution, thus causing **Configuration Override**:

- **CELLX_OPEN**: for all enabled cells, if the voltage drop on the path in series to the **Cx** pin becomes higher than **VCxOPEN**.

4.12.3.6 Balance terminal diagnostics

Balance terminal diagnostics is the sixth step of the voltage conversion routine. It is optional:

- To include it in **On-Demand Conversions**, the **BAL_TERM_CONV** bit must be set along with the **SOC** in the same SPI frame.
- To specify its periodicity in **Cyclic Conversions**, the **NCYCLE_BAL_TERM** field must be programmed (refer to the [Section 4.12.4: Operations periodicity](#)).

During this step, the balance terminal open diagnostic will be performed on all the enabled cells.

Table 65. Operations performed during balance terminal diagnostics step

Operation	Skip condition
B2_1 – S1 Open / Short	VCELL1_EN = 0
S2 – B2_1 Open / Short	VCELL2_EN = 0
B4_3 – S3 Open / Short	VCELL3_EN = 0
S4 – B4_3 Open / Short	VCELL4_EN = 0
B6_5 – S5 Open / Short	VCELL5_EN = 0
S6 – B6_5 Open / Short	VCELL6_EN = 0
B8_7 – S7 Open / Short	VCELL7_EN = 0
S8 – B8_7 Open / Short	VCELL8_EN = 0
B10_9 – S9 Open / Short	VCELL9_EN = 0
S10 – B10_9 Open / Short	VCELL10_EN = 0

Operation	Skip condition
B12_11 – S11 Open / Short	VCELL11_EN = 0
S12 – B12_11 Open / Short	VCELL12_EN = 0
B14_13 – S13 Open / Short	VCELL13_EN = 0
S14 – B14_13 Open / Short	VCELL14_EN = 0

The step duration is fixed: it lasts **2*TBAL_OL** (refer to the [Table 38](#)).

The following failure can be flagged during balance terminal diagnostics step execution, thus causing **Configuration Override**:

- **BALX_OPEN**: if the voltage drop on the V_{DS} of the balance power MOS becomes lower than **V_{BAL_OPEN}**.

4.12.3.7 Hardware Self-Check (HWSC)

HWSC is the seventh step of the voltage conversion routine. It is optional:

- To include it in **On-Demand Conversions**, the **HWSC** bit must be set along with the **SOC** in the same SPI frame.
- To specify its periodicity in **Cyclic Conversions**, the **NCYCLE_HWSC** field must be programmed (refer to the [Section 4.12.4: Operations periodicity](#)).

During this step, a BIST will be executed on the enabled analog conversion paths to verify the functionality of the ADC chain. Analog comparators used for UV/OV detection and diagnostics will also be checked.

Table 66. Operations performed during HWSC step

Operation	Skip condition
CX to ADC	Never
GPIO3-9 to ADC	Never
VBAT UV/OV comparator	Never
VREG UV/OV comparator	Never
VCOM UV/OV comparator	Never
VTREF UV/OV comparator	Never
Bx _{x-1} to ADC	Never
Sx to ADC	Never
Bx _{x-1} /Sx-1 Open/Short comparator (even cells)	Never
Sx/Bx _{x-1} Open/Short comparator (odd cells)	Never

The step duration is fixed: it lasts **3*TCYCLEADC_000** (refer to the [Table 38](#)).

The following failures can be flagged during HWSC step execution, thus causing **Configuration Override**:

- **MUX_BIST_FAIL**: if a failure is found while converting the Cx paths connected to the analog MUX
- **OPEN_BIST_FAIL**: if a failure is found while converting the Sx/Bx_{x-1} paths connected to the analog MUX
- **GPIO_BIST_FAIL**: if a failure is found while converting the GPIOx paths connected to the analog MUX
- **VBAT_COMP_BIST_FAIL**: if the BIST on the VBAT UV/OV comparator fails
- **VREG_COMP_BIST_FAIL**: if the BIST on the VREG UV/OV comparator fails
- **VCOM_COMP_BIST_FAIL**: if the BIST on the VCOM UV/OV comparator fails
- **VTREF_COMP_BIST_FAIL**: if the BIST on the VTREF UV/OV comparator fails
- **BIST_BAL_COMP_HS_FAIL**: if the BIST on the balance open/short comparator of the High Side switches fails (even cells)
- **BIST_BAL_COMP_LS_FAIL**: if the BIST on the balance open/short comparator of the Low Side switches fails (odd cells)

Once this step is over, the **HWSC_DONE** flag will be set in the SPI registers. It must be cleared upon read by MCU.

4.12.3.8 Summary of the routine steps

The following table summarizes all the actions performed during routine steps:

Table 67. Summary of the voltage conversion routine steps

Step	Optional	Actions	Duration	Skip based on	Failure
Cell Conversion	No	All enabled cells converted + Sum of Cells	$T_{CYCLEADC}$	VCELLX_EN	VCELLX_UV VCELLX_OV VSUM_UV VSUM_OV VCELLX_BAL_UV (maskable)
VBAT Conversion	No	VBAT pin direct conversion	$T_{CYCLEADC}$	VCELLX_EN	VBATTCRIT_OV VBATTCRIT_UV
GPIO Conversion	Yes	Conversion of all GPIOs configured as analog input	$T_{CYCLEADC_000}$	GPIOX_CONFIG	GPIOX_OT GPIOX_UT GPIOX_fastchg_OT (maskable)
GPIO Terminal Diagnostics	Yes	Open diagnostic on all GPIOs configured as analog input	$T_{GPIO_OPEN_SET} + T_{CYCLEADC_000}$	GPIOX_CONFIG	GPIOX_OPEN
Cell Terminal Diagnostics	Yes	Open diagnostic on all terminals connected to enabled cells	$2(T_{CxOPEN_SET} + T_{CYCLEADC})$	VCELLX_EN	CELLX_OPEN
Balance Terminal Diagnostics	Yes	Open diagnostic on balance paths of enabled cells	$2T_{BAL_OL}$	VCELLX_EN	BALX_OPEN
HardWare Self-Check (HWSC)	Yes	BIST on all enabled conversion paths + Analog comparators	$3T_{CYCLEADC_000}$		MUX_BIST_FAIL OPEN_BIST_FAIL GPIO_BIST_FAIL VBAT_COMP_BIST_FAIL VREG_COMP_BIST_FAIL VCOM_COMP_BIST_FAIL VTREF_COMP_BIST_FAIL BIST_BAL_COMP_HS_FAIL BIST_BAL_COMP_LS_FAIL

4.12.4

Operations periodicity

While in cyclic execution (**CONF_CYCLIC_EN** = 1), each step periodicity can be programmed by acting on **TCYCLE** and **NCYCLE_X** fields:

In case of Cyclic Wake up, the wake up timer is set by **TCYCLE_SLEEP** instead of **TCYCLE**.

Table 68. TCYCLE and NCYCLE_X options

TCYCLE / TCYCLE_SLEEP	CYCLE PERIOD	NCYCLE_X	CYCLIC OCCURRENCE
000	100 ms	000	Excluded from voltage conversion routine
001	200 ms	001	Occurs every 1 cycle
010	400 ms	010	Occurs every 4 cycles
011	800 ms	011	Occurs every 16 cycles
100	1.6 s	100	Occurs every 64 cycles
101	3.2 s	101	Occurs every 128 cycles
110	6.4 s	110	Occurs every 512 cycles
111	12.8 s	111	Occurs every 1024 cycles

By combining the two fields, each step periodicity can be evaluated as follows:

Evaluation of a step periodicity

$$\begin{cases} T_{STEP} = N_{CYCLE_X} \times T_{CYCLE}, & \text{when not in continuous mode or overflow} \\ T_{STEP} = N_{CYCLE_X} \times T_{ROUTINE}, & \text{when in continuous mode or overflow} \end{cases} \quad (16)$$

The periodicity ranges from a minimum of 100 ms to a maximum of 3.64 hours (13107.2 s):

- Important functional checks such as HWSC might be executed with a high frequency
- Time consuming operations such as open load diagnostics might be performed with a low frequency

Table 69 lists all the available periodicity options, calculated according to Eq. (16) assuming L99BM114 is not in continuous mode or overflow:

Table 69. Steps periodicity options

Ncycle	Tcycle							
	000	001	010	011	100	101	110	111
000	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled	Disabled
001	100 ms	200 ms	400 ms	800 ms	1.6 s	3.2 s	6.4 s	12.8 s
010	400 ms	800 ms	1.6 s	3.2 s	6.4 s	12.8 s	25.6 s	51.2 s
011	1.6 s	3.2 s	6.4 s	12.8 s	25.6 s	51.2 s	102.4 s	204.8 s
100	6.4 s	12.8 s	25.6 s	51.2 s	102.4 s	204.8 s	409.6 s	819.2 s
101	12.8 s	25.6 s	51.2 s	102.4 s	204.8 s	409.6 s	819.2 s	1638.4 s
110	51.2 s	102.4 s	204.8 s	409.6 s	819.2 s	1638.4 s	3276.8 s	6553.6 s
111	102.4 s	204.8 s	409.6 s	819.2 s	1638.4 s	3276.8 s	6553.6 s	13107.2 s

Changing **NCYCLE_X** for a step while cyclic activity is enabled (**CONF_CYCLIC_EN** = 1) will cause the new setting to be applied at the first useful cycle (refer to the Table 59).

Table 70. NCYCLE counter and optional step periodicity

		NCYCLE COUNTER (11 bit)										
		1024	512	256	128	64	32	16	8	4	2	1
		b10	b9	b8	b7	b6	b5	b4	b3	b2	b1	b0
STEP LIST	GPIO							X				
	GPIO Term					X						
	Cell Term		X									
	Bal Term							X				
	ADC BIST									X		
	Analog Comp	X										

The **NCYCLE** is an 11 bit counter. Optional steps can be configured (via their **NCYCLE_X**) to be executed every time a specific **bx** bit toggles. Once the counter reaches the saturation value (2047), it is designed to roll over. Hence, operation periodicity is not affected and may continue for an arbitrary number of cycles.

4.12.5 Transition between cyclic wake up and normal states

Any asynchronous event causing L99BM114 moving to low power states will have the following effect on the voltage conversion routine:

- If the **OVR_LATCH** is set, it means that a **Configuration Override** is ongoing or has occurred and the command is ignored. In fact, a **Configuration Override** cannot be interrupted. Moreover, L99BM114 is locked in **Normal** state upon failure detection. Hence, the microcontroller must clear the **OVR_LATCH** before transitioning to a different state. The microcontroller has a feedback that the command was discarded because:
 - The **FAULTL** line is risen in case of **Configuration Override** thus propagating the fault down to the micro.
 - The **Configuration Override** latch is set (**OVR_LATCH = 1**).
- However, if the MCU does not respond within the communication timeout, the device will move to sleep anyway.
- If no failure occurred, any ongoing conversion activity can be interrupted by a **GO2SLP** command. The device will immediately move to a low power state (**Sleep**, **Cyclic Wakeup** or **Silent Balance**).
- To determine the next state, the **CONF_CYCLIC_EN** bit will be evaluated:
 - In case **CONF_CYCLIC_EN = 1** L99BM114 will move to **Cyclic Wakeup** state, where the wakeup timer is **TCYCLE_SLEEP** and the voltage acquisition window (**TCYCLEADC**) is **ADC_FILTER_SLEEP**. The **TCYCLE_OVF** failure is avoided by design, since the **ADC_FILTER_SLEEP** can be only programmed among the first 4 values listed in the Table 38. This makes **TROUTINE < TCYCLE_SLEEP** by design.
 - In case **CONF_CYCLIC_EN = 0** L99BM114 will move to **Sleep** or **Silent Bal** state depending on **slp_bal_conf**.

The dual case is represented by the **Cyclic Wakeup** → **Normal** transition. During cyclic wake up, a wake up condition may occur:

- If the wake up condition does not involve any **Configuration Override** (e.g. Microcontroller sent a wake up frame or **FAULTH** was interpreted 'high'), then L99BM114 will move to **Normal** state and the cyclic activity will continue, since **CONF_CYCLIC_EN** is still '1'.
- In case an internal failure is detected during the routine execution, the internal wakeup condition will move L99BM114 to **Normal**, while **Configuration Override** takes place.

4.13 Coulomb counting routine

4.13.1 Coulomb counting

The Coulomb counting routine is performed to evaluate the injected/subtracted charge. To enable it, the **CoulombCounter_en** bit must be set to '1'.

Disabling the Coulomb Counter by setting **CoulombCounter_en** to '0' doesn't reset the accumulator (**CoulombCounter_msb**, **CoulombCounter_lsb**) and sample counter (**CoulombCntTime**) registers. MCU is supposed to reset the Coulomb Counter, clearing any data previously stored, before enabling it.

This can be done by performing a burst read operation as explained below:

- When L99BM114 is in **Normal** state, current is continuously sampled: a new conversion starts as soon as the previous one has been completed. Each acquisition window lasts **TCYCLEADC_CUR**. Coulomb counter internal registers are accessible sending the **0x7B** command via SPI (refer to the Table 23) and are updated at the end of each conversion.
 - To read the Coulomb Counter internal registers:
 - MCU sends the **0x7B** burst command (see the Table 26).
 - At command receipt, data is loaded from accumulator (**CoulombCounter_msb** and **CoulombCounter_lsb**) and sample counter (**CoulombCntTime**) registers and L99BM114 will answer with a burst containing also instantaneous current (**CUR_INST_calib**) and diagnostic data (**CoCouOvF**).
 - Meanwhile, both the accumulator and the sample counter are reset to zero.
 - MCU can then evaluate the charge variation ΔQ in the battery pack, by referring to a known previous state of charge $Q(t_0)$ and applying the following equation:
Coulomb Counting algorithm

$$\left\{ \begin{array}{l} Q(t_k) = Q_{t_0} + \Delta Q = Q_{t_0} + \Delta T \sum_{k=1}^K I_{CELL}(k) = Q_{t_0} + \frac{\Delta T}{R_{SHUNT}} \sum_{k=1}^K V_{DIFF_CUR_SENSE}(k) \\ \Delta T = T_{CYCLEADC_CUR} \\ K = CoulombCntTime \\ \sum_{k=1}^K V_{DIFF_CUR_SENSE}(k) = (CoulombCounter_{msb} + CoulombCounter_{lsb}) |_{2's\ complement} * V_{ISENSE_RES} \end{array} \right. \quad \left(\begin{array}{l} 1 \\ 7 \end{array} \right)$$
 - Then, the $Q(t_k)$ just evaluated becomes the $Q(t_0)$ for the next iteration
- MCU must periodically read the Coulomb Counter in order to avoid accumulator or sample counter overflow (latched by **CoCouOvF** bit). In case a register overflows, it will saturate: **CoulombCntTime** saturates to 0xFFFF, while **CoulombCounter_msb/lsb** saturates either to the upper bound (0x7FFFFFFF) or to the lower bound (0x80000000). In case of saturation, activity will continue, but data will not be reliable. Recommended polling period is 1 s or less.
- Reading the Coulomb Counter registers will not interrupt the Coulomb Counting Routine running in background.
- If a current sample (absolute value) overcomes **ICURR_SENSE_OC_NORM** (programmable via SPI in the **adc_ovc_curr_threshold_norm** register), the **curr_sense_ovc_norm** flag is set and FAULTL pin is risen. This functionality is meant to detect overcurrent events that could damage the battery pack when the system ignition is ON.
- This check can be masked by programming **ovc_norm_msk = 1**.
- When L99BM114 is in **Cyclic Wakeup** state, current is continuously sampled while the device is in the ON phase. If a current sample (absolute value) overcomes **ICURR_SENSE_OC_SLEEP** (programmable via SPI in the **adc_ovc_curr_threshold_sleep** register), the **curr_sense_ovc_sleep** flag is set, L99BM114 moves to **Normal** state and FAULTL pin is risen. This functionality is meant to detect anomalous current leakage from the battery pack when the system ignition is OFF.
 - This check can be masked by programming **ovc_sleep_msk = 1**.

When L99BM114 operates in **Cyclic Wakeup** and the Coulomb Counter is enabled, the ON phase ends when the Voltage Conversion Routine is over (**DUTY_ON = '0'**) and the Coulomb Counter has acquired at least one current sample.

5 Register map

The following paragraph contains the device register map.

Table 71. Register map legend

Field	Value	Description
Type	RO	Read Only
	RW	Read/Write
	WO	Write Only
	RLR	Latch Clear on Read
Reset Sources	A	POR Standby
	B	POR Main
	X	Undefined

Table 72. SPI register map

Register Name	Address	Field name	Type	Bit offset	Bit width	Reset value	Reset sources	Description
DEV_GEN_CFG	0x1							
		chip_ID	RW	13	5	0x0	A	All 0s → No address (Init state) X → Dev ID of SPI Protocol (L99BM114 SPI Protocol Details)
		isotx_en_h	RW	12	1	0x0	A	0 → ISOH port disabled 1 → ISOH port enabled
		out_res_tx_iso	RW	10	2	0x0	A	Selects ISOH/L port differential signal amplitude See the Table 18
		iso_freq_sel	RW	8	2	0x0	B	Selects ISOH/L port carrier frequency See the Table 18
		Noreg7	RO	7	1	0x0	X	
		HeartBeatCycle	RW	4	3	0x4	A	Selects heartbeat period See the Table 37
		FaultH_EN	RW	3	1	0x0	A	Enables FAULTH receiver See the Table 36
		HeartBeat_En	RW	2	1	0x0	B	Enables Heartbeat generation See the Table 36
		Farthest_Unit	RW	1	1	0x0	A	Configures the unit as the stack topmost See the Table 36
		FaultL_force	RW	0	1	0x0	B	0 → FAULTL not forced high 1 → FAULTL forced high

Register Name	Address	Field name	Type	Bit offset	Bit width	Reset value	Reset sources	Description
fastch_baluv	0x2							
		CommTimeout	RW	16	2	0x0	A	Configures the communication timeout See the Table 11
		Gpio_fastchg_OT_delta_thr	RW	8	8	0x0	A	Determines the fastcharge overtemperature threshold See the Table 48
		Vcell_bal_UV_delta_thr	RW	0	8	0x0	A	Determines the balancing undervoltage threshold See the Table 39
Bal_1	0x3							
		comm_timeout_dis	RW	17	1	0x0	A	0 → Communication timeout enabled 1 → Communication timeout disabled
		slp_bal_conf	RW	16	1	0x0	A	0 → Silent balancing disabled 1 → Silent balancing enabled
		bal_start	RW	15	1	0x0	A	10 → balancing start
		bal_stop	RW	14	1	0x0	A	01 → balancing stop Others → no effect
		TimedBalTimer	RO	7	7	0x0	A	Balancing timer. Resolution depends on TimedBalacc See the Table 43. Balancing threshold configuration
		WDTimedBalTimer	RO	0	7	0x0	A	Balancing timer watchdog. Resolution depends on TimedBalacc See the Table 43. Balancing threshold configuration
Bal_2	0x4							
		Balmode	RW	16	2	0x1	A	01 → Manual balancing 10 → Timed balancing Others → No effect
		TimedBalacc	RW	15	1	0x0	A	Selects balancing timer resolution See the Table 43. Balancing threshold configuration
		ThrTimedBalCell14	RW	8	7	0x0	A	Timed balancing threshold for cell 14
		Noreg7	RO	7	1	0x0	X	
		ThrTimedBalCell13	RW	0	7	0x0	A	Timed balancing threshold for cell 13
Bal_3	0x5							
		first_wup_done	RO	17	1	0x0	A	0 → First powerup not properly done 1 → First powerup ended successfully
		trimming_retrigger	RW	16	1	0x0	B	Triggers NVM download Refer to the Section 4.10.1: NVM read

Register Name	Address	Field name	Type	Bit offset	Bit width	Reset value	Reset sources	Description
		Lock_isoh_isofreq	RW	15	1	0x0	B	0 → isoth_en_h and iso_freq_sel are unlocked 1 → isoth_en_h and iso_freq_sel are write protected
		ThrTimedBalCell12	RW	8	7	0x0	A	Timed balancing threshold for cell 12
		Noreg7	RO	7	1	0x0	X	
		ThrTimedBalCell11	RW	0	7	0x0	A	Timed balancing threshold for cell 11
Bal_4	0x6							
		clk_mon_en	RW	17	1	0x0	A	0 → Main oscillator monitor disabled 1 → Main oscillator monitor enabled
		Noreg16	RW	16	1	0x0	A	
		clk_mon_init_done	RO	15	1	0x0	B	0 → Main oscillator monitor not started 1 → Main oscillator monitor started
		ThrTimedBalCell10	RW	8	7	0x0	A	Timed balancing threshold for cell 10
		Noreg7	RO	7	1	0x0	X	
		ThrTimedBalCell9	RW	0	7	0x0	A	Timed balancing threshold for cell 9
Bal_5	0x7							
		transceiver_on_by_up	RW	17	1	0x0	A	0 → Transceiver mode not forced by MCU 1 → Transceiver mode forced by MCU
		transceiver_valid_by_up	RW	16	1	0x0	A	0 → Value on transceiver_on_by_up discarded 1 → Value on transceiver_on_by_up applied to device configuration
		Noreg15	RO	15	1	0x0	X	
		ThrTimedBalCell8	RW	8	7	0x0	A	Timed balancing threshold for cell 8
		Noreg7	RO	7	1	0x0	X	
		ThrTimedBalCell7	RW	0	7	0x0	A	Timed balancing threshold for cell 7
Bal_6	0x8							
		Noreg17	RO	17	1	0x0	X	
		Noreg16	RO	16	1	0x0	X	
		Noreg15	RO	15	1	0x0	X	
		ThrTimedBalCell6	RW	8	7	0x0	A	Timed balancing threshold for cell 6
		Noreg7	RO	7	1	0x0	X	
		ThrTimedBalCell5	RW	0	7	0x0	A	Timed balancing threshold for cell 5
Bal_7	0x9							
		Noreg17	RO	17	1	0x0	X	
		Noreg16	RO	16	1	0x0	X	

Register Name	Address	Field name	Type	Bit offset	Bit width	Reset value	Reset sources	Description
		Noreg15	RO	15	1	0x0	X	
		ThrTimedBalCell4	RW	8	7	0x0	A	Timed balancing threshold for cell 4
		Noreg7	RO	7	1	0x0	X	
		ThrTimedBalCell3	RW	0	7	0x0	A	Timed balancing threshold for cell 3
Bal_8	0xA							
		Noreg17	RO	17	1	0x0	X	
		Noreg16	RO	16	1	0x0	X	
		Noreg15	RO	15	1	0x0	X	
		ThrTimedBalCell2	RW	8	7	0x0	A	Timed balancing threshold for cell 2
		Noreg7	RO	7	1	0x0	X	
		ThrTimedBalCell1	RW	0	7	0x0	A	Timed balancing threshold for cell 1
VCELL_THRESH_UV_OV	0xB							
		Noreg17	RO	17	1	0x0	X	
		Noreg16	RO	16	1	0x0	X	
		threshVcellOV	RW	8	8	0x0	A	Determines cell overvoltage threshold Cell Voltage ADC electrical characteristics See the Table 39
		threshVcellUV	RW	0	8	0x0	A	Determines cell undervoltage threshold See the Table 39
VBATT_SUM_TH	0xC							
		Noreg17	RO	17	1	0x0	X	
		Noreg16	RO	16	1	0x0	X	
		VBATT_SUM_OV_TH	RW	8	8	0x0	A	Determines battery stack overvoltage threshold See the Table 40. Stack voltage measurement electrical parameters
		VBATT_SUM_UV_TH	RW	0	8	0x0	A	Determines battery stack undervoltage threshold See the Table 40. Stack voltage measurement electrical parameters
ADCV_CONV	0xD							
		ADC_CROSS_CHECK	RW	17	1	0x0	A	0 → Cell open diagnostics executed during Cx open check 1 → ADC Cross check executed during Cx open check
		TCYCLE_OVF	RLR	16	1	0x0	B	0 → No period overflow detected during cyclic conversions 1 → Period overflow detected during cyclic conversions

Register Name	Address	Field name	Type	Bit offset	Bit width	Reset value	Reset sources	Description
		SOC	WO	15	1	0x0	B	0 → No on-demand conversion 1 → Triggers on-demand conversion
		OVR_LATCH	RLR	14	1	0x0	B	0 → No configuration override occurred 1 → Configuration override occurred
		CONF_CYCLIC_EN	RW	13	1	0x0	A	0 → Cyclic conversions disabled 1 → Cyclic conversions enabled
		DUTY_ON	RO	12	1	0x0	B	0 → No conversion ongoing 1 → Conversion ongoing
		ADC_FILTER_SOC	RW	9	3	0x0	B	Determines the filter window used for on-demand conversions. See the Table 39
		GPIO_CONV	WO	8	1	0x0	B	0 → GPIO conversion disabled for on-demand conversion 1 → GPIO conversion performed during on-demand conversion
		GPIO_TERM_CONV	WO	7	1	0x0	B	0 → GPIO open check disabled for on-demand conversion 1 → GPIO open check performed during on-demand conversion
		CELL_TERM_CONV	WO	6	1	0x0	B	0 → Cx open check disabled for on-demand conversion 1 → Cx open check performed during on-demand conversion
		BAL_TERM_CONV	WO	5	1	0x0	B	0 → Balancing open check disabled for on-demand conversion 1 → Balancing open check performed during on-demand conversion
		HWSC	WO	4	1	0x0	B	0 → HWSC disabled for on-demand conversion 1 → HWSC performed during on-demand conversion
		TCYCLE	RW	1	3	0x0	A	Determines the period of cyclic conversions executed in Normal state. See the Table 68
		CYCLIC_CONTINUOUS	RW	0	1	0x0	A	0 → Cyclic conversions triggered periodically by TCYCLE timer 1 → Cyclic conversions performed continuously
NCYCLE_PROG_1	0xE							
		T_CELL_SET	RW	16	2	0x0	A	00 → No settling time 01 → 175 μ s settling time 10 → 350 μ s settling time

Register Name	Address	Field name	Type	Bit offset	Bit width	Reset value	Reset sources	Description
								11 → 700 µs settling time
		NCYCLE_GPIO_TERM	RW	13	3	0x0	A	Determines GPIO open check periodicity during cyclic executions See the Table 68
		NCYCLE_CELL_TERM	RW	10	3	0x0	A	Determines Cx open check periodicity during cyclic executions See the Table 68
		NCYCLE_BAL_TERM	RW	7	3	0x0	A	Determines Balancing open check periodicity during cyclic executions See the Table 68
		BAL_TIM_AUTO_PAUSE	RW	6	1	0x0	A	0 → Balancing timer not frozen during balancing auto pause 1 → Balancing timer frozen during balancing auto pause
		BAL_AUTO_PAUSE	RW	5	1	0x1	A	0 → Balancing auto pause disabled 1 → Balancing auto pause enabled
		CYCLIC_UPDATE	RW	4	1	0x0	A	0 → Measurement registers not updated during cyclic conversions 1 → Measurement registers updated during cyclic conversions
		CROSS_ODD_EVEN_CELL	RW	3	1	0x0	B	0 → ADCs not swapped 1 → ADCs swapped
		PCB_open_en_odd_curr	RW	2	1	0x0	B	0 → PCB open diagnostic current disabled on odd cells 1 → PCB open diagnostic current enabled on odd cells
		PCB_open_en_even_curr	RW	1	1	0x0	B	0 → PCB open diagnostic current disabled on even cells 1 → PCB open diagnostic current enabled on even cells
		Noreg0	RO	0	1	0x0	X	
NCYCLE_PROG_2	0xF							
		VTREF_EN	RW	17	1	0x0	A	0 → VTREF regulator disabled 1 → VTREF regulator enabled
		VTREF_DYN_EN	RW	16	1	0x0	A	0 → VTREF regulator always ON 1 → VTREF regulator turned ON only during Voltage Conversion Routine
		NCYCLE_GPIO	RW	13	3	0x0	A	Determines GPIO measurement periodicity during cyclic executions See the Table 68
		NCYCLE_HWSC	RW	10	3	0x0	A	Determines HWSC periodicity during cyclic executions See the Table 68
		Noreg9	RO	9	1	0x0	X	

Register Name	Address	Field name	Type	Bit offset	Bit width	Reset value	Reset sources	Description
		ADC_FILTER_CYCLE	RW	6	3	0x0	A	Determines the filter window used for cyclic conversion in Normal state. See the Table 39
		TCYCLE_SLEEP	RW	3	3	0x0	A	Determines the period of cyclic conversions executed in cyclic wake up. See the Table 68
		ADC_FILTER_SLEEP	RW	0	3	0x0	A	Determines the filter window used for cyclic conversion in cyclic wake up state. See the Table 39
BalCell14_7act	0x10							
		Noreg17	RO	17	1	0x0	X	
		Noreg16	RO	16	1	0x0	X	
		BAL14	RW	14	2	0x1	A	10 → Balancing enabled Others → Balancing disabled
		BAL13	RW	12	2	0x1	A	
		BAL12	RW	10	2	0x1	A	
		BAL11	RW	8	2	0x1	A	
		BAL10	RW	6	2	0x1	A	
		BAL9	RW	4	2	0x1	A	
		BAL8	RW	2	2	0x1	A	
		BAL7	RW	0	2	0x1	A	
BalCell6_1act	0x11							
		Noreg17	RO	17	1	0x0	X	
		Noreg16	RO	16	1	0x0	X	
		BAL6	RW	14	2	0x1	A	10 → Balancing enabled Others → Balancing disabled
		BAL5	RW	12	2	0x1	A	
		BAL4	RW	10	2	0x1	A	
		BAL3	RW	8	2	0x1	A	
		BAL2	RW	6	2	0x1	A	
		BAL1	RW	4	2	0x1	A	
		Noreg3	RO	3	1	0x0	X	
		Noreg2	RO	2	1	0x0	X	
		bal_on	RO	1	1	0x0	A	See the Table 42
		eof_bal	RO	0	1	0x0	A	
FSM	0x12							
		Noreg17	RO	17	1	0x0	X	
		Noreg16	RO	16	1	0x0	X	
		SW_RST	WO	14	2	0x0	B	10 → Triggers software reset

Register Name	Address	Field name	Type	Bit offset	Bit width	Reset value	Reset sources	Description
								Others → No effect
		GO2SLP	WO	12	2	0x0	B	10 → Moves the device to sleep Others → No effect
		FSMstatus	RO	8	4	0x0	B	0001 → Sleep 0010 → Init 0100 → Normal 1000 → Cyclic wake up
		Noreg7	RO	7	1	0x0	X	
		Noreg6	RO	6	1	0x0	X	
		Noreg5	RO	5	1	0x0	X	
		wu_gpio7	RO	4	1	0x0	B	0 → Last wake up source was not GPIO7 1 → Last wake up source was GPIO7
		wu_spi	RO	3	1	0x0	B	0 → Last wake up source was not SPI 1 → Last wake up source was SPI
		wu_isoline	RO	2	1	0x0	B	0 → Last wake up source was not isolated SPI 1 → Last wake up source was isolated SPI
		wu_faulth	RO	1	1	0x0	B	0 → Last wake up source was not FAULTH 1 → Last wake up source was FAULTH
		wu_cyc_wup	RO	0	1	0x0	B	0 → Last wake up source was not TCYCLE_SLEEP 1 → Last wake up source was TCYCLE_SLEEP
GPOxOn_and_GPI93	0x13							
		GPO9on	RW	17	1	0x0	B	0 → GPIO forced low 1 → GPIO forced high
		GPO8on	RW	16	1	0x0	B	
		GPO7on	RW	15	1	0x0	B	
		GPO6on	RW	14	1	0x0	B	
		GPO5on	RW	13	1	0x0	B	
		GPO4on	RW	12	1	0x0	B	
		GPO3on	RW	11	1	0x0	B	Value read on GPIO
		Noreg10	RO	10	1	0x0	X	
		Noreg9	RO	9	1	0x0	X	
		GPI9	RO	8	1	0x0	B	
		GPI8	RO	7	1	0x0	B	
		GPI7	RO	6	1	0x0	B	
		GPI6	RO	5	1	0x0	B	

Register Name	Address	Field name	Type	Bit offset	Bit width	Reset value	Reset sources	Description
		GPI5	RO	4	1	0x0	B	Value read on GPIO
		GPI4	RO	3	1	0x0	B	
		GPI3	RO	2	1	0x0	B	
		Noreg1	RO	1	1	0x0	X	
		Noreg0	RO	0	1	0x0	X	
GPIO9_3_CONF	0x14							
		GPIO9_CONFIG	RW	16	2	0x0	A	00 → Analog input 01 → Not to be used 10 → Digital input 11 → Digital output
		GPIO8_CONFIG	RW	14	2	0x2	A	
		GPIO7_CONFIG	RW	12	2	0x2	A	
		GPIO6_CONFIG	RW	10	2	0x0	A	
		GPIO5_CONFIG	RW	8	2	0x0	A	
		GPIO4_CONFIG	RW	6	2	0x0	A	
		GPIO3_CONFIG	RW	4	2	0x0	A	
		GPIO7_WUP_EN	RW	3	1	0x0	A	0 → GPIO7 not used as wake up input 1 → GPIO7 used as wake up input
		Noreg2	RO	2	1	0x0	X	
		Noreg1	RO	1	1	0x0	X	
		Noreg0	RO	0	1	0x0	X	
GPIO3_THR	0x15							
		GPIO3_OT_TH	RW	9	9	0x0	A	Determines GPIO3 overtemperature threshold See the Table 48
		GPIO3_UT_TH	RW	0	9	0x0	A	Determines GPIO3 undertemperature threshold See the Table 48
GPIO4_THR	0x16							
		GPIO4_OT_TH	RW	9	9	0x0	A	Determines GPIO4 overtemperature threshold See the Table 48
		GPIO4_UT_TH	RW	0	9	0x0	A	Determines GPIO4 undertemperature threshold See the Table 48
GPIO5_THR	0x17							
		GPIO5_OT_TH	RW	9	9	0x0	A	Determines GPIO5 overtemperature threshold See the Table 48
		GPIO5_UT_TH	RW	0	9	0x0	A	Determines GPIO5 undertemperature threshold See the Table 48

Register Name	Address	Field name	Type	Bit offset	Bit width	Reset value	Reset sources	Description
GPIO6_THR	0x18							
		GPIO6_OT_TH	RW	9	9	0x0	A	Determines GPIO6 overtemperature threshold See the Table 48
		GPIO6_UT_TH	RW	0	9	0x0	A	Determines GPIO6 undertemperature threshold See the Table 48
GPIO7_THR	0x19							
		GPIO7_OT_TH	RW	9	9	0x0	A	Determines GPIO7 overtemperature threshold See the Table 48
		GPIO7_UT_TH	RW	0	9	0x0	A	Determines GPIO7 undertemperature threshold See the Table 48
GPIO8_THR	0x1A							
		GPIO8_OT_TH	RW	9	9	0x0	A	Determines GPIO8 overtemperature threshold See the Table 48
		GPIO8_UT_TH	RW	0	9	0x0	A	Determines GPIO8 undertemperature threshold See the Table 48
GPIO9_THR	0x1B							
		GPIO9_OT_TH	RW	9	9	0x0	A	Determines GPIO9 overtemperature threshold See the Table 48
		GPIO9_UT_TH	RW	0	9	0x0	A	Determines GPIO9 undertemperature threshold See the Table 48
VCELLS_EN	0x1C							
		Noreg17	RO	17	1	0x0	X	0 → Cell disabled 1 → Cell enabled
		Noreg16	RO	16	1	0x0	X	
		Noreg15	RO	15	1	0x0	X	
		Noreg14	RO	14	1	0x0	X	
		VCELL14_EN	RW	13	1	0x0	A	
		VCELL13_EN	RW	12	1	0x0	A	
		VCELL12_EN	RW	11	1	0x0	A	
		VCELL11_EN	RW	10	1	0x0	A	
		VCELL10_EN	RW	9	1	0x0	A	
		VCELL9_EN	RW	8	1	0x0	A	
		VCELL8_EN	RW	7	1	0x0	A	
		VCELL7_EN	RW	6	1	0x0	A	

Register Name	Address	Field name	Type	Bit offset	Bit width	Reset value	Reset sources	Description
		VCELL6_EN	RW	5	1	0x0	A	0 → Cell disabled 1 → Cell enabled
		VCELL5_EN	RW	4	1	0x0	A	
		VCELL4_EN	RW	3	1	0x0	A	
		VCELL3_EN	RW	2	1	0x0	A	
		VCELL2_EN	RW	1	1	0x0	A	
		VCELL1_EN	RW	0	1	0x0	A	
Faultmask	0x1D							
		Noreg17	RO	17	1	0x0	X	
		Noreg16	RO	16	1	0x0	X	
		Noreg15	RO	15	1	0x0	X	
		Noreg14	RO	14	1	0x0	X	
		VCELL14_BAL_UV_MSK	RW	13	1	0x0	A	0 → Balancing undervoltage not masked 1 → Balancing undervoltage masked
		VCELL13_BAL_UV_MSK	RW	12	1	0x0	A	
		VCELL12_BAL_UV_MSK	RW	11	1	0x0	A	
		VCELL11_BAL_UV_MSK	RW	10	1	0x0	A	
		VCELL10_BAL_UV_MSK	RW	9	1	0x0	A	
		VCELL9_BAL_UV_MSK	RW	8	1	0x0	A	
		VCELL8_BAL_UV_MSK	RW	7	1	0x0	A	
		VCELL7_BAL_UV_MSK	RW	6	1	0x0	A	
		VCELL6_BAL_UV_MSK	RW	5	1	0x0	A	
		VCELL5_BAL_UV_MSK	RW	4	1	0x0	A	
		VCELL4_BAL_UV_MSK	RW	3	1	0x0	A	
		VCELL3_BAL_UV_MSK	RW	2	1	0x0	A	
		VCELL2_BAL_UV_MSK	RW	1	1	0x0	A	
		VCELL1_BAL_UV_MSK	RW	0	1	0x0	A	
Faultmask2	0x1E							
		EEPROM_DWNLD_DONE	RO	17	1	0x0	A	0 → NVM not downloaded 1 → NVM downloaded
		EEPROM_CRC_ERR_SECT_0	RO	16	1	0x0	A	0 → No CRC error in trimming data 1 → CRC error in trimming data
		EEPROM_CRC_ERRMSK_SECT_0	RW	15	1	0x0	A	0 → CRC error in trimming data not masked 1 → CRC error in trimming data masked
		EEPROM_CRC_ERR_CAL_RAM	RO	14	1	0x0	A	0 → No CRC error in voltage calibration data 1 → CRC error in voltage calibration data

Register Name	Address	Field name	Type	Bit offset	Bit width	Reset value	Reset sources	Description
		EEPROM_CRC_ERRMSK_CAL_RAM	RW	13	1	0x0	A	0 → CRC error in voltage calibration data not masked 1 → CRC error in voltage calibration data masked
		EEPROM_CRC_ERR_CAL_FF	RO	12	1	0x0	A	0 → No CRC error in current calibration data 1 → CRC error in current calibration data
		EEPROM_CRC_ERRMSK_CAL_FF	RW	11	1	0x0	A	0 → CRC error in current calibration data not masked 1 → CRC error in current calibration data masked
		RAM_CRC_ERR	RLR	10	1	0x0	A	0 → No CRC error in RAM content 1 → CRC error in RAM content
		RAM_CRC_ERRMSK	RW	9	1	0x0	A	0 → CRC error in RAM content not masked 1 → CRC error in RAM content masked
		trim_dwnl_tried	RO	8	1	0x0	A	0 → No attempt to download NVM was executed 1 → Attempt to download NVM executed
		TrimmCalOk	RO	7	1	0x0	A	0 → Trimming and calibration data are corrupted 1 → Trimming and calibration data are integer
		Gpio9_fastchg_OT_MSK	RW	6	1	0x0	A	0 → GPIO fast charge overtemperature not masked 1 → GPIO fast charge overtemperature masked
		Gpio8_fastchg_OT_MSK	RW	5	1	0x0	A	
		Gpio7_fastchg_OT_MSK	RW	4	1	0x0	A	
		Gpio6_fastchg_OT_MSK	RW	3	1	0x0	A	
		Gpio5_fastchg_OT_MSK	RW	2	1	0x0	A	
		Gpio4_fastchg_OT_MSK	RW	1	1	0x0	A	
		Gpio3_fastchg_OT_MSK	RW	0	1	0x0	A	
CSA_THRESH_NORM	0x1F							
		adc_ovc_curr_threshold_norm	RW	0	18	0x0	A	Determines the CSA overcurrent threshold in Normal state See the Table 41
CSA_GPIO_MSK	0x20							
		adc_ovc_curr_threshold_sleep	RW	13	5	0x0	A	Determines the CSA overcurrent threshold in Cyclic wake up state See the Table 41
		CoulombCounter_en	RW	12	1	0x0	A	0 → Coulomb Counter disabled 1 → Coulomb Counter enabled

Register Name	Address	Field name	Type	Bit offset	Bit width	Reset value	Reset sources	Description
		ovc_sleep_msk	RW	11	1	0x0	A	0 → CSA overcurrent in cyclic wake up not masked 1 → CSA overcurrent in cyclic wake up masked
		ovc_norm_msk	RW	10	1	0x0	A	0 → CSA overcurrent in normal not masked 1 → CSA overcurrent in normal masked
		sense_plus_open	RLR	9	1	0x0	B	0 → Open failure not detected on CSA non-inverting input 1 → Open failure detected on CSA non-inverting input
		sense_minus_open	RLR	8	1	0x0	B	0 → Open failure not detected on CSA inverting input 1 → Open failure detected on CSA inverting input
		Noreg7	RO	7	1	0x0	X	
		Gpio9_OT_UT_MSK	RW	6	1	0x0	A	0 → GPIO over/under temperature not masked 1 → GPIO over/under temperature masked
		Gpio8_OT_UT_MSK	RW	5	1	0x0	A	
		Gpio7_OT_UT_MSK	RW	4	1	0x0	A	
		Gpio6_OT_UT_MSK	RW	3	1	0x0	A	
		Gpio5_OT_UT_MSK	RW	2	1	0x0	A	
		Gpio4_OT_UT_MSK	RW	1	1	0x0	A	
		Gpio3_OT_UT_MSK	RW	0	1	0x0	A	
Vcell1	0x21							
		Noreg17	RO	17	1	0x0	X	
		d_rdy_Vcell1	RLR	16	1	0x0	B	0 → Data was already read once 1 → Fresh new data
		VCell1	RO	0	16	0x0	B	Cell 1 voltage measurement
Vcell2	0x22							
		Noreg17	RO	17	1	0x0	X	
		d_rdy_Vcell2	RLR	16	1	0x0	B	0 → Data was already read once 1 → Fresh new data
		VCell2	RO	0	16	0x0	B	Cell 2 voltage measurement
Vcell3	0x23							
		Noreg17	RO	17	1	0x0	X	
		d_rdy_Vcell3	RLR	16	1	0x0	B	0 → Data was already read once 1 → Fresh new data
		VCell3	RO	0	16	0x0	B	Cell 3 voltage measurement
Vcell4	0x24							
		Noreg17	RO	17	1	0x0	X	

Register Name	Address	Field name	Type	Bit offset	Bit width	Reset value	Reset sources	Description
		d_rdy_Vcell4	RLR	16	1	0x0	B	0 → Data was already read once 1 → Fresh new data
		VCell4	RO	0	16	0x0	B	Cell 4 voltage measurement
Vcell5	0x25							
		Noreg17	RO	17	1	0x0	X	
		d_rdy_Vcell5	RLR	16	1	0x0	B	0 → Data was already read once 1 → Fresh new data
		VCell5	RO	0	16	0x0	B	Cell 5 voltage measurement
Vcell6	0x26							
		Noreg17	RO	17	1	0x0	X	
		d_rdy_Vcell6	RLR	16	1	0x0	B	0 → Data was already read once 1 → Fresh new data
		VCell6	RO	0	16	0x0	B	Cell 6 voltage measurement
Vcell7	0x27							
		Noreg17	RO	17	1	0x0	X	
		d_rdy_Vcell7	RLR	16	1	0x0	B	0 → Data was already read once 1 → Fresh new data
		VCell7	RO	0	16	0x0	B	Cell 7 voltage measurement
Vcell8	0x28							
		Noreg17	RO	17	1	0x0	X	
		d_rdy_Vcell8	RLR	16	1	0x0	B	0 → Data was already read once 1 → Fresh new data
		VCell8	RO	0	16	0x0	B	Cell 8 voltage measurement
Vcell9	0x29							
		Noreg17	RO	17	1	0x0	X	
		d_rdy_Vcell9	RLR	16	1	0x0	B	0 → Data was already read once 1 → Fresh new data
		VCell9	RO	0	16	0x0	B	Cell 9 voltage measurement
Vcell10	0x2A							
		Noreg17	RO	17	1	0x0	X	
		d_rdy_Vcell10	RLR	16	1	0x0	B	0 → Data was already read once 1 → Fresh new data
		VCell10	RO	0	16	0x0	B	Cell 10 voltage measurement
Vcell11	0x2B							
		Noreg17	RO	17	1	0x0	X	
		d_rdy_Vcell11	RLR	16	1	0x0	B	0 → Data was already read once 1 → Fresh new data

Register Name	Address	Field name	Type	Bit offset	Bit width	Reset value	Reset sources	Description
		VCell11	RO	0	16	0x0	B	Cell 11 voltage measurement
Vcell12	0x2C							
		Noreg17	RO	17	1	0x0	X	
		d_rdy_Vcell12	RLR	16	1	0x0	B	0 → Data was already read once 1 → Fresh new data
		VCell12	RO	0	16	0x0	B	Cell 12 voltage measurement
Vcell13	0x2D							
		Noreg17	RO	17	1	0x0	X	
		d_rdy_Vcell13	RLR	16	1	0x0	B	0 → Data was already read once 1 → Fresh new data
		VCell13	RO	0	16	0x0	B	Cell 13 voltage measurement
Vcell14	0x2E							
		Noreg17	RO	17	1	0x0	X	
		d_rdy_Vcell14	RLR	16	1	0x0	B	0 → Data was already read once 1 → Fresh new data
		VCell14	RO	0	16	0x0	B	Cell 14 voltage measurement
lbattery_synch	0x2F							
		CUR_INST_Synch	RO	0	18	0x0	B	Pack current sample synchronized with last on-demand conversion
lbattery_calib	0x30							
		CUR_INST_calib	RO	0	18	X	B	Pack current sample continuously updated
CoulCntrTime	0x31							
		Noreg17	RO	17	1	0x0	X	
		Noreg16	RO	16	1	0x0	X	
		CoulombCntTime	RO	0	16	0x0	B	Number of current samples acquired
CoulCntr_msb	0x32							
		Noreg17	RO	17	1	0x0	X	
		Noreg16	RO	16	1	0x0	X	
		CoulombCounter_msb	RO	0	16	0x0	B	Current sample accumulator (MSB)
CoulCntr_lsb	0x33							
		Noreg17	RO	17	1	0x0	X	
		Noreg16	RO	16	1	0x0	X	
		CoulombCounter_lsb	RO	0	16	0x0	B	Current sample accumulator (LSB)
GPIO3_MEAS	0x34							
		ratio_abs_3_sel	RW	17	1	0x0	A	0 → Absolute value 1 → Ratiometric value
		d_rdy_gpio3	RLR	16	1	0x0	B	0 → Data was already read once

Register Name	Address	Field name	Type	Bit offset	Bit width	Reset value	Reset sources	Description
								1 → Fresh new data
		GPIO3_MEAS	RO	0	16	0x0	B	GPIO 3 measurement data
GPIO4_MEAS	0x35							
		ratio_abs_4_sel	RW	17	1	0x0	A	0 → Absolute value 1 → Ratiometric value
		d_rdy_gpio4	RLR	16	1	0x0	B	0 → Data was already read once 1 → Fresh new data
		GPIO4_MEAS	RO	0	16	0x0	B	GPIO 4 measurement data
GPIO5_MEAS	0x36							
		ratio_abs_5_sel	RW	17	1	0x0	A	0 → Absolute value 1 → Ratiometric value
		d_rdy_gpio5	RLR	16	1	0x0	B	0 → Data was already read once 1 → Fresh new data
		GPIO5_MEAS	RO	0	16	0x0	B	GPIO 5 measurement data
GPIO6_MEAS	0x37							
		ratio_abs_6_sel	RW	17	1	0x0	A	0 → Absolute value 1 → Ratiometric value
		d_rdy_gpio6	RLR	16	1	0x0	B	0 → Data was already read once 1 → Fresh new data
		GPIO6_MEAS	RO	0	16	0x0	B	GPIO 6 measurement data
GPIO7_MEAS	0x38							
		ratio_abs_7_sel	RW	17	1	0x0	A	0 → Absolute value 1 → Ratiometric value
		d_rdy_gpio7	RLR	16	1	0x0	B	0 → Data was already read once 1 → Fresh new data
		GPIO7_MEAS	RO	0	16	0x0	B	GPIO 7 measurement data
GPIO8_MEAS	0x39							
		ratio_abs_8_sel	RW	17	1	0x0	A	0 → Absolute value 1 → Ratiometric value
		d_rdy_gpio8	RLR	16	1	0x0	B	0 → Data was already read once 1 → Fresh new data
		GPIO8_MEAS	RO	0	16	0x0	B	GPIO 8 measurement data
GPIO9_MEAS	0x3A							
		ratio_abs_9_sel	RW	17	1	0x0	A	0 → Absolute value 1 → Ratiometric value
		d_rdy_gpio9	RLR	16	1	0x0	B	0 → Data was already read once 1 → Fresh new data
		GPIO9_MEAS	RO	0	16	0x0	B	GPIO 9 measurement data

Register Name	Address	Field name	Type	Bit offset	Bit width	Reset value	Reset sources	Description
TempChip	0x3B							
		Noreg17	RO	17	1	0x0	X	
		Noreg16	RO	16	1	0x0	X	
		Noreg15	RO	15	1	0x0	X	
		Noreg14	RO	14	1	0x0	X	
		Noreg13	RO	13	1	0x0	X	
		Noreg12	RO	12	1	0x0	X	
		Noreg11	RO	11	1	0x0	X	
		Noreg10	RO	10	1	0x0	X	
		Noreg9	RO	9	1	0x0	X	
		OTchip	RLR	8	1	0x0	B	0 → No chip overtemperature detected 1 → Chip overtemperature detected
		TempChip	RO	0	8	0x0	B	Device temperature data
Faults1	0x3C							
		Noreg17	RO	17	1	0x0	X	
		Noreg16	RO	16	1	0x0	X	
		Noreg15	RO	15	1	0x0	X	
		Noreg14	RO	14	1	0x0	X	
		VANA_OV	RLR	13	1	0x0	B	0 → VANA overvoltage not detected 1 → VANA overvoltage detected
		VDIG_OV	RLR	12	1	0x0	B	0 → VDIG overvoltage not detected 1 → VDIG overvoltage detected
		VTREF_UV	RLR	11	1	0x0	B	0 → VTREF undervoltage not detected 1 → VTREF undervoltage detected
		VTREF_OV	RLR	10	1	0x0	B	0 → VTREF overvoltage not detected 1 → VTREF overvoltage detected
		VREG_UV	RLR	9	1	0x0	B	0 → VREG undervoltage not detected 1 → VREG undervoltage detected
		VREG_OV	RLR	8	1	0x0	B	0 → VREG overvoltage not detected 1 → VREG overvoltage detected
		VCOM_OV	RLR	7	1	0x0	B	0 → VCOM overvoltage not detected 1 → VCOM overvoltage detected
		VCOM_UV	RLR	6	1	0x0	B	0 → VCOM undervoltage not detected 1 → VCOM undervoltage detected
		HeartBeat_fault	RLR	5	1	0x0	B	0 → Heartbeat absence not detected 1 → Heartbeat absence detected

Register Name	Address	Field name	Type	Bit offset	Bit width	Reset value	Reset sources	Description
		FaultHline_fault	RLR	4	1	0x0	B	0 → No fault incoming from upper level 1 → Fault incoming from upper level
		Fault_L_line_status	RO	3	1	0x0	B	Reads FAULTL pin value
		Noreg2	RO	2	1	0x0	X	
		Noreg1	RO	1	1	0x0	X	
		Comm_timeout_flt	RLR	0	1	0x0	A	0 → Communication timeout not expired 1 → Communication timeout expired
Faults2	0x3D							
		Noreg17	RO	17	1	0x0	X	
		Noreg16	RO	16	1	0x0	X	
		Noreg15	RO	15	1	0x0	X	
		Noreg14	RO	14	1	0x0	X	
		Noreg13	RO	13	1	0x0	X	
		SPIENlatch	RO	12	1	0x0	A	Value latched on SPIEN at powerup
		Noreg11	RO	11	1	0x0	X	
		OSCFail	RLR	10	1	0x0	B	0 → Main oscillator not stuck/out of range 1 → Main oscillator stuck/out of range
		Noreg9	RO	9	1	0x0	X	
		loss_agnd	RLR	8	1	0x0	B	0 → GND not lost 1 → GND lost
		loss_dgnd	RLR	7	1	0x0	B	
		loss_cgnd	RLR	6	1	0x0	B	
		loss_gndref	RLR	5	1	0x0	B	
		Noreg4	RO	4	1	0x0	X	
		CoCouOvF	RLR	3	1	0x0	B	0 → Coulomb Counter not overflown 1 → Coulomb Counter overflown
		EoBtimeerror	RLR	2	1	0x0	A	0 → No error detected between balancing timers 1 → Error detected between watchdog and primary balancing timer
		curr_sense_ovc_sleep	RLR	1	1	0x0	B	0 → CSA overcurrent not detected during cyclic wake up 1 → CSA overcurrent detected during cyclic wake up
		curr_sense_ovc_norm	RLR	0	1	0x0	B	0 → CSA overcurrent not detected during normal state 1 → CSA overcurrent detected during normal state

Register Name	Address	Field name	Type	Bit offset	Bit width	Reset value	Reset sources	Description
BAL_OPEN	0x3E							
		Noreg17	RO	17	1	0x0	X	
		Noreg16	RO	16	1	0x0	X	
		BAL14_OPEN	RLR	15	1	0x0	B	0 → Balancing open not detected 1 → Balancing open detected
		BAL13_OPEN	RLR	14	1	0x0	B	
		BAL12_OPEN	RLR	13	1	0x0	B	
		BAL11_OPEN	RLR	12	1	0x0	B	
		BAL10_OPEN	RLR	11	1	0x0	B	
		BAL9_OPEN	RLR	10	1	0x0	B	
		BAL8_OPEN	RLR	9	1	0x0	B	
		BAL7_OPEN	RLR	8	1	0x0	B	
		BAL6_OPEN	RLR	7	1	0x0	B	
		BAL5_OPEN	RLR	6	1	0x0	B	
		BAL4_OPEN	RLR	5	1	0x0	B	
		BAL3_OPEN	RLR	4	1	0x0	B	
		BAL2_OPEN	RLR	3	1	0x0	B	
		BAL1_OPEN	RLR	2	1	0x0	B	
		Noreg1	RO	1	1	0x0	X	
		Noreg0	RO	0	1	0x0	X	
BAL_SHORT	0x3F							
		Noreg17	RO	17	1	0x0	X	
		Noreg16	RO	16	1	0x0	X	
		BAL14_SHORT	RLR	15	1	0x0	B	0 → Balancing short not detected 1 → Balancing short detected
		BAL13_SHORT	RLR	14	1	0x0	B	
		BAL12_SHORT	RLR	13	1	0x0	B	
		BAL11_SHORT	RLR	12	1	0x0	B	
		BAL10_SHORT	RLR	11	1	0x0	B	
		BAL9_SHORT	RLR	10	1	0x0	B	
		BAL8_SHORT	RLR	9	1	0x0	B	
		BAL7_SHORT	RLR	8	1	0x0	B	
		BAL6_SHORT	RLR	7	1	0x0	B	
		BAL5_SHORT	RLR	6	1	0x0	B	
		BAL4_SHORT	RLR	5	1	0x0	B	
		BAL3_SHORT	RLR	4	1	0x0	B	
		BAL2_SHORT	RLR	3	1	0x0	B	
		BAL1_SHORT	RLR	2	1	0x0	B	
		Noreg1	RO	1	1	0x0	X	

Register Name	Address	Field name	Type	Bit offset	Bit width	Reset value	Reset sources	Description
		Noreg0	RO	0	1	0x0	X	
VSUMBATT	0x40							
		vsum_batt19_2	RO	0	18	0x0	B	Digital sum of cells (MSB)
VBATTDIV	0x41							
		vsum_batt1_0	RO	16	2	0x0	B	Digital sum of cells (LSB)
		VBATT_DIV	RO	0	16	0x0	B	VBAT direct conversion data
CELL_OPEN	0x42							
		data_ready_vsum	RLR	17	1	0x0	B	0 → Data was already read once 1 → Fresh new data
		data_ready_vbattdiv	RLR	16	1	0x0	B	0 → Data was already read once 1 → Fresh new data
		Noreg15	RLR	15	1	0x0	B	0 → Cx open not detected 1 → Cx open detected
		CELL14_OPEN	RLR	14	1	0x0	B	
		CELL13_OPEN	RLR	13	1	0x0	B	
		CELL12_OPEN	RLR	12	1	0x0	B	
		CELL11_OPEN	RLR	11	1	0x0	B	
		CELL10_OPEN	RLR	10	1	0x0	B	
		CELL9_OPEN	RLR	9	1	0x0	B	
		CELL8_OPEN	RLR	8	1	0x0	B	
		CELL7_OPEN	RLR	7	1	0x0	B	
		CELL6_OPEN	RLR	6	1	0x0	B	
		CELL5_OPEN	RLR	5	1	0x0	B	
		CELL4_OPEN	RLR	4	1	0x0	B	
		CELL3_OPEN	RLR	3	1	0x0	B	
		CELL2_OPEN	RLR	2	1	0x0	B	
		CELL1_OPEN	RLR	1	1	0x0	B	
		CELL0_OPEN	RLR	0	1	0x0	B	
VCELL_UV	0x43							
		Noreg17	RO	17	1	0x0	X	
		VBATT_WRN_UV	RLR	16	1	0x0	B	0 → VBAT UV comparator not triggered 1 → VBAT UV comparator triggered
		VBATTCRIT_UV	RLR	15	1	0x0	B	0 → VBAT critical UV not detected 1 → VBAT critical UV detected
		VSUM_UV	RLR	14	1	0x0	B	0 → Sum of cells UV not detected 1 → Sum of cells UV detected
		VCELL14_UV	RLR	13	1	0x0	B	0 → Cell UV not detected
		VCELL13_UV	RLR	12	1	0x0	B	1 → Cell UV detected

Register Name	Address	Field name	Type	Bit offset	Bit width	Reset value	Reset sources	Description
		VCELL12_UV	RLR	11	1	0x0	B	0 → Cell UV not detected 1 → Cell UV detected
		VCELL11_UV	RLR	10	1	0x0	B	
		VCELL10_UV	RLR	9	1	0x0	B	
		VCELL9_UV	RLR	8	1	0x0	B	
		VCELL8_UV	RLR	7	1	0x0	B	
		VCELL7_UV	RLR	6	1	0x0	B	
		VCELL6_UV	RLR	5	1	0x0	B	
		VCELL5_UV	RLR	4	1	0x0	B	
		VCELL4_UV	RLR	3	1	0x0	B	
		VCELL3_UV	RLR	2	1	0x0	B	
		VCELL2_UV	RLR	1	1	0x0	B	
		VCELL1_UV	RLR	0	1	0x0	B	
VCELL_OV	0x44							
		Noreg17	RO	17	1	0x0	X	
		VBATT_WRN_OV	RLR	16	1	0x0	B	0 → VBAT OV comparator not triggered 1 → VBAT OV comparator triggered
		VBATTCRIT_OV	RLR	15	1	0x0	B	0 → VBAT critical OV not detected 1 → VBAT critical OV detected
		VSUM_OV	RLR	14	1	0x0	B	0 → Sum of cells OV not detected 1 → Sum of cells OV detected
		VCELL14_OV	RLR	13	1	0x0	B	0 → Cell OV not detected 1 → Cell OV detected
		VCELL13_OV	RLR	12	1	0x0	B	
		VCELL12_OV	RLR	11	1	0x0	B	
		VCELL11_OV	RLR	10	1	0x0	B	
		VCELL10_OV	RLR	9	1	0x0	B	
		VCELL9_OV	RLR	8	1	0x0	B	
		VCELL8_OV	RLR	7	1	0x0	B	
		VCELL7_OV	RLR	6	1	0x0	B	
		VCELL6_OV	RLR	5	1	0x0	B	
		VCELL5_OV	RLR	4	1	0x0	B	
		VCELL4_OV	RLR	3	1	0x0	B	
		VCELL3_OV	RLR	2	1	0x0	B	
		VCELL2_OV	RLR	1	1	0x0	B	
		VCELL1_OV	RLR	0	1	0x0	B	
VGPIO_OT_UT	0x45							
		Noreg17	RO	17	1	0x0	X	

Register Name	Address	Field name	Type	Bit offset	Bit width	Reset value	Reset sources	Description
		Noreg16	RO	16	1	0x0	X	
		Noreg15	RO	15	1	0x0	X	
		Noreg14	RO	14	1	0x0	X	
		GPIO9_OT	RLR	13	1	0x0	B	0 → GPIO OT not detected 1 → GPIO OT detected
		GPIO8_OT	RLR	12	1	0x0	B	
		GPIO7_OT	RLR	11	1	0x0	B	
		GPIO6_OT	RLR	10	1	0x0	B	
		GPIO5_OT	RLR	9	1	0x0	B	
		GPIO4_OT	RLR	8	1	0x0	B	
		GPIO3_OT	RLR	7	1	0x0	B	
		GPIO9_UT	RLR	6	1	0x0	B	0 → GPIO UT not detected 1 → GPIO UT detected
		GPIO8_UT	RLR	5	1	0x0	B	
		GPIO7_UT	RLR	4	1	0x0	B	
		GPIO6_UT	RLR	3	1	0x0	B	
		GPIO5_UT	RLR	2	1	0x0	B	
		GPIO4_UT	RLR	1	1	0x0	B	
		GPIO3_UT	RLR	0	1	0x0	B	
VCELL_BAL_UV	0x46							
		Noreg17	RO	17	1	0x0	X	
		Noreg16	RO	16	1	0x0	X	
		Noreg15	RO	15	1	0x0	X	
		Noreg14	RO	14	1	0x0	X	
		VCELL14_BAL_UV	RLR	13	1	0x0	B	0 → Cell balancing UV not detected 1 → Cell balancing UV detected
		VCELL13_BAL_UV	RLR	12	1	0x0	B	
		VCELL12_BAL_UV	RLR	11	1	0x0	B	
		VCELL11_BAL_UV	RLR	10	1	0x0	B	
		VCELL10_BAL_UV	RLR	9	1	0x0	B	
		VCELL9_BAL_UV	RLR	8	1	0x0	B	
		VCELL8_BAL_UV	RLR	7	1	0x0	B	
		VCELL7_BAL_UV	RLR	6	1	0x0	B	
		VCELL6_BAL_UV	RLR	5	1	0x0	B	
		VCELL5_BAL_UV	RLR	4	1	0x0	B	
		VCELL4_BAL_UV	RLR	3	1	0x0	B	
		VCELL3_BAL_UV	RLR	2	1	0x0	B	
		VCELL2_BAL_UV	RLR	1	1	0x0	B	
		VCELL1_BAL_UV	RLR	0	1	0x0	B	

Register Name	Address	Field name	Type	Bit offset	Bit width	Reset value	Reset sources	Description
GPIO_fastchg_OT	0x47							
		Noreg17	RO	17	1	0x0	X	
		Noreg16	RO	16	1	0x0	X	
		Noreg15	RO	15	1	0x0	X	
		Noreg14	RO	14	1	0x0	X	
		GPIO9_OPEN	RLR	13	1	0x0	B	0 → GPIO open not detected 1 → GPIO open detected
		GPIO8_OPEN	RLR	12	1	0x0	B	
		GPIO7_OPEN	RLR	11	1	0x0	B	
		GPIO6_OPEN	RLR	10	1	0x0	B	
		GPIO5_OPEN	RLR	9	1	0x0	B	
		GPIO4_OPEN	RLR	8	1	0x0	B	
		GPIO3_OPEN	RLR	7	1	0x0	B	0 → GPIO fast charge OT not detected 1 → GPIO fast charge OT detected
		GPIO9_fastchg_OT	RLR	6	1	0x0	B	
		GPIO8_fastchg_OT	RLR	5	1	0x0	B	
		GPIO7_fastchg_OT	RLR	4	1	0x0	B	
		GPIO6_fastchg_OT	RLR	3	1	0x0	B	
		GPIO5_fastchg_OT	RLR	2	1	0x0	B	
		GPIO4_fastchg_OT	RLR	1	1	0x0	B	
		GPIO3_fastchg_OT	RLR	0	1	0x0	B	
MUX_BIST_FAIL	0x48							
		Noreg17	RO	17	1	0x0	X	
		Noreg16	RO	16	1	0x0	X	
		Noreg15	RO	15	1	0x0	X	
		HWSC_DONE	RLR	14	1	0x0	B	0 → HWSC not executed 1 → HWSC terminated
		MUX_BIST_FAIL	RLR	0	14	0x0	B	0 → No failure detected on Cx conversion path 1 → Failure detected on Cx conversion path
BIST_COMP	0x49							
		VBAT_COMP_BIST_FAIL	RLR	17	1	0x0	B	0 → VBAT comparator BIST not failed 1 → VBAT comparator BIST failed
		VREG_COMP_BIST_FAIL	RLR	16	1	0x0	B	0 → VREG comparator BIST not failed 1 → VREG comparator BIST failed
		VCOM_COMP_BIST_FAIL	RLR	15	1	0x0	B	0 → VCOM comparator BIST not failed 1 → VCOM comparator BIST failed

Register Name	Address	Field name	Type	Bit offset	Bit width	Reset value	Reset sources	Description
		VTREF_COMP_BIST_FAIL	RLR	14	1	0x0	B	0 → VTREF comparator BIST not failed 1 → VTREF comparator BIST failed
		BIST_BAL_COMP_HS_FAIL	RLR	7	7	0x0	B	0 → Balancing comparator BIST not failed on even cells 1 → Balancing comparator BIST failed on even cells
		BIST_BAL_COMP_LS_FAIL	RLR	0	7	0x0	B	0 → Balancing comparator BIST not failed on odd cells 1 → Balancing comparator BIST failed on odd cells
OPEN_BIST_FAIL	0x4A							
		Noreg17	RO	17	1	0x0	X	
		Noreg16	RO	16	1	0x0	X	
		Noreg15	RO	15	1	0x0	X	
		Noreg14	RO	14	1	0x0	X	
		OPEN_BIST_FAIL	RLR	0	14	0x0	B	0 → No failure detected on Sx/Bx_x-1 conversion path 1 → Failure detected on Sx/Bx_x-1 conversion path
GPIO_BIST_FAIL	0x4B							
		GPO9short	RLR	17	1	0x0	B	
		GPO8short	RLR	16	1	0x0	B	
		GPO7short	RLR	15	1	0x0	B	
		GPO6short	RLR	14	1	0x0	B	
		GPO5short	RLR	13	1	0x0	B	
		GPO4short	RLR	12	1	0x0	B	
		GPO3short	RLR	11	1	0x0	B	
		Noreg10	RO	10	1	0x0	X	
		Noreg9	RO	9	1	0x0	X	
		Noreg8	RLR	8	1	0x0	B	
		VTREF_BIST_FAIL	RLR	7	1	0x0	B	0 → VCOM comparator BIST not failed 1 → VCOM comparator BIST failed
		GPIO_BIST_FAIL	RLR	0	7	0x0	B	0 → No failure detected on GPIO conversion path 1 → Failure detected on GPIO conversion path
VTREF	0x4C							
		Noreg17	RO	17	1	0x0	X	
		d_rdy_vtref	RLR	16	1	0x0	B	0 → Data was already read once

Register Name	Address	Field name	Type	Bit offset	Bit width	Reset value	Reset sources	Description
								1 → Fresh new data
		VTREF_MEAS	RO	0	16	0x0	B	VTREF conversion data
NVM_WR_1	0x4D							
		Noreg17	RO	17	1	0x0	X	
		Noreg16	RO	16	1	0x0	X	
		NVM_WR_15_0	RW	0	16	0x0	B	Write buffer for NVM sector 0_15
NVM_WR_2	0x4E							
		Noreg17	RO	17	1	0x0	X	
		Noreg16	RO	16	1	0x0	X	
		NVM_WR_31_16	RW	0	16	0x0	B	Write buffer for NVM sector 16_31
NVM_WR_3	0x4F							
		Noreg17	RO	17	1	0x0	X	
		Noreg16	RO	16	1	0x0	X	
		NVM_WR_47_32	RW	0	16	0x0	B	Write buffer for NVM sector 32_47
NVM_WR_4	0x50							
		Noreg17	RO	17	1	0x0	X	
		Noreg16	RO	16	1	0x0	X	
		NVM_WR_63_48	RW	0	16	0x0	B	Write buffer for NVM sector 48_63
NVM_WR_5	0x51							
		Noreg17	RO	17	1	0x0	X	
		Noreg16	RO	16	1	0x0	X	
		NVM_WR_79_64	RW	0	16	0x0	B	Write buffer for NVM sector 64_79
NVM_WR_6	0x52							
		Noreg17	RO	17	1	0x0	X	
		Noreg16	RO	16	1	0x0	X	
		NVM_WR_95_80	RW	0	16	0x0	B	Write buffer for NVM sector 80_95
NVM_WR_7	0x53							
		Noreg17	RO	17	1	0x0	X	
		Noreg16	RO	16	1	0x0	X	
		NVM_WR_111_96	RW	0	16	0x0	B	Write buffer for NVM sector 96_111
NVM_RD_1	0x54							
		Noreg17	RO	17	1	0x0	X	
		Noreg16	RO	16	1	0x0	X	
		NVM_RD_15_0	RO	0	16	0x0	B	Read buffer for NVM sector 0_15
NVM_RD_2	0x55							
		Noreg17	RO	17	1	0x0	X	
		Noreg16	RO	16	1	0x0	X	

Register Name	Address	Field name	Type	Bit offset	Bit width	Reset value	Reset sources	Description
		NVM_RD_31_16	RO	0	16	0x0	B	Read buffer for NVM sector 16_31
NVM_RD_3	0x56							
		Noreg17	RO	17	1	0x0	X	
		Noreg16	RO	16	1	0x0	X	
		NVM_RD_47_32	RO	0	16	0x0	B	Read buffer for NVM sector 32_47
NVM_RD_4	0x57							
		Noreg17	RO	17	1	0x0	X	
		Noreg16	RO	16	1	0x0	X	
		NVM_RD_63_48	RO	0	16	0x0	B	Read buffer for NVM sector 48_63
NVM_RD_5	0x58							
		Noreg17	RO	17	1	0x0	X	
		Noreg16	RO	16	1	0x0	X	
		NVM_RD_79_64	RO	0	16	0x0	B	Read buffer for NVM sector 64_79
NVM_RD_6	0x59							
		Noreg17	RO	17	1	0x0	X	
		Noreg16	RO	16	1	0x0	X	
		NVM_RD_95_80	RO	0	16	0x0	B	Read buffer for NVM sector 80_95
NVM_RD_7	0x5A							
		Noreg17	RO	17	1	0x0	X	
		Noreg16	RO	16	1	0x0	X	
		NVM_RD_111_96	RO	0	16	0x0	B	Read buffer for NVM sector 96_111
NVM_CMD_CNTR	0x5B							
		Noreg17	RO	17	1	0x0	X	
		Noreg16	RO	16	1	0x0	X	
		Noreg15	RO	15	1	0x0	X	
		Noreg14	RO	14	1	0x0	X	
		Noreg13	RO	13	1	0x0	X	
		Noreg12	RO	12	1	0x0	X	
		NVM_WR_BUSY	RO	11	1	0x0	B	0 → NVM controller not busy 1 → NVM controller busy
		NVM_OPER	RW	9	2	0x0	B	00/01 → No Action 10 → Erase 11 → Write
		NVM_PROGRAM	RW	8	1	0x0	B	0 → NVM controller not armed to execute operation defined by NVM_OPER 1 → NVM controller armed to execute operation defined by NVM_OPER

Register Name	Address	Field name	Type	Bit offset	Bit width	Reset value	Reset sources	Description
		NVM_CNTR	RO	0	8	0x0	B	Counts the number of write cycles executed See
NVM_UNLCK_PRG	0x5C							
		NVM_UNLOCK_START	WO	0	18	0x0	B	

6 Application information

6.1 Layout recommendations

6.1.1 PCB stackup

In order to achieve the best performances in terms of accuracy and EMC, an optimal PCB layer partitioning must be chosen. ST recommends the following stackup on a 4-layer board:

- **Top layer:** analog sense lines (refer to the [Section 6.1.3: Cell balancing \(Force\) and cell sensing \(Sense\) lines](#))
 - Battery supply and sense line (pin VBAT)
 - Cell voltage sense (pins Cx)
 - Current sense (pins ISENSEx)
 - NTC sense (pins GPIOx)
 - GNDREF
- **2nd layer:** ground planes (refer to the [Section 6.1.2: Ground connections](#) for further details)
 - AGND under sense lines
 - DGND under communication and digital lines
 - GND_ESD/PACK_GND under the ESD caps in the battery connector region
- **3rd layer:** analog force lines (refer to the [Section 6.1.3: Cell balancing \(Force\) and cell sensing \(Sense\) lines](#))
 - Balancing lines (pins Sx and Bx_x-1)
- **Bottom layer:** analog COM lines and Digital lines
 - Isolated COM line (pins ISOHx/ISOLx)
 - Digital lines (pins GPIOx)
 - Regulators (pins VREG, VCOM, VTREF, VANA)

6.1.2 Ground connections

In order to achieve the best performances in terms of accuracy and EMC, care must be taken while designing ground connections.


L99BM114 features 4 ground pins used as internal reference:

- **AGND:**  is the reference plane for the L99BM114 internal analog circuitry and must be kept as “clean” as possible in order not to catch noise from the nearby switching components. It can be used as 2nd layer of the PCB to shield voltage sense lines routed on the 1st layer.
- **DGND:**  is the reference plane for the L99BM114 internal digital circuitry and it introduces noise on the PCB due to the logic switching activity. It must be separated from AGND plane and can be routed over the 2nd PCB layer.
- **CGND:** is the reference line for the L99BM114 internal communication circuitry. It is connected to the output buffer of SDO line and it acts as a reference for the ISOHx and ISOLx signals. It can be joined with DGND plane at device pin level.
- **GNDREF:** is the reference line for the L99BM114 internal ADCs. It carries low current and must be connected to the negative terminal of the battery pack, over the 1st layer, shielded by AGND as it was a cell voltage sense line. This will guarantee a clean and precise reference for all the internal ADCs.

L99BM114 performances are guaranteed if ground shift between AGND/DGND/CGND/GNDREF is kept below 100 mV. Hence, all the planes/lines mentioned above must be joined on the same node. This node is normally represented by the PCB connector to the battery pack ground, corresponding to the negative terminal of the first cell (PACK_GND .


In case the **Hotplug** circuitry is mounted, the grounds collection node becomes the drain terminal of the MOSFET MHOT (refer to [Figure 27](#)).

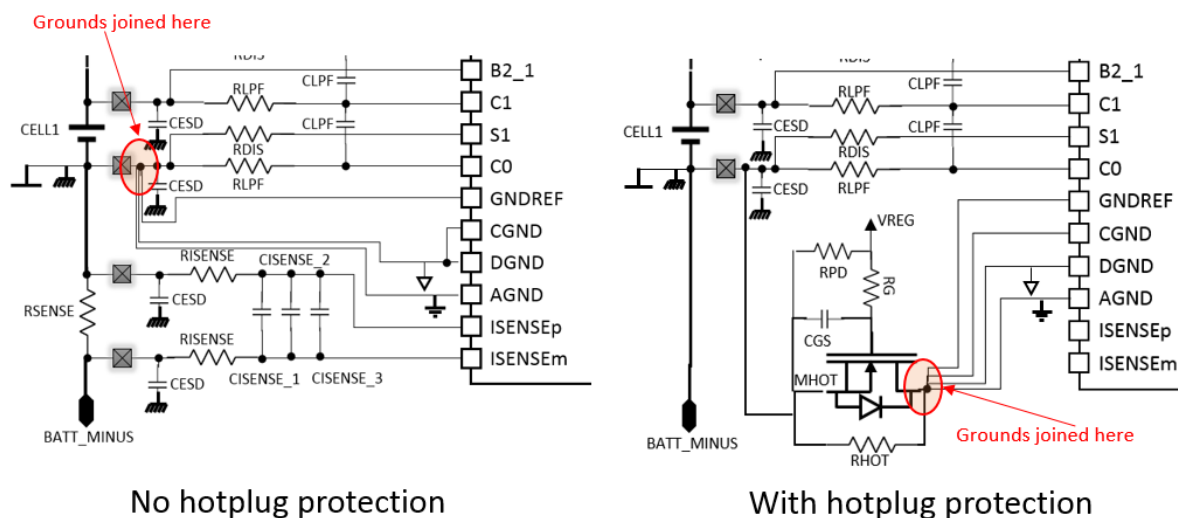Figure 27. Grounds collection node



ESD strikes at system level can damage both L99BM114 and analog front end components. In order to provide an effective protection, charge released upon strike must be properly deviated towards the GND_ESD. This is achieved by proper grounding of the ESD capacitors to such a dedicated ground plane, which is then joined with the other grounds at the PCB connector to PACK_GND, regardless of the hotplug protection implementation. In fact, the ESD strike must bypass MHOT in order not to damage it.

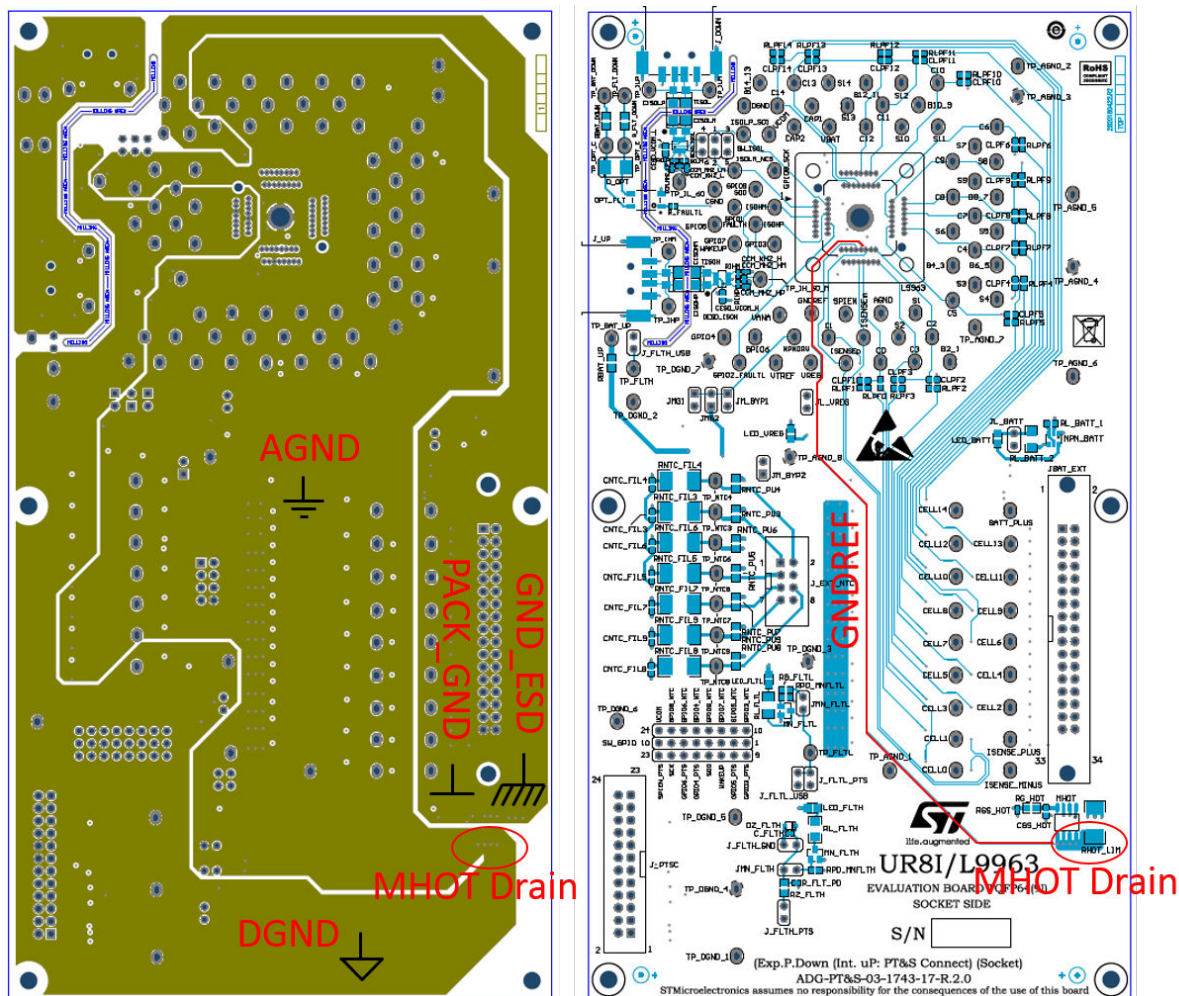Figure 28. Layout example of ground connections




6.1.3 Cell balancing (Force) and cell sensing (Sense) lines

To increase cell voltage measurement accuracy during balancing, the voltage drop over the PCB lanes connected to the cells has to be minimized. In order to do so, voltage sense lines connected to L99BM114 Cx pins and cell balancing lines connected to Sx/Bx_x-1 pins must be split as close as possible to the PCB connector.

As recommended in **PCB Stackup**, cell sense lines must be routed over the top layer, shielded by AGND, while balancing lines can be routed over the 3rd layer. Splitting must be done after the ESD caps and ferrite beads, in order to guarantee protection from strikes and EMI robustness. [Figure 29](#) shows a layout example.

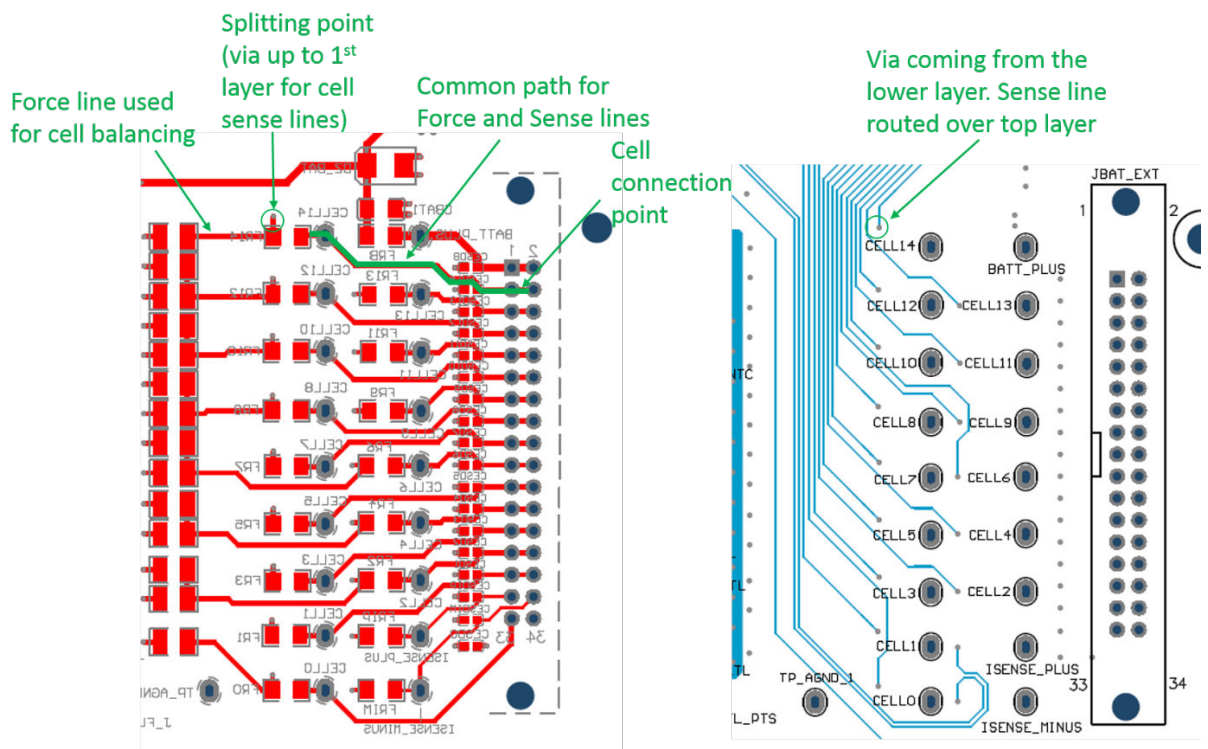Figure 29. Example of best practice for splitting cell force and sense lines



6.1.4 Regulator capacitors

L99BM114 features only linear regulators, in order not to introduce any switching noise on the PCB. Nevertheless, regulator capacitors must be placed as close as possible to the corresponding device pin in order to avoid loops generated by long traces and filter any ripple caused by current absorption peaks.

Mounting capacitors on the bottom side of the PCB, close to the L99BM114 footprint is a good option.

6.1.5 ESD clamps for communication interfaces

Routing of the PCB traces connected to the ESD clamp of the vertical interface is critical in order to ensure maximum reduction of the spikes.

Even if the ISOHx and ISOLx pins are connected to the ECU global pins through a transformer, this component does not guarantee total protection against very fast spikes due to ESD strikes and/or sudden external shorts to battery/ground. In fact, the transformer parasitic capacitance between primary and secondary windings (in the order of magnitude of pF) is still able to couple very fast voltage transients from one side to the other.

In order to clamp such spikes, ST recommends using the D_ESD component in the **ISO Lines Circuit**. To achieve maximum clamping effectiveness, recommendations shown in [Figure 30](#) and [Figure 31](#) must be followed, in order to reduce parasitic effects due to the inductances of the PCB lanes.

Figure 30. Recommended routing technique in order to reduce additional spikes due to lanes parasitic inductance


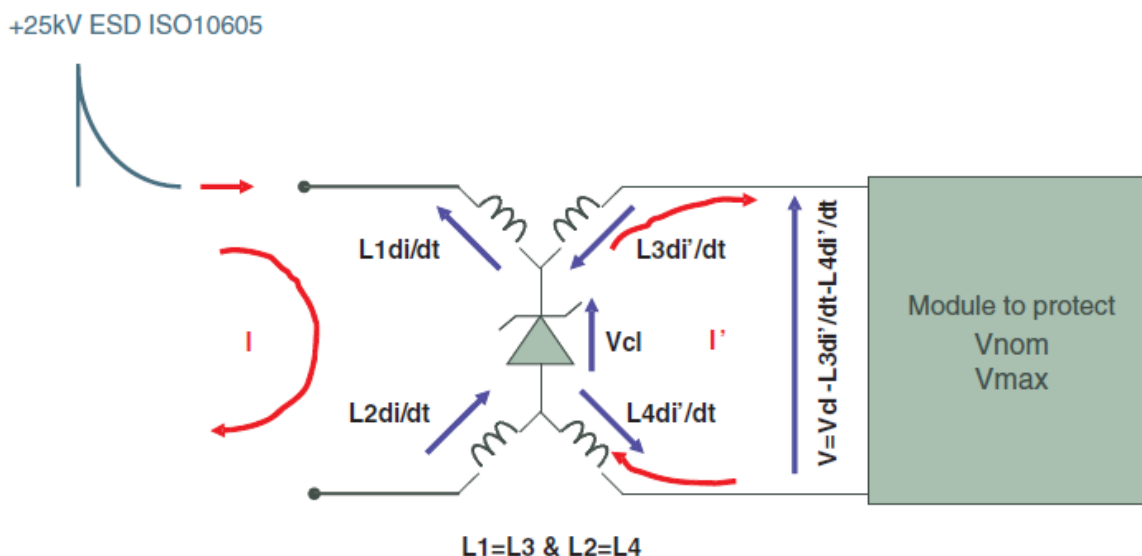


Figure 31. Layout for ESD protections according to the recommended technique

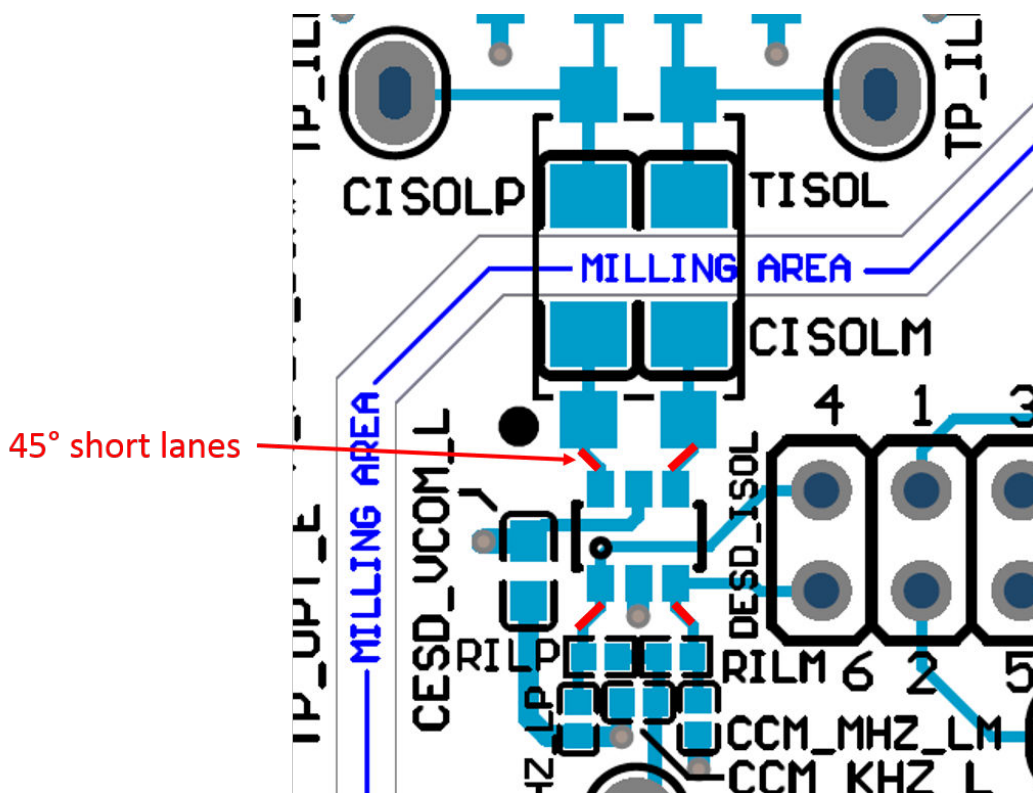

6.2 Typical application circuit and bill of material

Figure 32. Typical application circuit

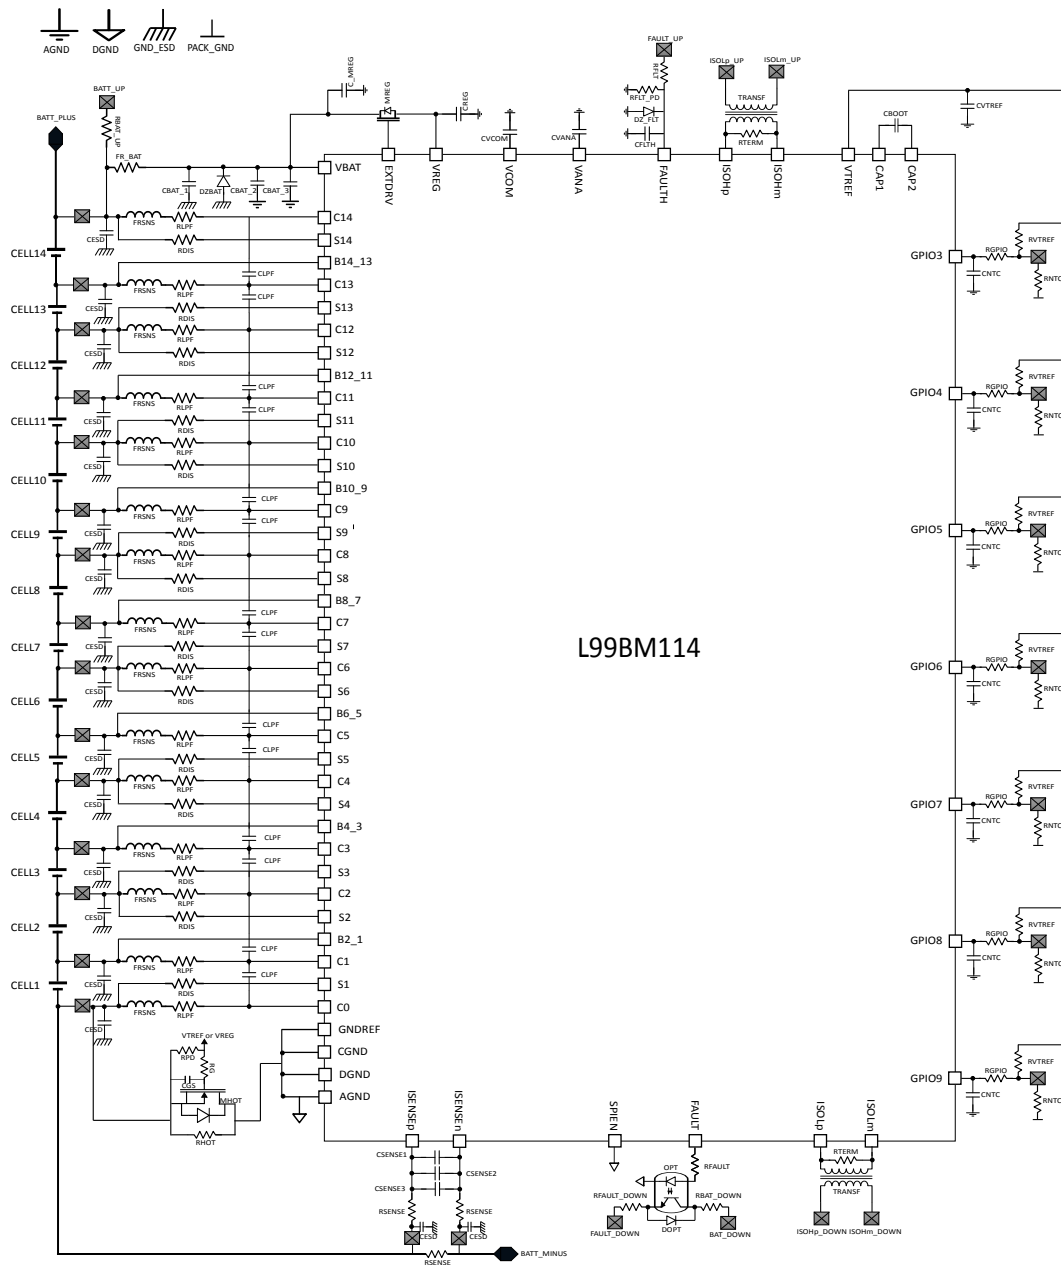


Table 73. Recommended components for typical application scenario

Components	Value	Unit	Max. tolerance	Rating	Comments
FRBAT	1	kΩ	@100 MHz	1.4 A @ 125 °C	Ferrite bead helps limiting the inrush current due to hotplug. It also filters high frequency noise. The BLM31KN102SH1L is recommended. It can be replaced with a 10 Ω RBAT resistor. Higher resistance values are not recommended since they introduce an error in VBAT measurement, proportional to $R_{BAT} \cdot I_{VBAT}$.
DZBAT	68	V			The SMA6T68AY is recommended for protecting VBAT against damage during hotplug and ESD events. Connect to GND_ESD.

Components	Value	Unit	Max. tolerance	Rating	Comments
CBAT_3	100	pF	10%	100 V	Filter high frequency noise on VBAT sense line. Place as close as possible to VBAT pin. Connect to AGND.
CBAT_2	33	nF	10%	100 V	Filter high frequency noise on VBAT sense line. Place as close as possible to VBAT pin. Connect to AGND.
CBAT_1	2.2	μF	10%	100 V	Provide battery stabilization. Filter noise on VBAT sense line. Connect to GND_ESD. Do not exceed 2.2 μF.
CVCOM	220	nF	10%	16 V	Tank for the VCOM regulator. Mount as close as possible to VCOM pin. Total capacity on the VCOM pin must be equal to 2.2 μF. When isolated SPI communication is implemented via Transformer-Based Insulation, the recommended capacity partitioning is: • 1 μF as CESD_VCOM on the ISOH clamp. Connect to GND_ESD • 1 μF as CESD_VCOM on the ISOL clamp. Connect to GND_ESD • 220 nF as CVCOM directly on the VCOM pin. Connect to AGND
CVCOM	2.2	μF	10%	16 V	Tank for the VCOM regulator. Mount as close as possible to VCOM pin. This configuration is recommended when isolated SPI communication is implemented via Capacitive-Based Insulation .
CVANA	2.2	μF	10%	6.3 V	Tank for the VANA regulator. Connect to AGND.
CVTREF	2.2	μF	10%	16 V	Tank for the VTREF regulator. Connect to AGND.
CBOOT	1	μF	10%	16 V	Bootstrap capacitor.

6.3 Cell voltage sensing circuit

Figure 33 shows the recommended cell voltage sensing circuit.

Figure 33. Typical cell voltage sensing circuit


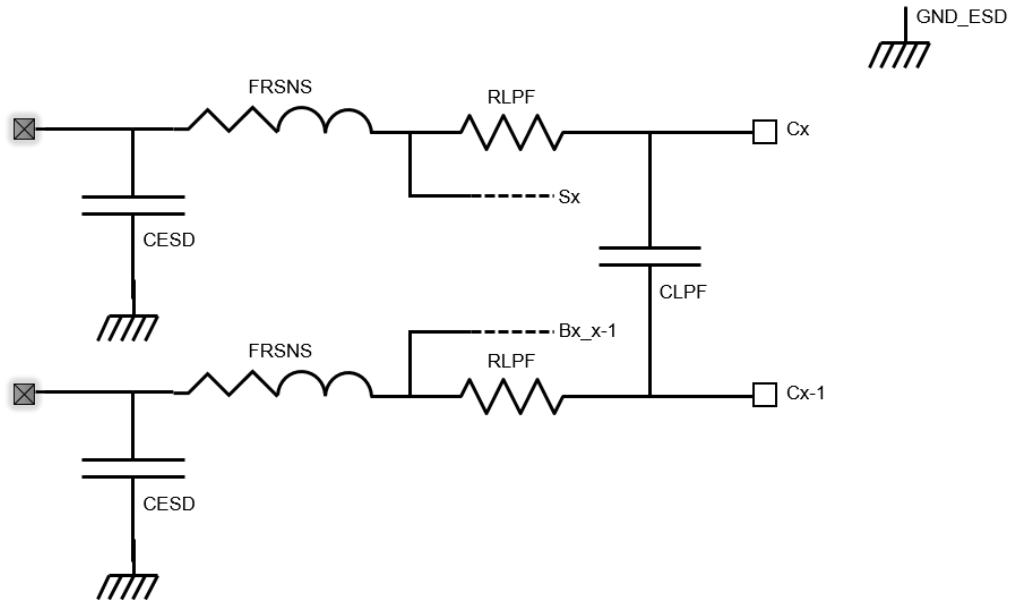


Table 74. Typical BOM for cell voltage sensing circuit

Components	Value	Unit	Max. tolerance	Rating	Comments
R_{LPF}	100	Ω	10%	1/16 W	LPF resistor for cell voltage measurement. Do not exceed 3 kΩ, otherwise cell open failure could be detected. Higher values of resistance cause higher measurement offset error due to the leakage I_{CELL_LEAK} from Cx pins (see the Table 39). A typical value of 100 Ω is recommended for pre-filtering the input signal in the analog domain and pass BCI trials. The differential filter cut-off frequency is $f_C = \frac{1}{4\pi R_{LPF} C_{LPF}}$. Do not use thin film resistors on these lines connected to ECU global pins. They could drift upon System Level ESD strikes. Use thick film or metal foil instead.
C_{LPF}	10	nF	10%	50 V	LPF capacitor for cell voltage measurement. The differential filter cut-off frequency is $f_C = \frac{1}{4\pi R_{LPF} C_{LPF}}$. The capacitors also allow better energy distribution during hotplug events. Do not modify this value, since it alters cell open diagnostic settling time.
C_{ESD}	47	nF	10%	100 V	Protect against ESD events and ISO spikes. Connect to GND_ESD.
FR_{SNS}	1	k Ω	@100 MHz	1 A @ 125 °C	Add robustness against RF immunity test. MPZ2012S102ATD25 is recommended.

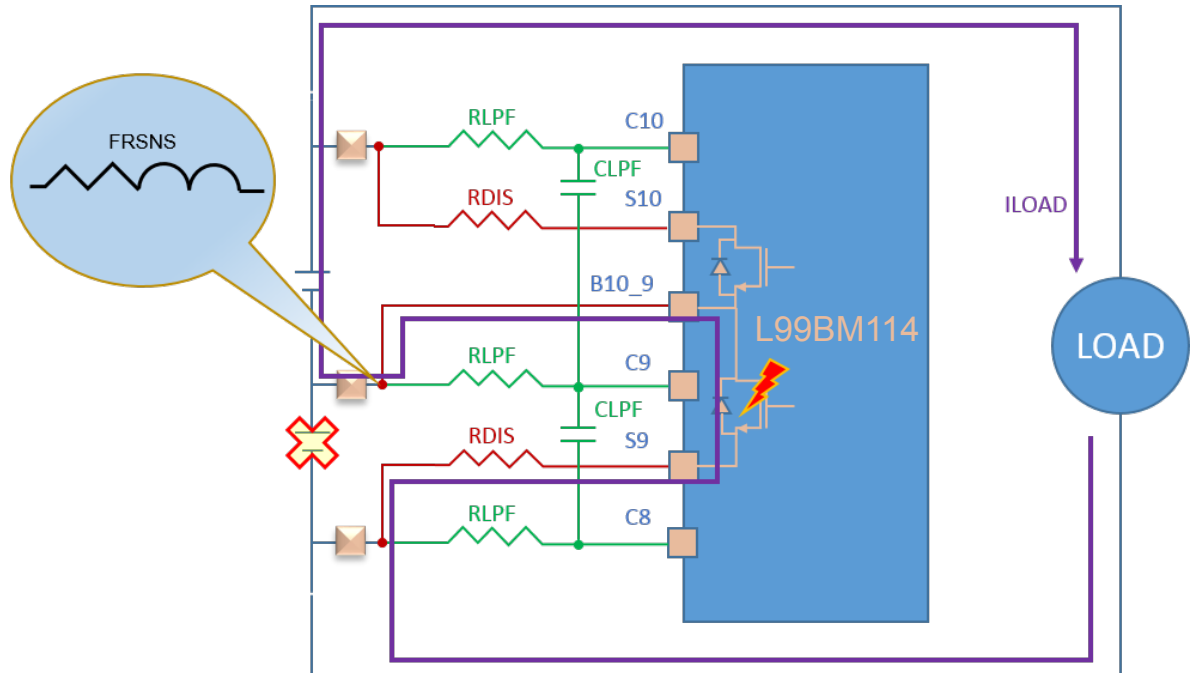Figure 34. Application suggestion for open bus bar conditions



6.4 Current sense circuit

Figure 35 shows the recommended cell voltage sensing circuit.

Figure 35. Typical current sensing analog front end

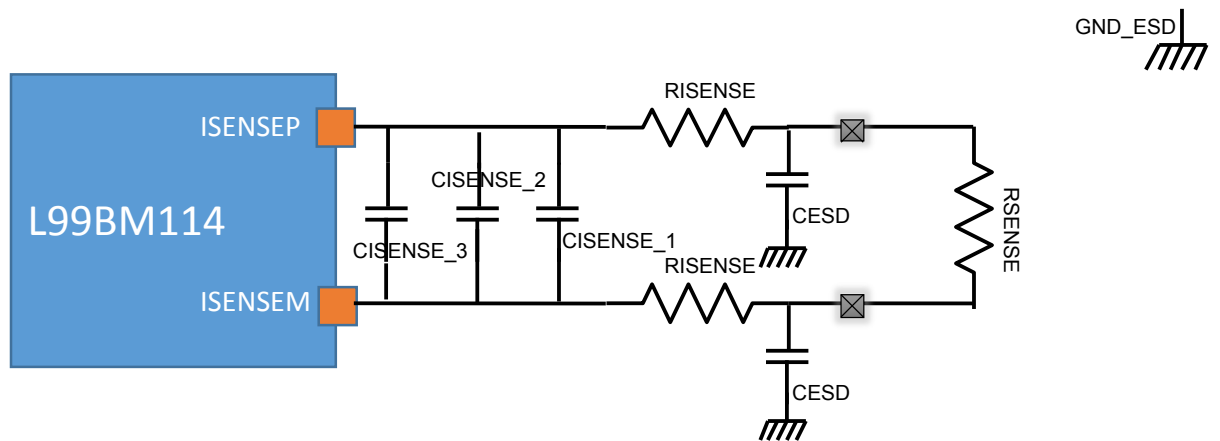


Table 75. Current sense BOM

Components	Value	Unit	Max. tolerance	Rating	Comments
C _{ESD}	47	nF	10%	100 V	Protect against ESD events and ISO spikes. Connect to GND_ESD
R _{SENSE}	100	μΩ	-	-	Shunt resistor used for current sensing and coulomb counting. Rating depends on the maximum battery current ($R_{SENSE} \cdot I_{SENSE_MAX}^2$). Different R _{SENSE} values are possible as long as $R_{SENSE} \cdot I_{SENSE}$ stays in the differential measurement range [-150 ; +150] mV and the ISENSEp/ISENSEm AMR are not violated

Components	Value	Unit	Max. tolerance	Rating	Comments
C _{ISENSE_1}	10	μF	10%	10 V	Filter low frequency noise on the ISENSEp/ISENSEm input.
C _{ISENSE_2}	68	nF	10%	10 V	Filter high frequency noise on the ISENSEp/ISENSEm input.
C _{ISENSE_3}	33	pF	10%	10 V	Filter high frequency noise on the ISENSEp/ISENSEm input. Place as close as possible to ISENSEp/ISENSEm pins.
R _{ISENSE}	100	Ω	1%	1 W	Filter noise on the ISENSEp/ISENSEm input and pass BCI tests. Exceeding 100 Ω causes a higher measurement error. Do not use thin film resistors on these lines connected to ECU global pins. They could drift upon System Level ESD strikes. Use thick film or metal foil instead.

6.5 VREG regulator circuit

VREG is the main device regulator, handling most of the current consumed by L99BM114 in Normal mode.

Figure 36. VREG regulator circuits

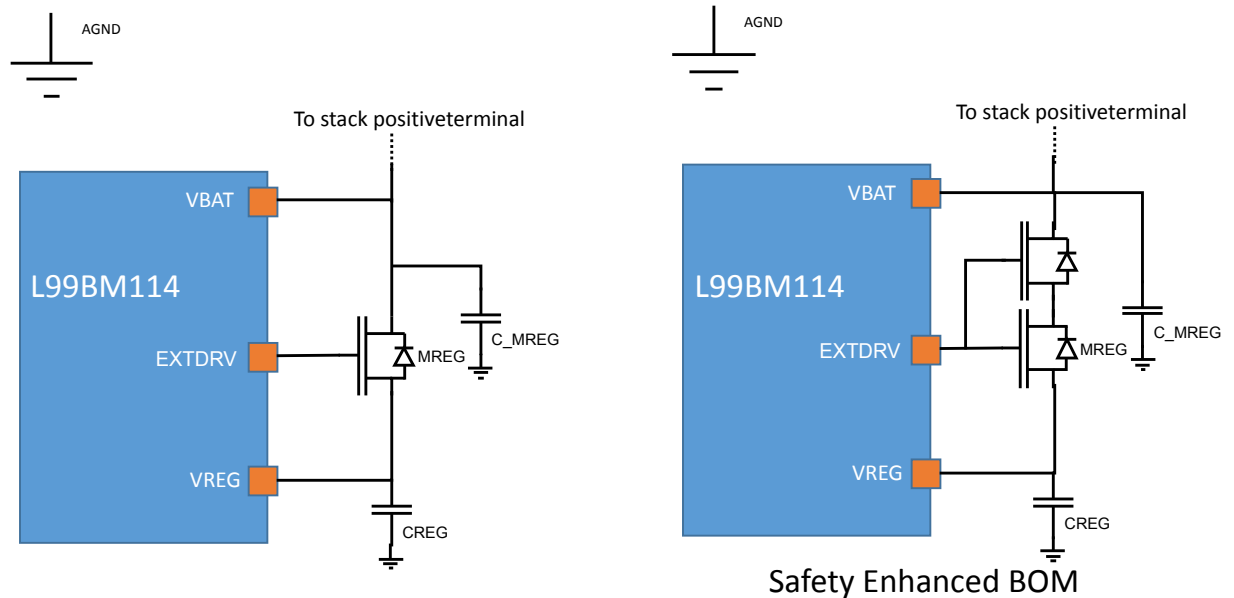



Table 76. VREG regulator BOM

Components	Value	Unit	Max. tolerance	Rating	Comments
C _{MREG}	100	nF	20%	100 V	Provide battery stabilization for regulator. Filter noise coming from battery pack. Place close to MOS drain. Connect to AGND
M _{REG}	3	V	V _{GS_TH} max	V _{DS} ≥ 80V	The STL8N10LF3 (single FET) is recommended for applications requiring optimized thermal performances The STL8DN10LF3 (dual FET) is recommended for applications requiring also a higher safety integrity level. Alternatively, the STD25NF10LA is also supported. For all components, follow MOSFET datasheet in order to optimize R _{th} value.
C _{REG}	4.7	μF	10%	16 V	Tank for the VREG regulator. Mount as close as possible to VREG pin. Connect to AGND

6.6 Cell balancing circuits

6.6.1 Cell balancing with internal MOSFETs

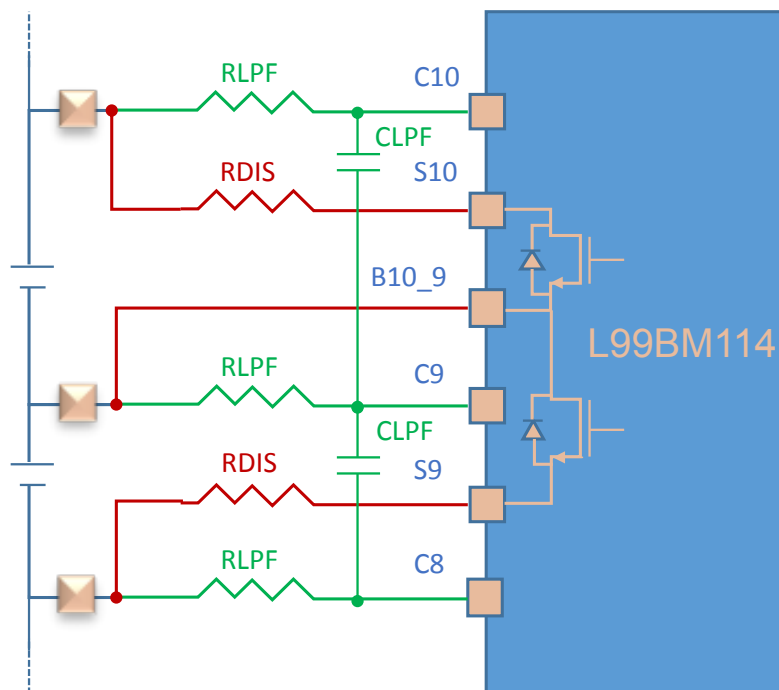Figure 37. Cell monitoring with internal balancing




- Force lines used for balancing. Connect them as close as possible to the cell connector. This improves cell voltage sensing while balancing is ongoing, by minimizing the voltage drop on the sense lines while current is being sunk
- Sense lines used for cell voltage measurement. Keep away from noisy lines. Recommended PCB layout strategy is to route them over the first layer and shield them using the second layer as GND plane

Table 77. Internal balancing components with recommended values

Components	Value	Unit	Max. tolerance	Rating	Comments
R_{DIS}	39	Ω	10%	3/4 W	Any value is possible, as long as the cell balance current does not exceed the required current limitation (200 mA). Maximum cell balance current in application is $I_{BALmax} = \frac{V_{CELLmax}}{R_{DIS}}$ Mounting less than 39 Ω may seriously jeopardize hotplug capability of the internal balancing FETs. Do not use thin film resistors on these lines connected to ECU global pins. They could drift upon System Level ESD strikes. Use thick film or metal foil instead.

6.6.2 Cell balancing with external MOSFETs

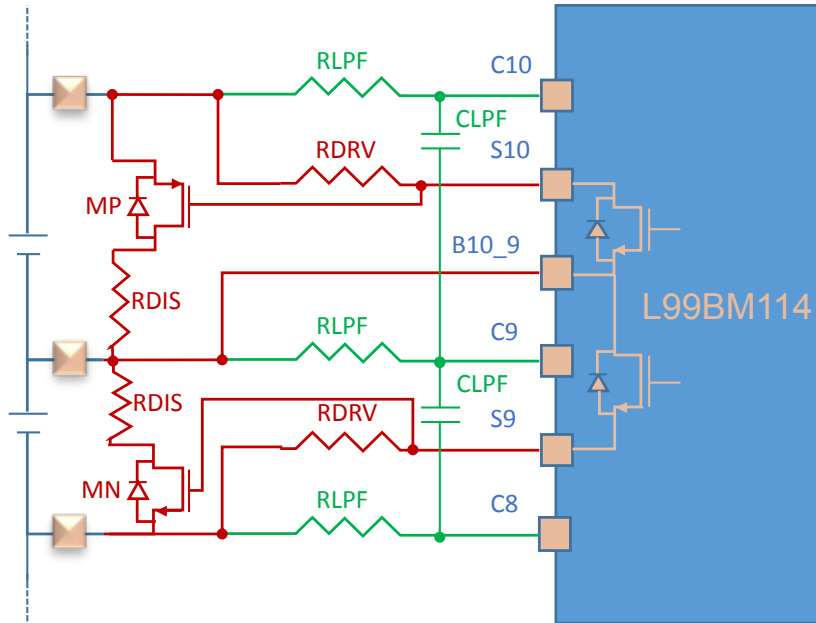Figure 38. Cell monitoring with external balancing with the mixed NMOS and PMOS transistors



- Force lines used for balancing. Connect them as close as possible to the cell connector. This improves cell voltage sensing while balancing is ongoing, by minimizing the voltage drop on the sense lines while current is being sunk
- Sense lines used for cell voltage measurement. Keep away from noisy lines. Recommended PCB layout strategy is to route them over the first layer and shield them using the second layer as GND plane


Table 78. External balancing components with recommended values

Components	Value	Unit	Max. tolerance	Rating	Comments
R_{DRV}	2	k Ω	10%	1/10 W	The drop on R_{DRV} generates the $V_{GS} = V_{CELL}$ to turn on the external balance FET. Max 3.3 k Ω . Values lower than the recommended one can be used when both internal and external paths have to be exploited for balancing. However, current in the internal balancing path must not exceed 200 mA. Maximum internal cell balance current in application is $I_{BALmax} = \frac{V_{CELLmax}}{R_{DRV}}$
R_{DIS}	10	Ω	10%	3 W	Any value is possible, as long as the cell balance current does not exceed the maximum drain current of the external FET. Maximum external cell balance current in application is $I_{BALmax} = \frac{V_{CELLmax}}{R_{DIS}}$
M_P	-	-	-	-	MOSFET should be chosen according to maximum current needed for the application
M_N	-	-	-	-	MOSFET should be chosen according to maximum current needed for the application

6.7 NTC analog front end

6.7.1 Single ended measurement

In the single ended approach the external NTC is connected between PCB global input and battery pack GND. This strategy requires only a single PCB global pin for each external NTC. However, even if L99BM114 AGND is connected to pack GND at PCB level, measurement precision could be affected by shifts between the two grounds, which can be seen as a VTREF variation. In order to increase measurement precision, connection of the NTC to AGND through an additional PCB connector or **Differential Measurement** can be exploited.

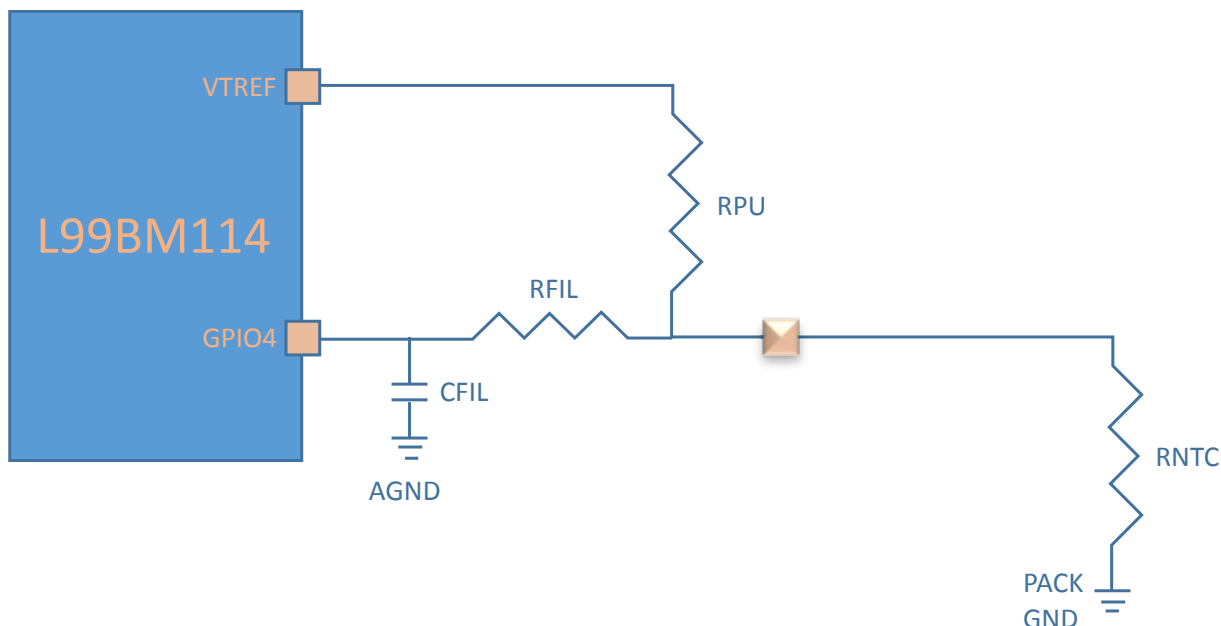Figure 39. Example of NTC single ended measurement

Table 79. NTC analog front end BOM for single ended measurement

Components	Value	Unit	Max. tolerance	Rating	Comments
R _{NTC}	10	kΩ	1%		Recommended external NTC typical value
R _{FIL}	3.9	kΩ	10%	1.5 W	Protect the GPIO in case of external STG/STB. Limit the ESD inrush current. Filter the NTC signal: cut-off frequency is $f_C = \frac{1}{2\pi R_{FIL} C_{FIL}}$. Do not use thin film resistors on these lines connected to ECU global pins. They could drift upon System Level ESD strikes. Use thick film or metal foil instead. 1.5 W rating is mandatory in case is needed to sustain permanent short to battery.
C _{FIL}	100	nF	10%	100 V	Protect against ESD events and ISO spikes. Filter the NTC signal: cut-off frequency is $f_C = \frac{1}{2\pi R_{FIL} C_{FIL}}$. Connect to AGND
R _{PU}	10	kΩ	1%	0.5 W	Provide VTREF/2 polarization for NTC typical value. Protect VTREF pin in case of external short to battery/GND. Do not use thin film resistors on these lines connected to ECU global pins. They could drift upon System Level ESD strikes. Use thick film or metal foil instead. 0.5 W rating is mandatory in case is needed to sustain permanent short to battery.

6.7.2 Differential measurement

In the single ended approach the external NTC is connected between two PCB global inputs. This eliminates the issue of GND shift but requires an additional global pin for each NTC. Using two GPIOs to measure the NTC voltage is not mandatory, but simplifies the calculations.

Figure 40. Example of NTC differential measurement

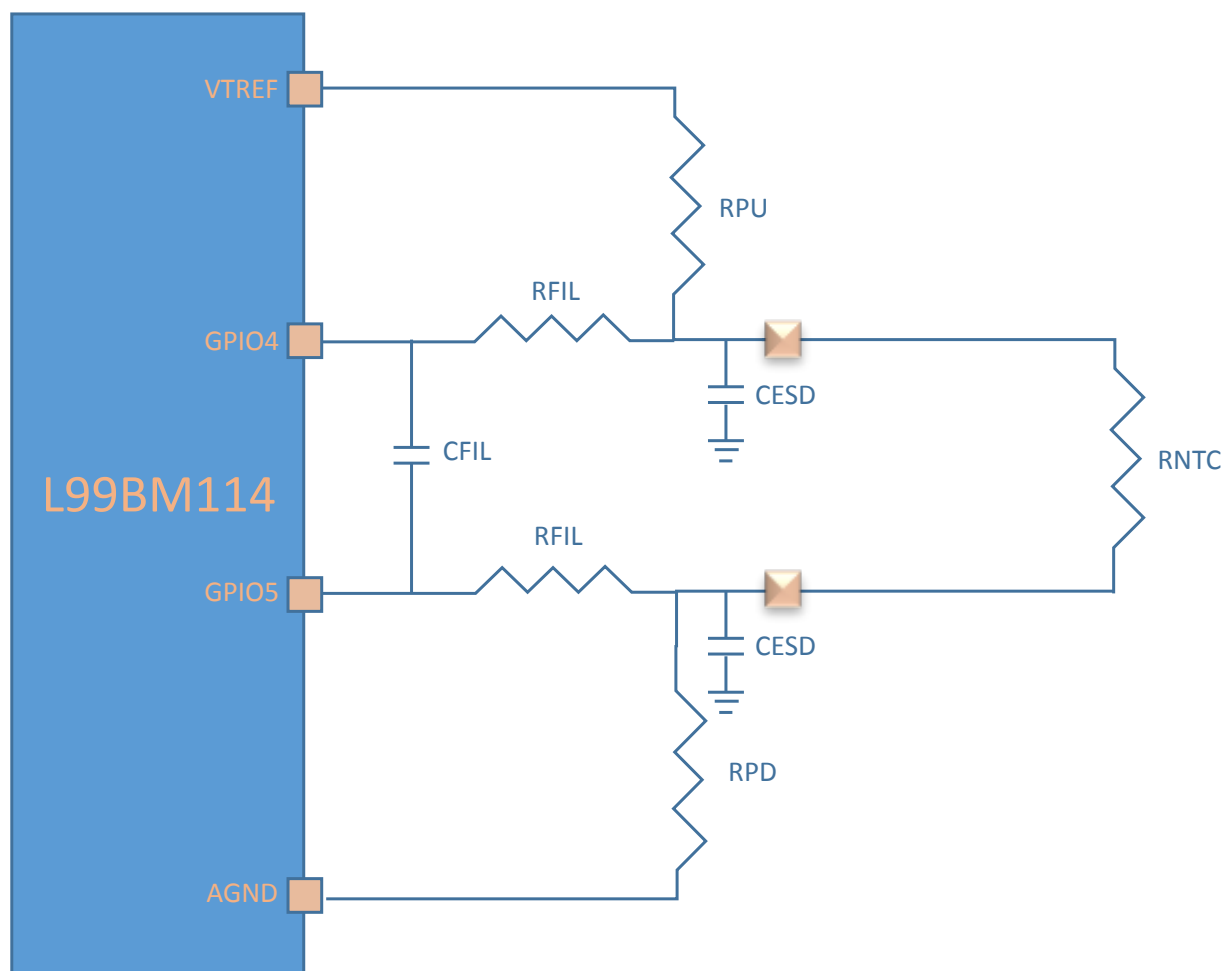


Table 80. NTC analog front end BOM for differential measurement

Components	Value	Unit	Max. tolerance	Rating	Comments
R_{NTC}	10	k Ω	1%	-	Recommended external NTC typical value @25 °C. The NTCALUG02A103F is a good option for evaluation purposes
R_{FIL}	3.3	k Ω	10%	1.5 W	Protect the GPIO in case of external STG/STB. Limit the ESD inrush current. Filter the NTC signal: cut-off frequency is $f_C = \frac{1}{4\pi R_{FIL} C_{FIL}}$. Do not use thin film resistors on these lines connected to ECU global pins. They could drift upon System Level ESD strikes. Use thick film or metal foil instead. 1.5 W rating is mandatory in case is needed to sustain permanent short to battery.
C_{FIL}	100	nF	10%	16 V	Protect against ESD events and ISO spikes. Filter the NTC signal: cut-off frequency is $f_C = \frac{1}{2\pi R_{FIL} C_{FIL}}$. Connect to AGND.

Components	Value	Unit	Max. tolerance	Rating	Comments
C _{ESD}	47	nF	10%	100 V	Protect against ESD events and ISO spikes. Connect to GND_ESD
R _{PU}	10	kΩ	1%	0.5 W	Provide VTREF/3 polarization for NTC typical value. Protect VTREF pin in case of external short to battery/GND. Do not use thin film resistors on these lines connected to ECU global pins. They could drift upon System Level ESD strikes. Use thick film or metal foil instead. 0.5 W rating is mandatory in case is needed to sustain permanent short to battery.
R _{PD}	10	kΩ	1%	0.5 W	Provide VTREF/3 polarization for NTC typical value. Protect AGND pin in case of external short to battery Do not use thin film resistors on these lines connected to ECU global pins. They could drift upon System Level ESD strikes. Use thick film or metal foil instead. Connect to AGND. 0.5 W rating is mandatory in case is needed to sustain permanent short to battery.

6.8 Unused pins

The following paragraph contains instructions about how to connect unused pins. If these indications are not met, L99BM114 will not operate properly.

6.8.1 Cell pins

6.8.1.1 Cell minimum configuration

The minimum configuration that allows L99BM114 correct functionality is the following:

- At least the following four cells must be mounted:
 - CELL1
 - CELL2
 - CELL13
 - CELL14
- The **VCELLX_EN** bit must be set to '1' only for these four cells, in order to allow correct conversion and diagnostics.
- Nominal stack voltage must be always higher than V_{BAT_UV_WARNING}.

6.8.1.2 Cell maximum configuration

The maximum configuration that L99BM114 can handle is:

- All the fourteen cells mounted
- The **VCELLX_EN** bit must be set to '1' for all the cells
- Nominal stack voltage must be always lower than the VBAT operating range specified in the [Table 2](#).

Refer to the [Figure 32](#) as an example.

6.8.1.3 Unmounted cells


If less than 14 cells are mounted, the following indications must be followed in order to ensure proper measurement and diagnostic operation:

If **N** cells are not mounted:

- Unmount **N/2** adjacent couples as shown in Figure 41:
 - In case analog front end components are left mounted
 - Simply short unused cells PCB connectors
 - In case analog front end components are removed from BOM
 - Unused pins must be first shorted together to eliminate differential noise
 - Shorted traces must be connected to the PCB connector of the lower mounted cell, through a 1 k Ω resistor
- If a remaining spare cell has to be left unmounted, then it must be an odd cell, as shown in Figure 41:
 - In order to guarantee the correct biasing of the internal sensing & balancing circuitry, the recommended components must be mounted and connection to the busbar has to be done

Cells not mounted must have their corresponding **VCELLx_EN** bit set to '0' in order to disable the related diagnostics, otherwise wrong failures could be latched (such as cell UV).

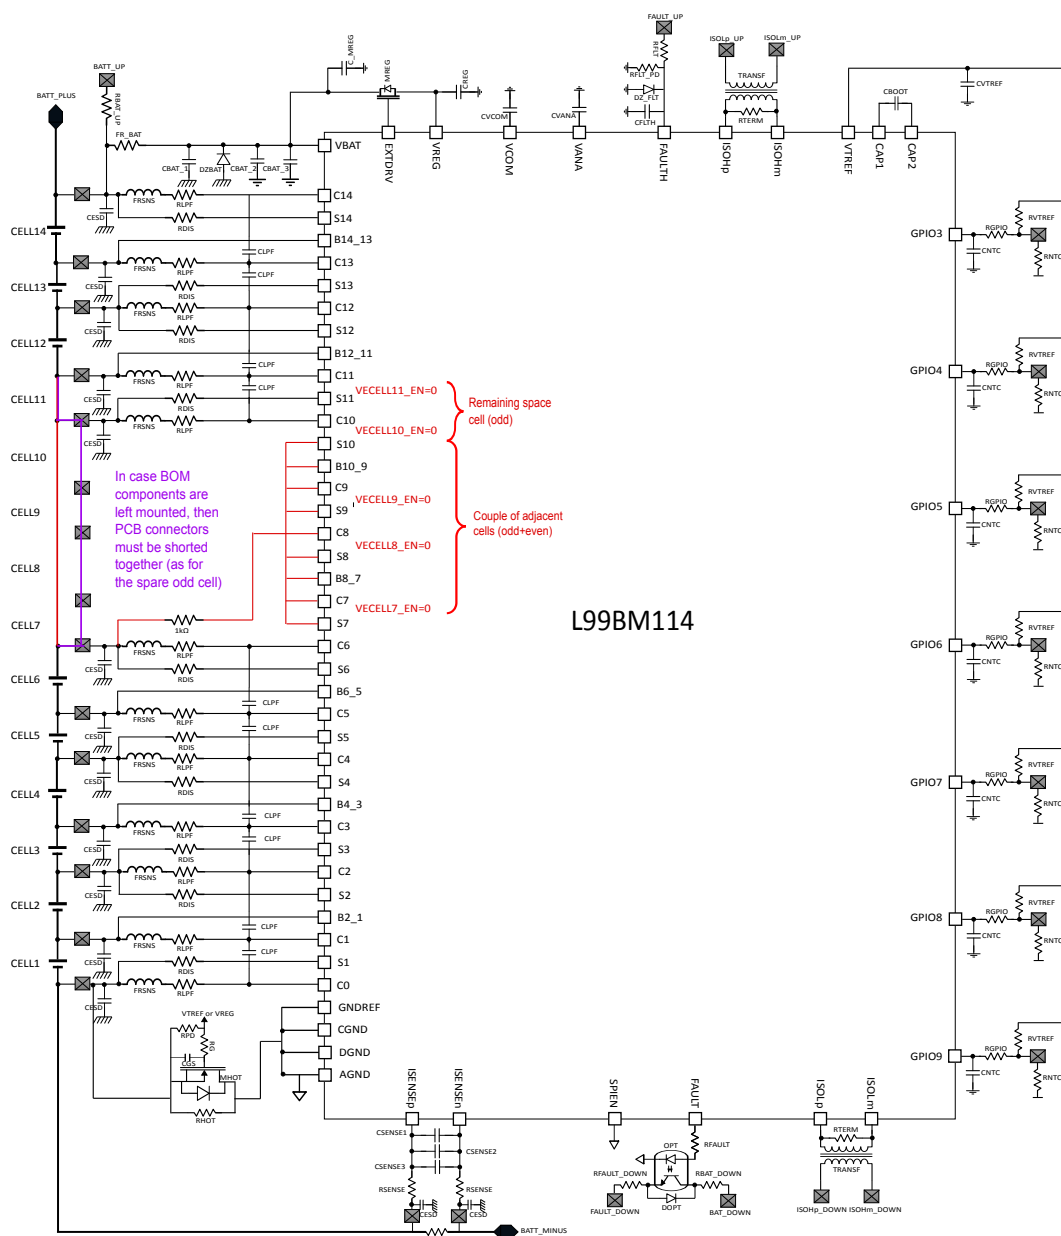Figure 41. How to handle unmounted cells



L99BM114

6.8.2 Unused GPIOs

The unused GPIOs must be connected in a proper way in order to avoid unwanted leakage.

6.8.2.1 GPIO3-9

When one pin among GPIO3 to GPIO9 is not used in application:

- It must be shorted to GND plane (AGND is recommended)
- It must be configured as Digital Input by user SW, in order to avoid being converted during **Voltage Conversion Routine**

6.8.2.2 FAULT line (GPIO1-2)

When **FAULT Line** is not used in application:

- GPIO1_FAULTH pin must be shorted (or pulled-down with a resistor) to GND plane (AGND is recommended)
- GPIO2_FAULTL pin must be connected to GND plane (DGND is recommended) through a 100 kΩ pulldown resistor

6.8.3 Current sense

When current sense is not used in application:

- Pin ISENSEp must be shorted to pin ISENSEm in order to reject differential noise
- The shorted trace must be connected to GND plane (AGND is recommended) in order to reject common mode noise

6.8.4 ISOH port

When the ISOH port is not used in application:

- Pin ISOHp and ISOHm must be shorted together in order to reject differential noise. They are internally pulled down to reject common mode noise.

6.8.5 Busbar connection

Figure 42 shows an example of application featuring small cell modules connected through a busbar. Since the busbar exhibits a small parasitic resistance R_{BUS} , a negative voltage drop equal to $R_{BUS} \cdot I_{CELL}$ appears at those cell terminals during the battery discharge phase.

Generally, such a drop never exceeds -2 V. L99BM114 has been engineered to sustain this kind of application without damaging the internal ESD clamps. In fact, all cell terminals (except the C0-C1 pair), can sustain negative differential voltages without undergoing any damage, as listed in the Table 3. Busbar connection can be applied between any cell terminal pair, except the ones reserved for the four mandatory cells (refer to the Section 6.8.1.1: Cell minimum configuration).

The internal balancing FET in parallel to the busbar can be protected mounting the same R_{DIS} discharge resistor recommended in the Table 77. When negative voltage arises, a small current will flow through the body-drain diode. Such a current, equal to $(V_{BUS} - V_{BODY_DRAIN}) / R_{DIS}$ will not damage the balancing FET. For instance, considering $V_{BUS} = -2$ V, $V_{BODY_DRAIN} = 1$ V and $R_{DIS} = 39$ Ω, the current will be limited to 25 mA.

Moreover, since this reverse current flows only through the balancing path, it will not alter neighboring cells measurement, since no drop occurs on the R_{LPF} filtering resistors, as shown in Figure 42.

Figure 42. How to connect cell modules and busbar



7 Recommended soldering profile


The soldering profile in Figure 43 is compliant to JEDEC J-STD-020 standard. It is recommended to follow these indications in order to achieve the best performances in terms of accuracy and reliability.

Table 81. Reflow soldering profile according to JEDEC J-STD-020

Item	Description
Reflow category	
Reflow Condition	Sn-Pb eutectic assembly
Package Type	Thickness < 2.5 mm and volume < 350 mm ³
Preheat	
Minimum temperature	T _{min} = 100 °C
Maximum temperature	T _{max} = 150 °C
Duration	t _s = 60-120 s
Liquidus phase	
Liquidus Temperature	T _L = 183 °C
Average ramp-up rate (from T _L to T _p)	3°C/s max
Peak Temperature	T _p = 240 °C
Peak Duration	t _p = 10-30 s
Ramp-down	
Ramp-down rate (from T _p to T _L)	6°C/s max.
Ramp-down duration (T _p to 25 °C)	6 min. max.

Note: all temperatures are referred to the package top case.

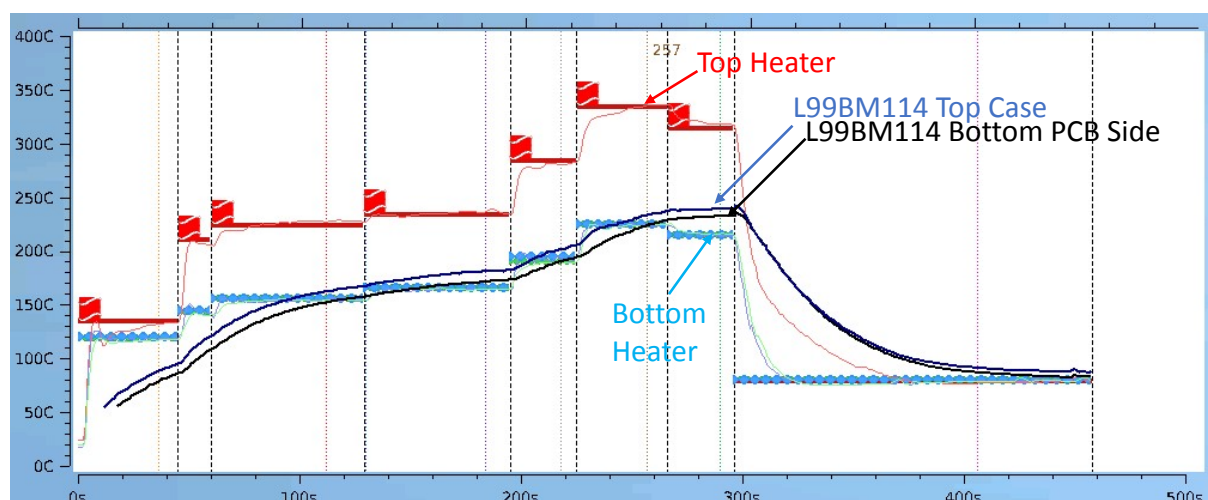Figure 43. Recommended soldering profile



8 Package information

In order to meet environmental requirements, ST offers these devices in different grades of **ECOPACK** packages, depending on their level of environmental compliance. ECOPACK specifications, grade definitions and product status are available at: www.st.com. ECOPACK is an ST trademark.

8.1 TQFP 10x10 64L exposed pad down package information

Figure 44. TQFP 10x10 64L exposed pad down package outline

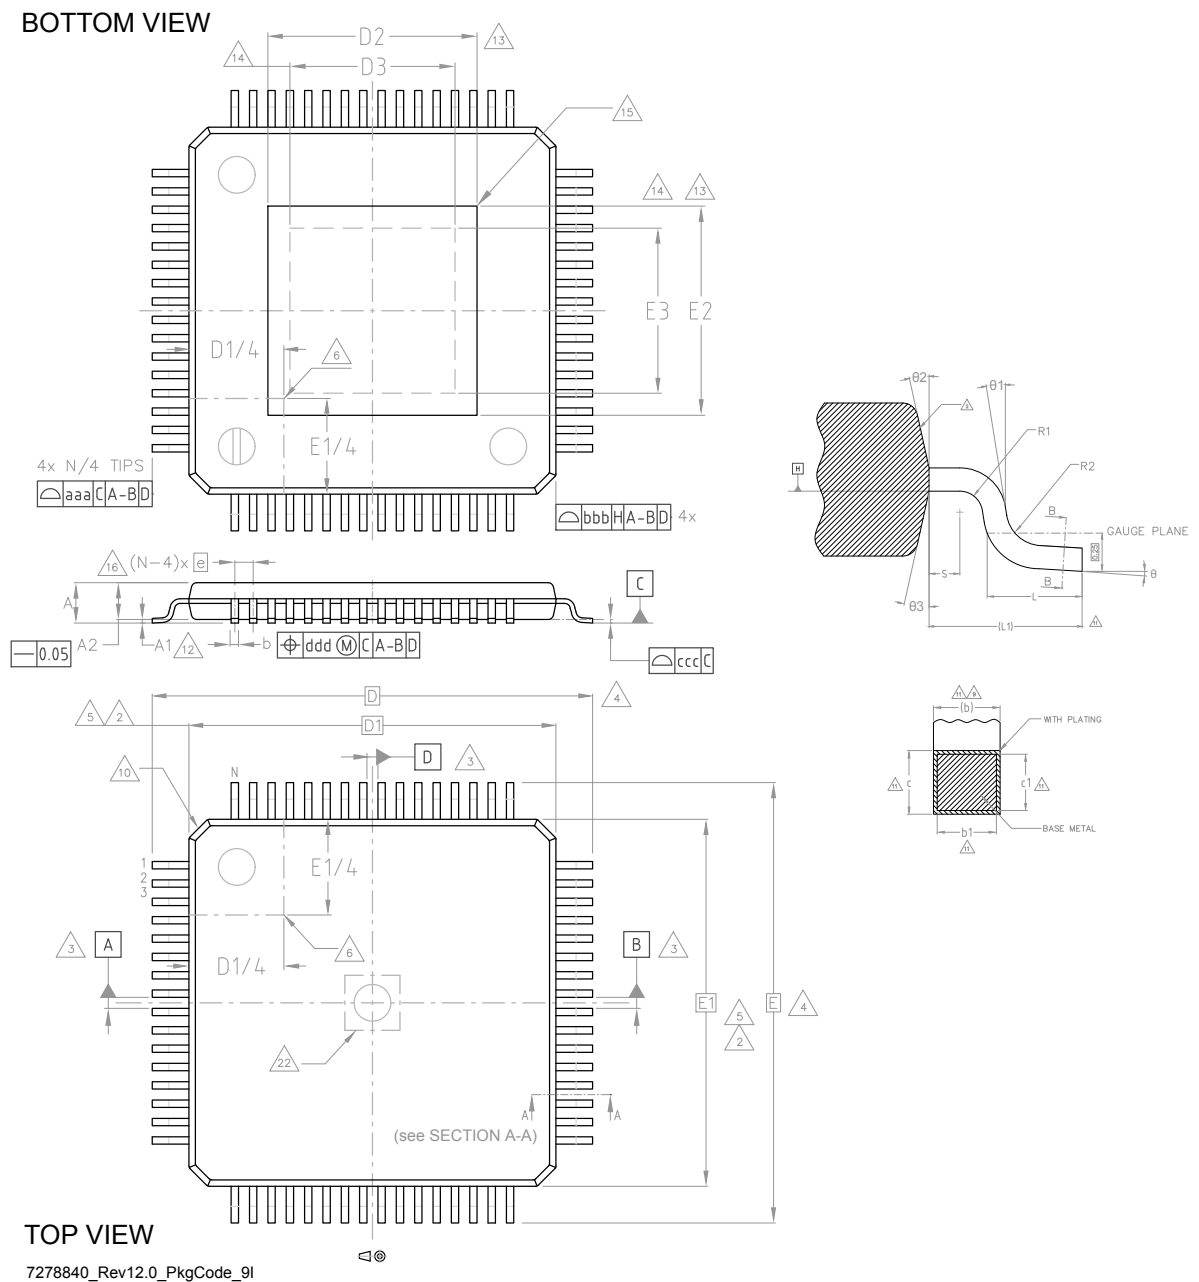



Table 82. TQFP 10x10 64L exposed pad down package mechanical data

Ref	Min.	Typ.	Max.	Note (see # in Notes below)
Θ	0°	3.5°	7°	-
Θ1	0°	-	-	-
Θ2	11°	12°	13°	-
Θ3	11°	12°	13°	-
A	-	-	1.2	15
A1	0.05	-	0.15	12
A2	0.95	1	1.05	15
b	0.17	0.22	0.27	9, 11
b1	0.17	0.2	0.23	11
c	0.09	-	0.2	11
c1	0.09	-	0.16	11
D	-	12.00 BSC	-	4
D1	-	10.00 BSC	-	2, 5
D2	See VARIATIONS			13
D3	See VARIATIONS			14
e	-	0.50 BSC	-	-
E	-	12.00 BSC	-	4
E1	-	10.00 BSC	-	2, 5
E2	See VARIATIONS			13
E3	See VARIATIONS			14
L	0.45	0.6	0.75	-
L1	-	1.00 REF	-	-
N	-	64	-	16
R1	0.08	-	-	-
R2	0.08	-	0.2	-
S	0.2	-	-	-
Tolerance of form and position				
aaa	-	0.20	-	1, 7, 19
bbb	-	0.20	-	
ccc	-	0.08	-	
ddd	-	0.08	-	
VARIATIONS				
Pad option 6.0 x 6.0 (T3)				
D2	-	-	6.40	13, 14
E2	-	-	6.40	
D3	4.80	-	-	
E3	4.80	-	-Notes	

Notes

1. Dimensioning and tolerancing schemes conform to ASME Y14.5M-1994.

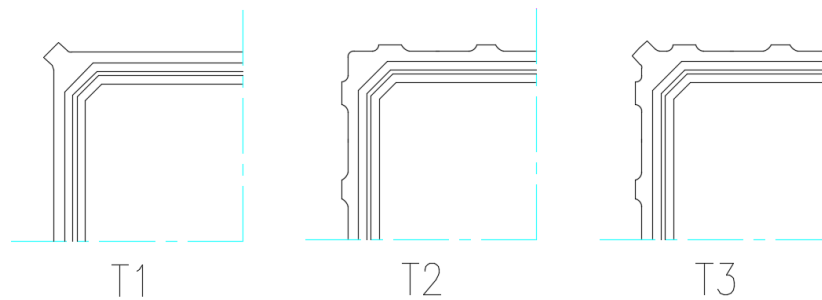2. The Top package body size may be smaller than the bottom package size up to 0.15 mm.
3. Datum A-B and D to be determined at datum plane H.
4. To be determined at seating datum plane C.
5. Dimensions D1 and E1 do not include mold flash or protrusions. Allowable mold flash or protrusions is "0.25 mm" per side. D1 and E1 are Maximum plastic body size dimensions including mold mismatch.
6. Details of pin 1 identifier are optional but must be located within the zone indicated.
7. All Dimensions are in millimeters.
8. No intrusion allowed inwards the leads.
9. Dimension "b" does not include dambar protrusion. Allowable dambar protrusion shall not cause the lead width to exceed the maximum "b" dimension by more than 0.08 mm. Dambar cannot be located on the lower radius or the foot. Minimum space between protrusion and an adjacent lead is 0.07 mm for 0.4 mm and 0.5 mm pitch packages.
10. Exact shape of each corner is optional.
11. These dimensions apply to the flat section of the lead between 0.10 mm and 0.25 mm from the lead tip.
12. A1 is defined as the distance from the seating plane to the lowest point on the package body.
13. Dimensions D2 and E2 show the maximum exposed metal area on the package surface where the exposed pad is located (if present). It includes all metal protrusions from exposed pad itself. Type of exposed pad is variable depending on leadframe pad design (T1, T2, T3), as shown in the figure below. End user should verify D2 and E2 dimensions according to specific device application.



NOTE: number, dimensions and position of shown grooves are for reference only.

14. Dimensions D3 and E3 show the minimum solderable area, defined as the portion of exposed pad which is guaranteed to be free from resin flashes/bleeds, bordered by internal edge of inner groove.
15. The optional exposed pad is generally coincident with the top or bottom side of the package and not allowed to protrude beyond that surface.
16. "N" is the number of terminal positions for the specified body size.
17. For Tolerance of Form and Position see [Table 82](#).
18. Critical dimensions:
 - a. Stand-off
 - b. Overall width
 - c. Lead coplanarity


19. For Symbols, Recommended Values and Tolerances see Table below:

Symbol	Definition	Notes
aaa	The tolerance that controls the position of the terminal pattern with respect to Datum A and B. The center of the tolerance zone for each terminal is defined by basic dimension "e" as related to Datum A and B.	For flange-molded packages, this tolerance also applies for basic dimensions D1 and E1. For packages tooled with intentional terminal tip protrusions, aaa does not apply to those protrusions.
bbb	The bilateral profile tolerance that controls the position of the plastic body sides. The centers of the profile zones are defined by the basic dimensions D and E.	
ccc	The unilateral tolerance located above the seating plane where in the bottom surface of all terminals must be located.	This tolerance is commonly know as the "coplanarity" of the package terminals.
ddd	The tolerance that controls the position of the terminals to each other. The centers of the profile zones are defined by basic dimension "e".	This tolerance is normally compounded with tolerance zone defined by "b".

20. Notch may be present in this area (MAX 1.5 mm square) if center top gate molding technology is applied.
Resin gate residual not protruding out of package top surface.

Figure 45. Recommended footprint

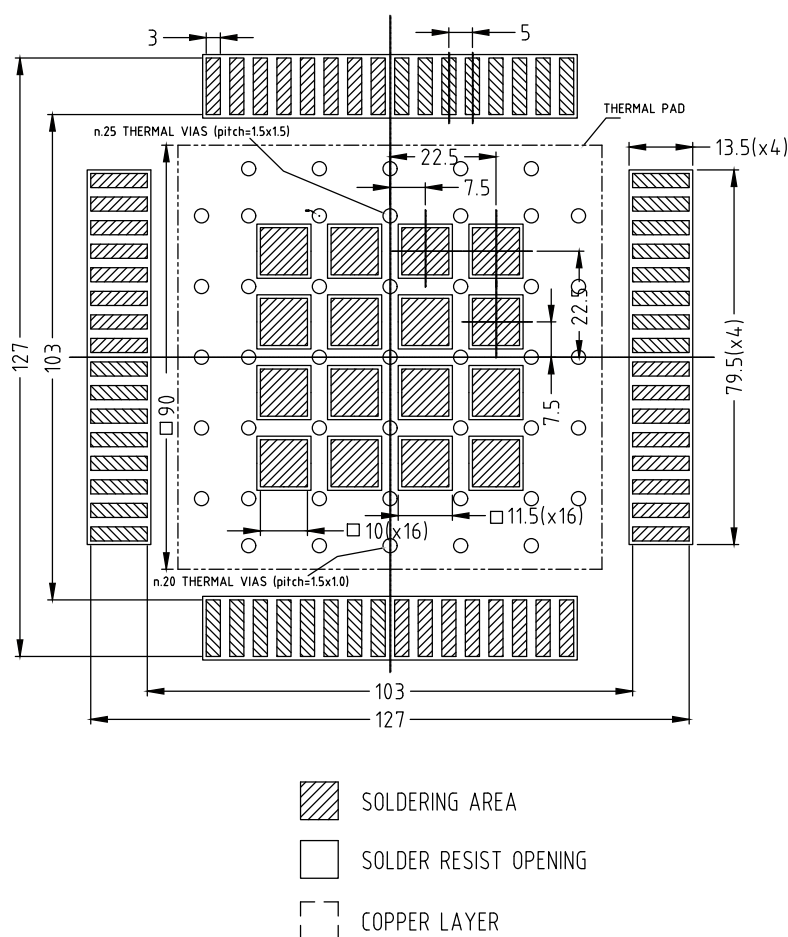TQFP10X10(64)-6.0x6.0-EP PCB LANDPATTERN



NOTE:

This is a draft proposal only and it might be not in line with customer or pcb supplier design rules.

Note: Dimensions in the footprint of [Figure 45](#) are mm.

Parts marked as ES are not yet qualified and therefore not approved for use in production. ST is not responsible for any consequences resulting from such use. In no event will ST be liable for the customer using any of these engineering samples in production. ST's Quality department must be contacted to run a qualification activity prior to any decision to use these engineering samples.

Revision history

Table 83. Document revision history

Date	Version	Changes
01-Jul-2024	1	Initial release.

Contents

1	Device introduction	2
2	Block diagram and pin description	4
2.1	Block diagram	4
2.2	Pin description	5
3	Product electrical ratings	8
3.1	Operating range	8
3.1.1	Supply voltage ranges	9
3.2	Absolute maximum ratings	9
3.3	Temperature ranges and thermal data	10
3.4	Power management	11
4	Functional description	13
4.1	Device functional state	13
4.1.1	Reset and Sleep states	13
4.1.2	Init state	14
4.1.3	Normal state	15
4.1.4	Power up sequence	16
4.1.5	Silent Balancing state	17
4.1.6	Cyclic wake up state	17
4.1.7	Sleep parameters	18
4.2	Serial communication interface	19
4.2.1	Communication interface selection	19
4.2.2	Serial Peripheral Interface (SPI)	20
4.2.3	Isolated Serial Peripheral Interface	21
4.2.4	SPI protocol details	26
4.3	FAULT line	35
4.3.1	State transitions in case of failure detection	36
4.3.2	FAULT line configuration	36
4.3.3	Failure sources	36
4.3.4	Electrical parameters	38
4.4	Cell voltage measurement	39
4.4.1	Electrical parameters	40
4.5	VBAT voltage measurement	42
4.5.1	Total battery voltage measurement	42
4.5.2	Electrical parameters	42
4.6	Cell current measurement	43

4.6.1	Cell current ADC	44
4.6.2	Electrical parameters	44
4.7	Cell balancing	45
4.7.1	Passive cell balancing with internal MOSFETs	45
4.7.2	Passive cell balancing with external MOSFETs	46
4.7.3	Balancing modes	47
4.7.4	Balancing state transition	51
4.7.5	Electrical parameters	51
4.8	Device regulators	52
4.8.1	Linear regulators	53
4.8.2	Bootstrap	54
4.8.3	Electrical parameters	55
4.9	General purpose I/O: GPIOs	57
4.9.1	GPIO3-9: absolute analog inputs	57
4.9.2	GPIO1-9: standard digital I/O	58
4.9.3	GPIO8-9: SPI commands	58
4.9.4	GPIO7: wake up feature	58
4.9.5	GPIO1-2: FAULT feature	58
4.9.6	Electrical parameters	59
4.10	Internal Non Volatile Memory (NVM)	62
4.10.1	NVM read	62
4.10.2	NVM erase	63
4.10.3	NVM write	63
4.10.4	Electrical parameters	63
4.11	Diagnostic features	63
4.11.1	Cell UV/OV diagnostic	64
4.11.2	Total battery VBAT diagnostic	64
4.11.3	Cell open wire diagnostic	65
4.11.4	ADC swap	66
4.11.5	PCB open diagnostic	66
4.11.6	Voltage ADC BIST	67
4.11.7	Die temperature diagnostic and over temperature	67
4.11.8	Balancing open load diagnostic	67
4.11.9	Balancing short load diagnostic	68
4.11.10	Balancing secondary timing	69
4.11.11	Oscillator main clock monitoring	69
4.11.12	Stand-by oscillator main clock monitoring	69
4.11.13	Regulator UV/OV diagnostic	69

4.11.14	Regulator self test	70
4.11.15	Regulator current limitation	70
4.11.16	GPIO short FAULT	70
4.11.17	GPIO open fault (GPIO3-9)	70
4.11.18	GPIO OT/UT (UV/OV) and fast charge OT diagnostic (GPIO3-9)	71
4.11.19	Current sense overcurrent.	72
4.11.20	Current sense open diagnostic	72
4.11.21	Reference voltage monitor	72
4.11.22	Communication integrity	72
4.11.23	Communication loss detection	73
4.11.24	Rolling counter	73
4.11.25	Trimming and calibration data integrity check	73
4.11.26	FAULT heart beat	73
4.11.27	GND loss detection	73
4.11.28	Diagnostics summary	74
4.12	Voltage conversion routine	81
4.12.1	Routine structure	82
4.12.2	Routine execution modes	84
4.12.3	Routine steps	91
4.12.4	Operations periodicity	97
4.12.5	Transition between cyclic wake up and normal states	98
4.13	Coulomb counting routine	99
4.13.1	Coulomb counting	99
5	Register map	100
6	Application information	127
6.1	Layout recommendations	127
6.1.1	PCB stackup	127
6.1.2	Ground connections	127
6.1.3	Cell balancing (Force) and cell sensing (Sense) lines	130
6.1.4	Regulator capacitors	130
6.1.5	ESD clamps for communication interfaces	130
6.2	Typical application circuit and bill of material	132
6.3	Cell voltage sensing circuit.	134
6.4	Current sense circuit	135
6.5	VREG regulator circuit	136
6.6	Cell balancing circuits	137
6.6.1	Cell balancing with internal MOSFETs	137

6.6.2	Cell balancing with external MOSFETs	138
6.7	NTC analog front end	138
6.7.1	Single ended measurement	138
6.7.2	Differential measurement	140
6.8	Unused pins	141
6.8.1	Cell pins	141
6.8.2	Unused GPIOs	143
6.8.3	Current sense	143
6.8.4	ISOH port	143
6.8.5	Busbar connection	143
7	Recommended soldering profile	145
8	Package information.....	146
8.1	TQFP 10x10 64L exposed pad down package information	146
	Revision history	151

List of tables

Table 1.	Pin function	5
Table 2.	Operating ranges	8
Table 3.	Absolute Maximum Rating	9
Table 4.	ESD protection	10
Table 5.	Temperature ranges and thermal data	10
Table 6.	Power Management	11
Table 7.	Operations in Sleep state	14
Table 8.	Operations in Init state	15
Table 9.	Operations in Silent Balancing state	17
Table 10.	Operations in Cyclic Wakeup state	17
Table 11.	Sleep parameters	18
Table 12.	Port L configuration determination	19
Table 13.	L99BM114 pin used as SPI	20
Table 14.	SPI interface quick look	21
Table 15.	Isolated SPI pinout	21
Table 16.	Isolated SPI quick look	22
Table 17.	Isolated receiver electrical parameters	24
Table 18.	Isolated transmitter electrical parameters	24
Table 19.	SPI protocol: single access addressed frame (write and read)	26
Table 20.	Single access frames field description	27
Table 21.	SPI protocol: answer to a burst read request	28
Table 22.	Burst access special frame fields	29
Table 23.	Available burst commands	30
Table 24.	0x78 burst command	30
Table 25.	0x7A burst command	31
Table 26.	0x7B burst command	33
Table 27.	SPI protocol: broadcast access frame	34
Table 28.	SPI protocol: broadcast read answer frame	34
Table 29.	Broadcast access frame field description:	34
Table 30.	SPI protocol special frames	35
Table 31.	GSW code description	35
Table 32.	CRC calculation information	35
Table 33.	FAULT line functionality and L99BM114 states	36
Table 34.	FAULTH line configuration and FAULTL pin states	36
Table 35.	FAULTH filtering strategies	37
Table 36.	Summary of L99BM114 FAULT line configurations	37
Table 37.	Heart beat electrical parameters	38
Table 38.	Selection of the ADC filter values	39
Table 39.	Cell voltage ADC electrical characteristics	40
Table 40.	Stack voltage measurement electrical parameters	42
Table 41.	Current measurement electrical parameters	44
Table 42.	Balancing FSM	47
Table 43.	Balancing threshold configuration	48
Table 44.	Balancing electrical characteristics	51
Table 45.	Regulators electrical characteristics	55
Table 46.	GPIO port configuration	57
Table 47.	GPIO default configuration	57
Table 48.	GPIO electrical parameters for analog input configuration	59
Table 49.	Electrical parameters for GPIOs as digital inputs	61
Table 50.	GPIO digital output electrical characteristics	61
Table 51.	SPI electrical characteristics	62
Table 52.	NVM electrical parameters	63
Table 53.	Main oscillator electrical parameters	69

Table 54.	Diagnostics summary	74
Table 55.	VTREF operating modes.	83
Table 56.	Voltage conversion routine status.	84
Table 57.	Summary of the NCYCLE and TCYCLE events	87
Table 58.	Focus on routine enable/disable and continuous mode activation/deactivation	88
Table 59.	Sampling intervals for the configuration parameters related to cyclic functionality	89
Table 60.	Failure validation table	90
Table 61.	Operations performed during cell conversion step	91
Table 62.	Operations performed during GPIO conversion step	92
Table 63.	Operations performed during GPIO terminal diagnostics step	93
Table 64.	Operations performed during cell terminal diagnostics step	94
Table 65.	Operations performed during balance terminal diagnostics step	94
Table 66.	Operations performed during HWSC step	95
Table 67.	Summary of the voltage conversion routine steps.	96
Table 68.	TCYCLE and NCYCLE_X options	97
Table 69.	Steps periodicity options	97
Table 70.	NCYCLE counter and optional step periodicity	98
Table 71.	Register map legend	100
Table 72.	SPI register map	100
Table 73.	Recommended components for typical application scenario	132
Table 74.	Typical BOM for cell voltage sensing circuit	134
Table 75.	Current sense BOM	135
Table 76.	VREG regulator BOM	136
Table 77.	Internal balancing components with recommended values	137
Table 78.	External balancing components with recommended values	138
Table 79.	NTC analog front end BOM for single ended measurement	139
Table 80.	NTC analog front end BOM for differential measurement.	140
Table 81.	Reflow soldering profile according to JEDEC J-STD-020.	145
Table 82.	TQFP 10x10 64L exposed pad down package mechanical data	147
Table 83.	Document revision history	151

List of figures

Figure 1.	Typical application.	3
Figure 2.	Block diagram	4
Figure 3.	Pin connections (top view)	5
Figure 4.	Device operation in the VBAT supply voltage ranges	9
Figure 5.	Sketch of a 2s2p PCB with thermal vias	11
Figure 6.	Device functional states	13
Figure 7.	Daisy chain addressing algorithm	15
Figure 8.	Power up Sequence	16
Figure 9.	Isolated SPI interface	22
Figure 10.	Isolated SPI pulse shape and logical meaning	23
Figure 11.	Out of frame protocol description	26
Figure 12.	Write and read access	26
Figure 13.	Single read access	27
Figure 14.	Burst access	28
Figure 15.	False failure detection due to sudden heartbeat disable during the duty phase	38
Figure 16.	Cell monitoring with Internal balancing	46
Figure 17.	Cell monitoring with external balancing with the mixed NMOS and PMOS transistors.	46
Figure 18.	Regular scheme	54
Figure 19.	SPI timing diagram	61
Figure 20.	Equivalent open resistance vs.cell voltage	68
Figure 21.	GPIO open resistance vs. temperature	71
Figure 22.	Voltage conversion routine	82
Figure 23.	Routine execution modes: on-demand and cyclic executions	84
Figure 24.	Equivalent FSM behavior of the voltage conversion routine	86
Figure 25.	Example of routine execution in normal mode.	88
Figure 26.	Example of configuration override: a failure detected during Cell Terminal diagnostics (yellow background) causes the following two steps (red background) to be executed	91
Figure 27.	Grounds collection node	128
Figure 28.	Layout example of ground connections	129
Figure 29.	Example of best practice for splitting cell force and sense lines	130
Figure 30.	Recommended routing technique in order to reduce additional spikes due to lanes parasitic inductance	131
Figure 31.	Layout for ESD protections according to the recommended technique	131
Figure 32.	Typical application circuit	132
Figure 33.	Typical cell voltage sensing circuit.	134
Figure 34.	Application suggestion for open bus bar conditions	135
Figure 35.	Typical current sensing analog front end	135
Figure 36.	VREG regulator circuits	136
Figure 37.	Cell monitoring with internal balancing	137
Figure 38.	Cell monitoring with external balancing with the mixed NMOS and PMOS transistors.	138
Figure 39.	Example of NTC single ended measurement	139
Figure 40.	Example of NTC differential measurement	140
Figure 41.	How to handle unmounted cells	142
Figure 42.	How to connect cell modules and busbar	144
Figure 43.	Recommended soldering profile	145
Figure 44.	TQFP 10x10 64L exposed pad down package outline	146
Figure 45.	Recommended footprint.	150

IMPORTANT NOTICE – READ CAREFULLY

STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, enhancements, modifications, and improvements to ST products and/or to this document at any time without notice. Purchasers should obtain the latest relevant information on ST products before placing orders. ST products are sold pursuant to ST's terms and conditions of sale in place at the time of order acknowledgment.

Purchasers are solely responsible for the choice, selection, and use of ST products and ST assumes no liability for application assistance or the design of purchasers' products.

No license, express or implied, to any intellectual property right is granted by ST herein.

Resale of ST products with provisions different from the information set forth herein shall void any warranty granted by ST for such product.

ST and the ST logo are trademarks of ST. For additional information about ST trademarks, refer to www.st.com/trademarks. All other product or service names are the property of their respective owners.

Information in this document supersedes and replaces information previously supplied in any prior versions of this document.

© 2024 STMicroelectronics – All rights reserved

Looking for pricing, stock, or lifecycle information?

Click below to explore more details on WIN SOURCE:

 View [L99BM114-TR](#) on WIN SOURCE

 [STMicroelectronics](#) Information

Optimize Your Supply Chain with WIN SOURCE Solutions

-  Global Sourcing Solution
-  Obsolete Management
-  Cost Control Management
-  Shortage Management
-  Alternative Solution
-  Excess Inventory Management